

TROUBLESHOOTING

NO.	ERROR CODE	EXPLANATION	REASON/SOLUTION
1	100	Excessive pressure difference	/
2	110	Charging overvoltage protection	Disconnect the charger
3	140	Discharge undervoltage protection	Connect the charger
4	150	Discharge over temperature protection	Wait for the device to cool down
5	160	Discharge under temperature protection	Put the product at the right temperature
6	170	Temperature error	Restart the device
7	200	Communication abnormal	Restart the device
8	201	Charging communication anomaly	Restart the device
9	310	Air inflator short-circuit protection	Restart the device
10	320	Air inflator over-current protection	Restart the device
11	330	When starting, the current air Pressure is greater than the set air pressure	Reset the proper air pressure
12	410	When starting, under-voltage protection	Connect the charger
13	411	Before starting, under-voltage protection	Connect the charger
14	420	Start over temperature protection	Wait for the product to cool down
15	430	The external battery voltage is greater than the device voltage	<p>1. The display voltage is lower than 12V, and the device voltage is low. Please connect the charger to recharge.</p> <p>2. If the display voltage is higher than 12V, the car battery is normal; or the car battery voltage is too high, which is not suitable for this product, please use an jump starter that supports higher voltage</p>
16	440	Jump starter clip shorted	Connect the battery correctly
17	450 blinking	Auto-start failure	After confirming the correct connection, please refer to the instruction manual and use manual start
18	450 always on	Jump starter clip shorted	Connect the battery correctly
19	470	Abnormal cell voltage drift protection	/
20	480	Continuous start protection	Wait 30 seconds and start again