

Error code display description

| NO. | ERROR CODE | EXPLANATION | REASON/SOLUTION |
|-----|------------|--|--|
| 1 | 100 | Pressure difference is too large | / |
| 2 | 110 | Charging overvoltage protection | Disconnect the charger |
| 3 | 140 | Discharge undervoltage protection | Connect the charger |
| 4 | 150 | Discharge over temperature protection | Wait for the product to cool down |
| 5 | 160 | Discharge under temperature protection | Put the product at the right temperature |
| 6 | 170 | temperature error | restart device |
| 7 | 200 | Communication abnormal | Restart the device |
| 8 | 201 | Abnormal charging communication | restart device |
| 9 | 310 | Air inflator short-circuit protection | Restart the device |
| 10 | 320 | Air inflator over-current protection | Restart the device |
| 11 | 330 | When starting, the current air Pressure is greater than the set air pressure | Reset the proper air pressure |
| 12 | 410 | When starting, under-voltage protection | Connect the charger |
| 13 | 411 | Before starting, under-voltage protection | Connect the charger |
| 14 | 420 | Start over temperature protection | Wait for the product to cool down |
| 15 | 430 | The external battery voltage is greater than the device voltage | 1. The display voltage is lower than 12V, and the device voltage is low. Please connect the charger to recharge. 2. If the display voltage is higher than 12V, the car battery is normal; or the car battery voltage is too high, which is not suitable for this product, please use an jump starter that supports higher voltage |
| 16 | 440 | gnition clip shorted | Connect the battery correctly |
| 17 | 450 | Abnormal clamp connection | Connect the battery correctly |
| 18 | 470 | Abnormal cell voltage drift protection | / |
| 19 | 480 | Continuous start protection | Wait 30 seconds and start again |