

TROUBLESHOOTING

NO.	Error code	Description	Cause / Solution
1	100	Excessive differential pressure	/
2	110	Charging overvoltage protection	Disconnect the charger
3	140	Discharge undervoltage protection	Connect the charger
4	150	Discharge over-temperature protection	Waiting for the device to cool down
5	160	Discharge under-temperature protection	Place the product at the right temperature
6	170	Temperature error	Rebooting the device
7	200	Communication abnormalities	Rebooting the device
8	201	Charging communication abnormal	Restart the device
9	310	Air pump short circuit protection	Rebooting the device
10	320	Air pump overcurrent protection	Rebooting the device
11	330	When starting, the current air pressure is greater than the set air pressure	Reset the proper air pressure
12	410	Undervoltage protection at start-up	Connect the charger
13	411	Under-voltage protection before start-up	Connect the charger
14	420	Activate over-temperature protection	Waiting for the device to cool down
15	430	External battery voltage is greater than the device voltage	<p>① If the displayed voltage is lower than 12V, please connect the charger for charging</p> <p>② If the display voltage is higher than 12V, it means that the car battery voltage is too high and not suitable for this product, please use a starter power supply that supports higher voltage</p>
16	440	Ignition clip reverse connection	Correct connection of the battery

NO.	Error code	Description	Cause / Solution
17	450	Auto-start failure	After confirming the correct connection, please refer to the instruction manual and use manual start
18	470	Pre-start differential pressure abnormality protection	/
19	480	Wait 30 seconds for the next start-up	Wait 30 seconds and start again