Car Topper Proper Care & Use

To ensure best performance read instructions below.



BATTERY USE WARNING

⚠ WARNING



BATTERY HANDLING

Keep dry.
Do NOT expose to open flame.
Do NOT impact this battery; Handle with care. Keep out of reach of children.











BATTERY USE

Store and charge in a cool dry, well ventilated area. Max. operating temperature: 140° F. Dispose of battery if it appears damaged or swollen. Only use appropriate charger.

Never use damaged or modified charger.

BATTERY DISPOSAL

Dispose of battery in accordance with local laws.



Do Not Exceed 55MPH

Do Not Use on Glass

Sunroofs or T-Tops



Do Not Place Towels Between Magnet and Car.
Car Protector Pad OK



Do Not Use in EXTREME WINDS



Do Not Use on NON-METALLIC Cars

Newly Waxed Cars are slick and might allow the car topper to slide around. Be Aware.

To Prevent Scratching & Damage

Make sure magnets are clean and free of debris. If magnets are damaged or worn, new magnets are available for purchase. Install sign by gently lowering onto roof of car. When removing sign do not rock back and forth as rocking sideways could dent your roof.

Review Instruction on Sign Bottom

At least once a month, inspect and clean signs. Make sure lights, cords, and magnets are in working order. If sign is dirty, clean with a Brill-O-Pad and water- the logo is protected by a scratch proof laminate and cannot be damaged by cleaning. Also make sure magnets are securely fashioned to the sign.

Replacement Parts List



Battery Pack \$34.00



Magnet \$11.50



Charger \$15.25



Magnet Cover \$1.25



Car Protector Pad \$3.00



Sign Lock \$9.75