

Description	Quantity
Wiring Harness	1
Relay	1
Bracket & Hardware	2
Lights	2
Tree Zip Tie	2
Zip Tie	12
Battery Post Nut	2
Mounting Bracket Bolt	2

Required Tools:

13mm Socket	
10mm Socket	
Flat-Head Screwdriver	
Torx T-40	
Allen Wrench #6	
Wire Cutter (trimming zip ties)	

Read entire manual before beginning the installation process.

Disclaimer: Sam's Backup Lights is not responsible for any damage due to improper installation.

Sam's Backup Lights www.samsbackuplights.com

Polaris Ranger Reverse Light support@samsbackuplights.com

Step 1: Mount Lights

- 1) Attach light bracket to light and tighten Allen bolt.
- 2) Remove the door bolts (13mm) and mount bracket as shown below.
- 3) Bolt the light bracket to the mounting bracket.
- 4) Remove Torx bolt, pull back plastic and feed the light connector into cab.
- 5) Reinstall Torx bolt









Step 2: Routing Wires

- 1) Remove the two plastic plugs and pull head-liner loose.
- 2) Run the wire cross-member behind the headliner, securing it sufficiently, and plug in the connectors.
- 3) Continue to run the wire down driver's side door along the OEM harness; if there are no preexisting wires, use Christmas Tree Zip Ties to fasten the wire as shown below (yellow circles).
- 4) Run wire behind seat and through grommet into battery storage area.





Step 3: Connect Diagnostic Connector & Power Leads

- 1. Push relay terminal into remaining slot of relay holder; then plug relay in.
- 2. Remove diagnostic connector cover and plug in connector that comes with reverse light wiring harness.
- 3. Connect positive lead to positive terminal of battery and negative lead to negative terminal using supplied locknuts.



Diagnostic connector

Step 4: Secure Controller, Relay, & Fuse

1) Secure the fuse, controller, and relay using zip ties.





Operation of Reverse Lights

Our controllers have been programmed with a manual override feature. Back-up lights may be turned on without the vehicle in reverse.

• Fully Automatic When Shifted to Reverse

1) No programming needed

Manual Override

- 1) Put the vehicle in neutral.
- 2) Press and hold the brake pedal for up to 2 seconds. The reverse light will automatically turn on and stay on.

*To turn the light off repeat this procedure.

Note: If the ignition is turned off while the vehicle is in reverse, or the manual override function is enabled, the lights will remain ON until the ECU enters sleep mode (approximately 30 seconds - 2 minutes depending on vehicle and ECU type).