

ROBO-Glove

USER GUIDE

Product Name: FIT-999-99-9-9-F001-A
(ROBO FINGER RG-2)

Product Name: FIT-999-99-9-9-F001-A
(ROBO FINGER RG-2)

Please read this User Guide before using the product to avoid accidents and damages. Keep the guide easily accessible for future reference.

Precaution for Use

1. Be sure to check whether it is suitable for the conditions of use before using the product.
2. Before using the product, be sure to read the instruction manual of the equipment to be attached.
3. The equipment must be turned off before installing the product.
4. Before using the product, be sure to remove oils and dusts on the surface of the equipment.
5. Be sure to check whether it is installed properly, a running-in operation after installing the product is recommended.
6. The maximum range of motion of the gripper of 110mm would be 77mm by installing the product.
7. Do not disassembly, alter, or modify the product.
8. Note that the chemicals and solvents may permeate the product.
9. Do not operate the equipment with the product in water or oil for a long time as fluids may permeate the product under the continuous operation.
10. The product is not waterproof.
11. Be careful not to damage the product with a blade or sharp object.
12. Visible wrinkles and stains may be appeared, but they do not interfere with the quality of the product.
13. Avoid the product contacting any hot object.
14. The equipment may get hot by installing the product.
15. The durability of the product varies depending on the operating environment and conditions. Before using the product, please be sure to check under the actual conditions.
16. Replace the product if separation or cracking of the rubber, exposure of the fiber, or other deterioration of the product's surface is detected.
17. Inspect the product for scratches or damages before and after each use to protect the equipment and avoid the malfunction.

Limited Warranty

Towa Corporation warrants the product against defects in design and material at the time of its original purchase by a customer. TOWA Corporation will not bear any responsibility for direct or indirect losses caused by using the product.

*Please note that the design and specifications are subject to change without prior notice.

Care and Storage

After use, wash the product and store it properly.

Hand wash with warm water. When using detergent, make sure to rinse it off with clean water as detergent may deteriorate the materials.

Dry the product in the shade.

Use a zippered plastic bag and store in a cool and dark place to avoid high temperature and moisture.