

# V-BAR/SIDE BAR MOUNT INSTRUCTIONS

#### STABILIZER MOUNTING

1. Using the  $5/16''-24 \times 7/8''$  screw, attach your side bar/v-bar mount to the rear stabilizer mounting hole.



4. Attach your stabilizer side bar(s) to the quick disconnect nut(s).



2. Using the laser markings, set the top knuckle(s) to the desired position, and tighten to lock in place.



5. Place the quick disconnect nut(s) into the bottom knuckle(s).



3. Using the laser markings, set the bottom knuckle(s) to the desired position, and tighten to lock in place.



6. Tighten stabilizer(s) to the bottom knuckle(s).



7. Your stabilizer side bar/v-bar mount is now ready for use!

# **REMOVAL/ADJUSTMENT**

- 1. Loosen ONE Knuckle at a time during adjustment/removal.
- 2. WHILE ATTACHED TO THE BOW, back out the screw for the desired knuckle.
- 3. With your stabilizer ATTACHED, rotate the stabilizer counter-clockwise until loose.

## TOP KNUCKLE ADJUSTMENT:





## **BOTTOM KNUCKLE ADJUSTMENT:**





# FRONT STABILIZER MOUNTING, FRONT BAR/QUICK DISCONNECT

#### WITH QUICK DISCONNECT

- Using the provided steel insert, place the insert into the riser bracket slot before attaching front bar/quick disconnect.
- 2. Place the riser bracket up to the bow, and placing the insert into the slot, tighten down your front bar stabilizer to the bracket to lock your riser bracket in place.
- 3. Repeat steps for installation.





#### WITHOUT QUICK DISCONNECT

- Take the provided eye bolt and place it through the steel insert.
- Using a ¼" hex, place through the side hole in the eye bolt to tighten your front stabilizer into the threaded portion of the bolt.





## THE OUTDOOR GROUP, LLC

1325 John Street, West Henrietta, NY 14586
(877) 503-5483

www.custombowequipment.com

THE DUTDOOR GROUPS

#### LIABILITY DISCLAIMER

The Outdoor Group, LLC is not liable for any personal injury, death, or property damage that may result from your use of this product. The user of this product assumes all risks of property damage or injury to yourself and others that may arise from its use. Use of this product binds the user to this agreement.

#### **WARRANTY SERVICES:**

IMPORTANT: In the unlikely event that you require service on your product, please contact Customer Service at 1 (877) 503-5483. If necessary, our Customer Service Agents will provide you with a Return Merchandise Authorization (RMA) number and instructions on how to ship the product(s) back. It's important that you contact a Customer Service Agent before returning any item. Please be sure to include your RMA number when returning an item, so that we can identify the return as yours. Without the RMA, we will not be able to process your return, and your item will not be returned to you.

#### PATENT INFORMATION

This product is covered by one or more patents. A complete list of Custom Bow Equipment patents can be found by visiting custombowequipment.com/pages/patents