 
 
 
 
 

 
 
 



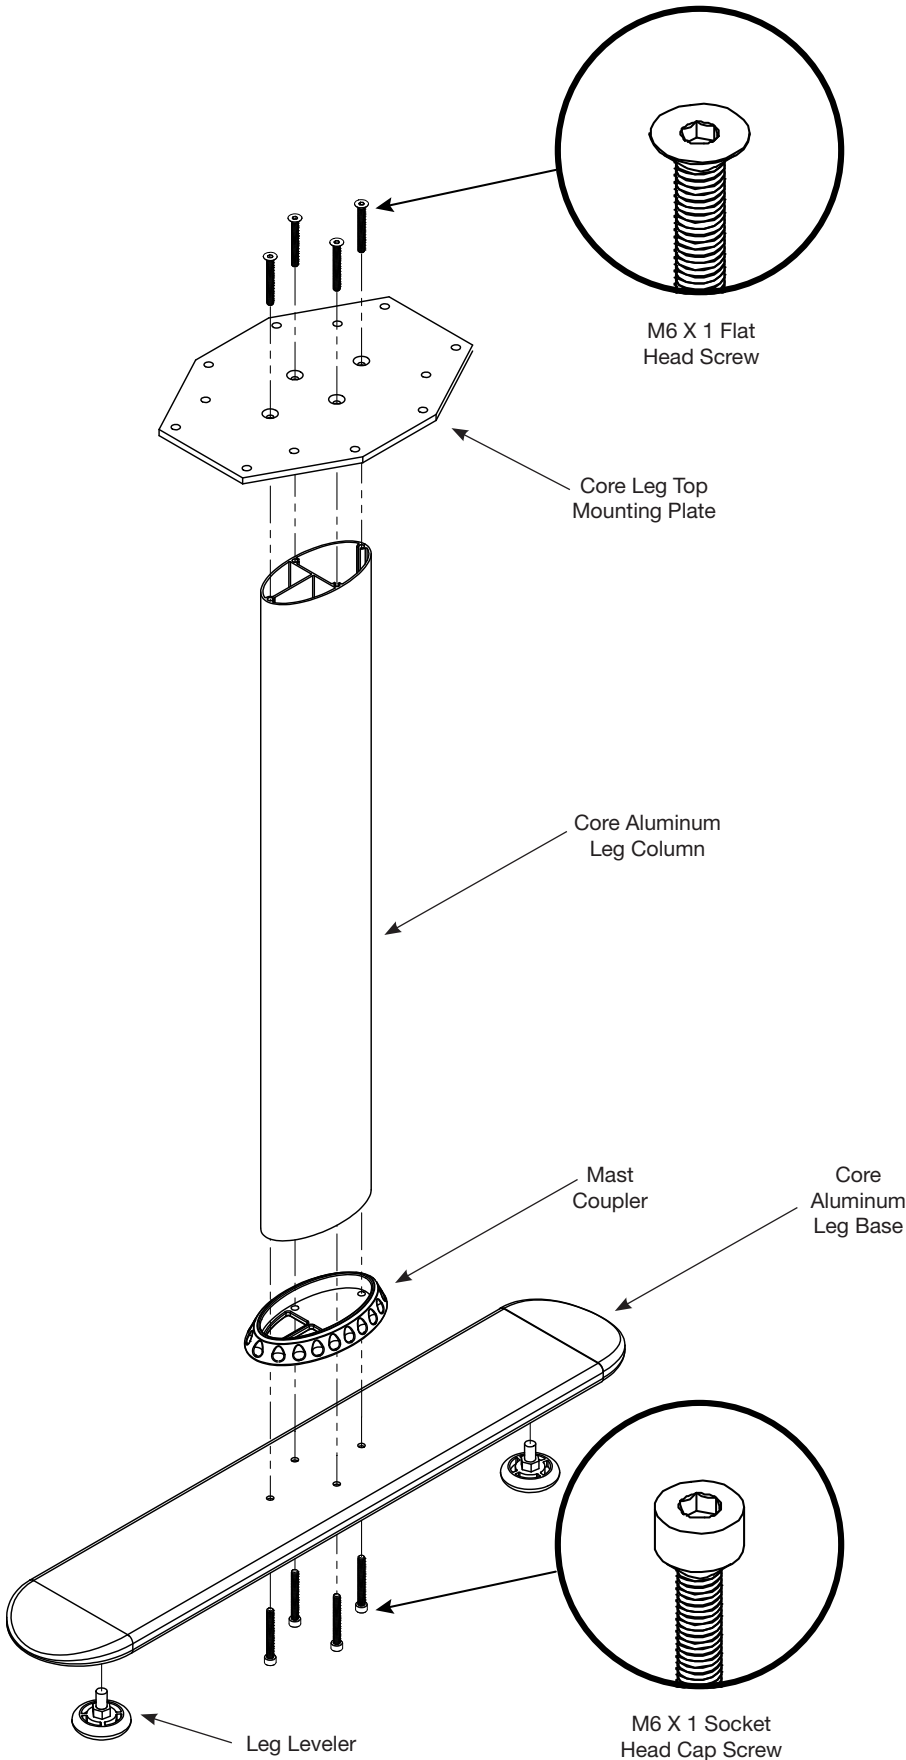
# ULTIMATE SUPPORT®

## Instructions for Assembling Core Legs

### Included Parts with the Core Leg Assembly - BOX 2

	Core Leg Top Mounting Plate	x2
	Core Aluminum Leg Column	x2
	Mast Coupler	x2
	Core Aluminum Leg Base	x2
	Leg Leveler	x4
	M4 Hex Wrench	x1
	M5 Hex Wrench	x1
	M6 X 1 Socket Head Cap Screw	x8
	M6 X 1 Flat Head Screw	x8
	1/4 - 20 x 5/8" Pan Head Screw	x24

# ULTIMATE SUPPORT®



Place core leg top mounting plate on aluminum leg base, lining up the holes. Use the four flat head screws provided to attach plate to leg base. Use M4 hex wrench to tighten flat head screws.

On the opposite end of the aluminum leg base, slide on mast coupler.

On the bottom end with the mast coupler, attach core aluminum leg base using four socket head cap screws. Screws will go through the aluminum leg base, mast coupler and into the core aluminum leg base. Use M5 hex wrench to tighten socket head cap screws.

Screw the two leg levelers into the core aluminum leg base. Duplicate these instructions for the other leg.

The additional 24 pan head screws (1/4 - 20 x 5/8") are used for attaching core legs to core table. Set aside and save for later.