
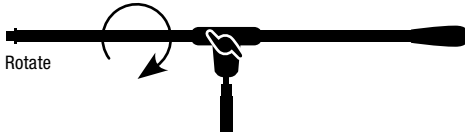
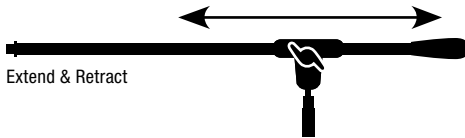


AX-48 PRO PLUS BOOM

ADJUSTING ULTI-BOOM PRO

To adjust tilt, pan, rotate, extend, & retract, simply turn the large center knob counter clock-wise. The length of the boom can be adjusted by the patented StableLock lever. (Ulti-Boom Pro included with the AX-48 Pro Pus)

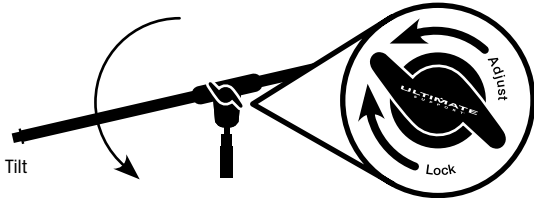


Patented StableLock Lever.

ULTIMATE SUPPORT®

APEX® SERIES KEYBOARD STANDS

Manual

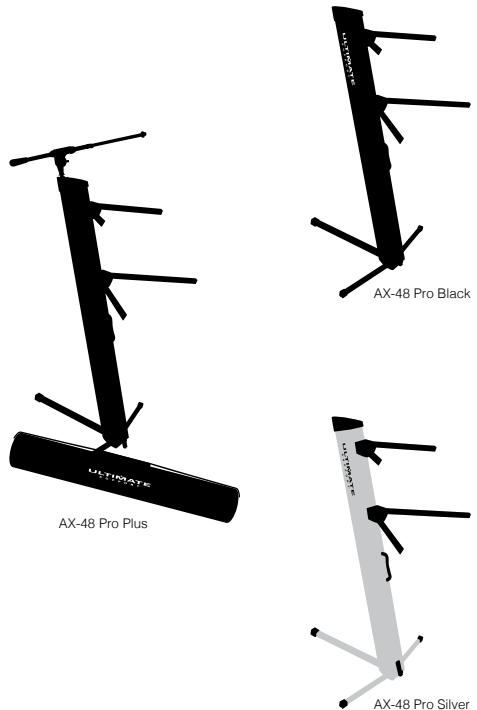

Visit ultimatesupport.com to download a detailed product manual, read full warranty details and to register for warranty.


LIMITED LIFETIME WARRANTY
Go to ultimatesupport.com for More Details



AX-48 PRO SERIES SETUP


LEG SETUP

While pushing the release button under the foot cap, pull out support legs, then flip leg out until it snaps into place. Repeat with the other two support legs. Turn the knob on the fourth leg and extend to floor for greater stability.

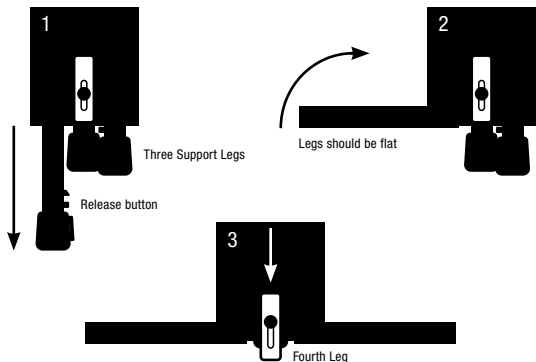

ARM SETUP


Position clamp on column face and install bracket and T-screw. (Angular edge rides in column slot.) To Adjust, loosen T-screw and move to desired position. Open top cap and remove Tribars. Attach Tribars to clamps by Tribar hook. Push Tribar down into clamp receiver.

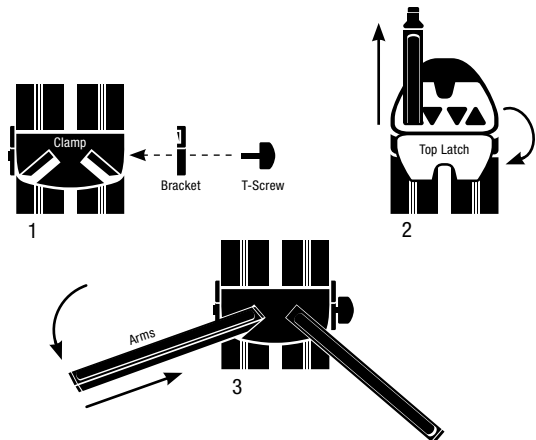

AX-48 PRO SERIES SETUP

ATTACHING HANDLE

Screw handle into the bottom and top sliding handle brackets. Do not tighten all the way, handle should be able to slide up and down. Slide handle into desired position on stand and tighten screws completely. If the handle needs to be moved, loosen screws and slide handle to the new position and tighten screws again.

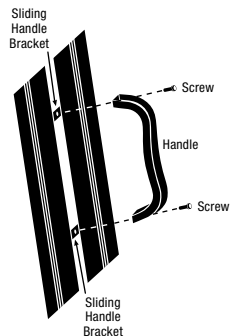

ADJUSTING CABLE CLIPS

After loading top instrument, secure cable in cable clips. Rotate cable clips for re-positioning.



USING ANGLE ADAPTER

To accommodate larger, heavier keyboards and/or lower playing styles, remove the angle adapter. To remove the angle adapter, remove all keyboards and lay stand flat. Remove small screw and slide out the angle adapter.

