



ULTI-BOOM PRO INSTRUCTIONS

(Optional Accessory, **NOT INCLUDED!**)

ADJUSTING ULTI-BOOM PRO

To adjust tilt, pan, rotate, extend, & retract, simply turn the large center knob counter clock-wise. The length of the boom can be adjusted by the patented StableLock lever.

The Ulti-Boom Pro, item #17651, is available from Ultimate Support Resellers everywhere. Learn more at <http://ultimatesupport.com>.

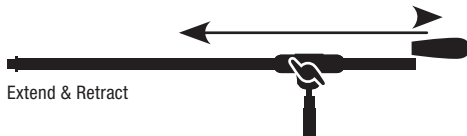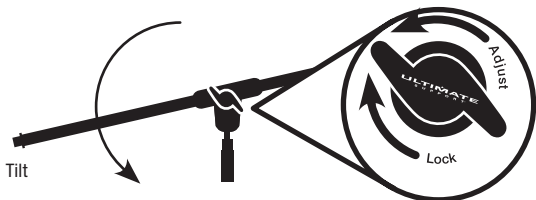

Patented
StableLock
Lever.

Visit ultimatesupport.com
to download a detailed
product manual, read full
warranty details and to
register for warranty.

ULTIMATE SUPPORT®

DELTEX® PRO SERIES KEYBOARD STANDS

Manual




LIMITED LIFETIME WARRANTY
Go to ultimatesupport.com for More Details




DELTEX PRO SERIES SETUP

LEG SETUP


Swing out rear leg to fully extended position.

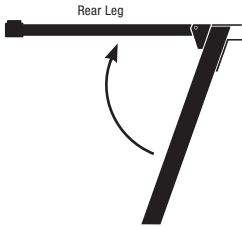

Insert T-connector on side legs into the inside of rear leg, being sure that the threaded holes are on top. Push side legs fully into bottom bracket so that the holes in the bracket line up with the threaded holes in the side leg assembly.

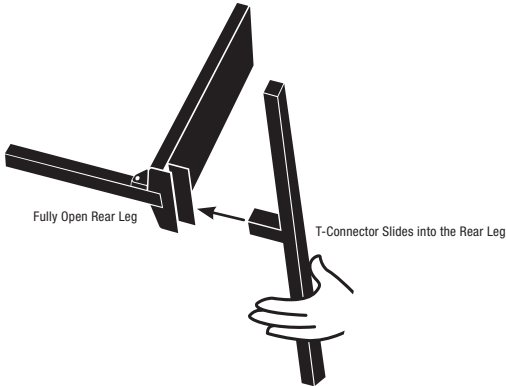


Insert thumb screws through bottom bracket and into side legs. Tighten thumbscrews.

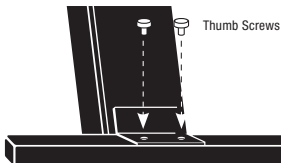


DELTEX PRO SERIES SETUP

ARM SETUP

Position clamp on column face and install bracket and T-screw, placing tapered edge of bracket into groove on column face. Tighten T-screw fully. To adjust, loosen T-screw and slide clamp to desired position.

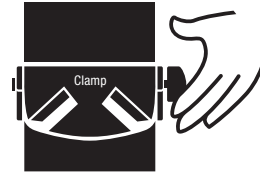

Attach Tribars to clamp by inserting Tribar Hook. Push Tribar down into clamp receiver.

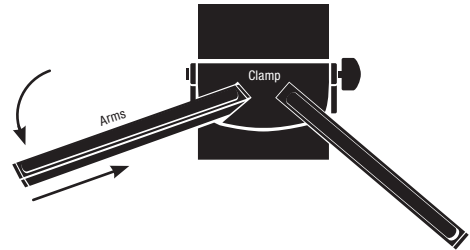

Side leg assembly and Tribar arms store in tote bag for easy storage.

