AMP STAND FEATURES



Mic Boom Attachment

The AMP-150 has a built in mic thread adapter, attach your boom right to the AMP-150 stand.




Adjustable Angle

The AMP-150 back leg has three positions to adjust the tilt of the stand. Control the angle of your speaker with the AMP-150.

SPECIAL FOLDING INSTRUCTIONS FOR THE GS-102

Folding down the Yokes


- 1. Open both levers to adjust yokes placement as needed.
- 2. Fold up second yoke, should rest under first yoke.
- 3. Fold down first Yoke, should rest on top of second yoke.
- 4. Close both levers to lock yokes in place.

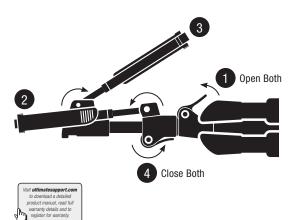



GENESIS® SERIES

GUITAR & AMP STANDS

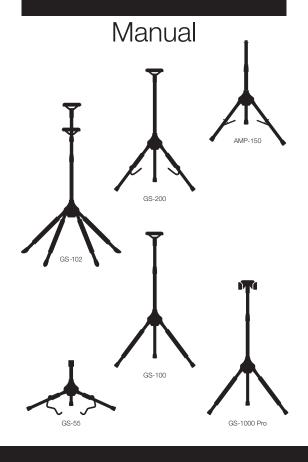

LIMITED LIFETIME WARRANTY
Go to ultimatesupport.com for More Details



OPENING AND CLOSING LEGS

Locked Position Unlocked Position

Locking Knob

Locate the RED or GREY Locking Knob. Turn the Locking Knob ¼ turn counterclockwise to the open position shown here.

WARNING!

Always make sure the locking knob is in the unlocked position when opening <u>or</u> closing legs!

Locking knob will break if legs are opened <u>or</u> closed in the locked position.

ADJUSTING STAND HEIGHT

This is only for the GS-100, GS-102, GS-1000 Pro & AMP-150

Flip open the RED or GREY telescoping lock lever at the back of the stand.

Adjust the height of the stand until your guitar's bottom edge or instrument cable is about two inches from the floor. Flip down the lock lever to secure height.



GUITAR STAND FEATURES



Self-closing Yoke

The GS-1000 Pro features a self-closing security gate that closes when you place your guitar on the stand.



Security Strap

The GS-100, GS-102 and GS-200 feature a security strap that holds your guitar in place.



Guitar Pick Holders

The GS-100, GS-102, GS-200 and GS-55 have slots for holding guitar picks



Support Arms

Both the GS-200 and GS-55 have support arms for added support that fit both the Acoustic, Electric and Bass Guitars.