

ADJUSTING STAND HEIGHT

This Feature is Specific to GS-100+ and GS-1000 Pro+


Ensure that the stand is not supporting a guitar. Flip the black telescoping lock lever at the back of the stand to the unlocked position. Adjust the height of the stand to a height that will allow your guitar's bottom edge or instrument cable to be approximately two inches from the floor. Flip down the lock lever when at desired height to secure the stand.



ULTIMATE
SUPPORT®

GENESIS®
SERIES PLUS
GUITAR STANDS

Manual

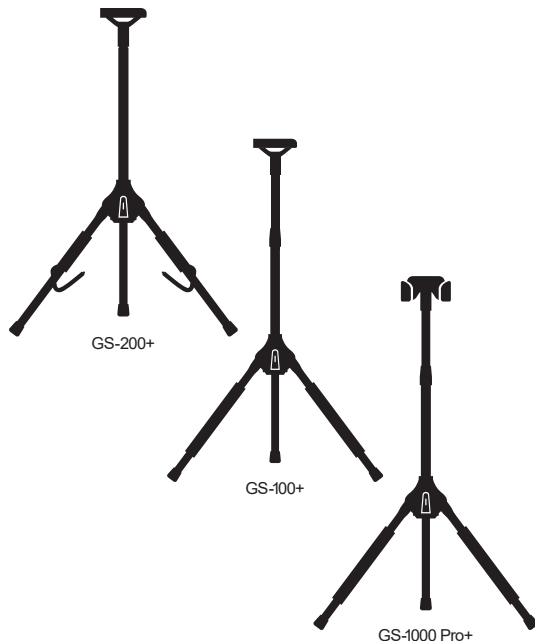

Visit ultimatesupport.com to download a detailed product manual, read full warranty details and to register for warranty.

800.525.5628
www.ultimatesupport.com
Copyright 2020, Ultimate Support Systems
All Rights Reserved

 
 
LIMITED LIFETIME WARRANTY
GO TO ULTIMATESUPPORT.COM FOR MORE DETAILS




OPENING AND CLOSING LEGS

Locking Button

To unlock the legs, firmly press the blue locking button at the base of the stand until it catches, and then release. The indicator color will turn green, this mean the legs are unlocked and free to be adjusted. To lock the legs, firmly press the blue locking button again. When the indicator color turns back to red, you have successfully locked the stand in place.

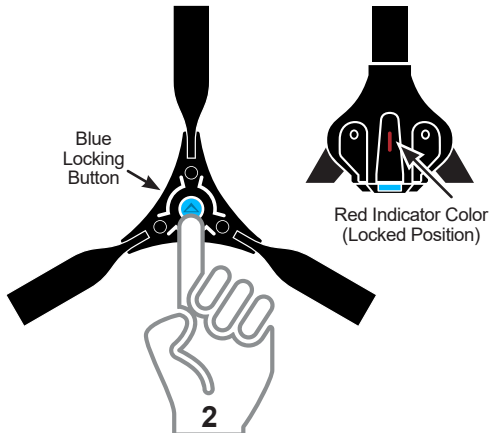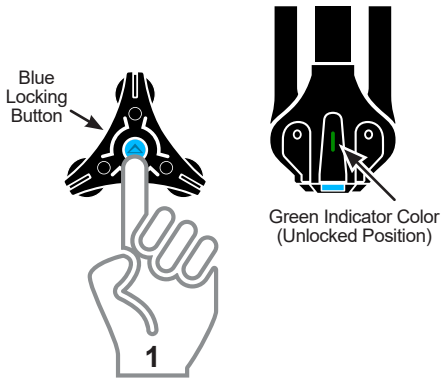


GUITAR STAND FEATURES

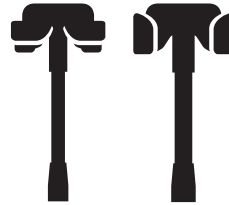 

Self-Closing Yoke

The GS-1000 Pro+ features a self-closing security gate that closes when you place your guitar on the stand.

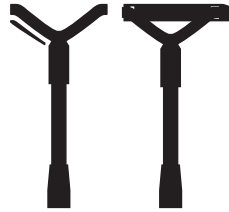

Security Strap

The GS-100+ and GS-200+ feature a security strap that holds your guitar in place.



Guitar Pick Holders

The GS-100+ and GS-200+ have slots for holding guitar picks.



Support Arms

The GS-200+ has support arms for added support that fit both the Acoustic, Electric and Bass Guitars.