



To adjust position of hanger arm, loosen dial on bottom of plate.

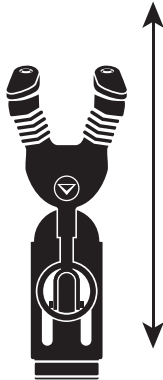

GS-10 Pro hanger arm is depth adjustable (be sure to tighten dial before hanging guitar).

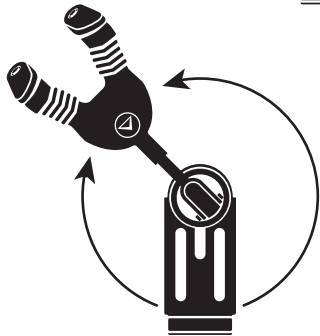


GS-10 Pro is angle adjustable (be sure to tighten dial before hanging guitar).


Visit ultimatesupport.com to download a detailed product manual, read full warranty details and to register for warranty.

GENESIS® SERIES GUITAR HANGER

Manual

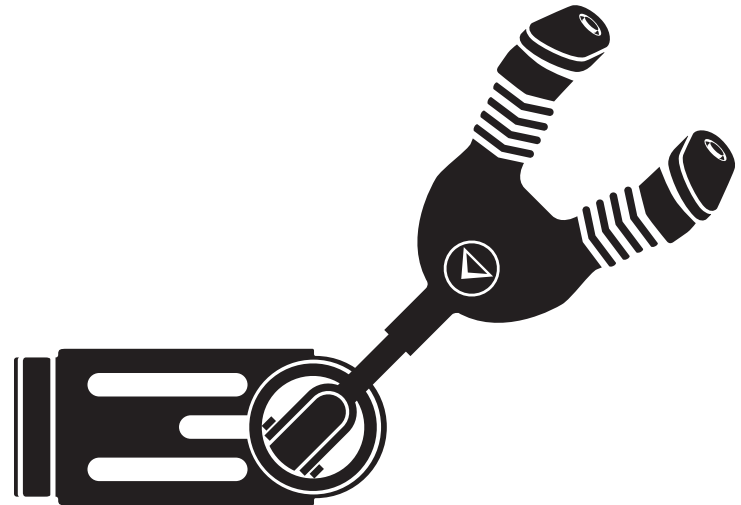

MOUNTING TO DRYWALL

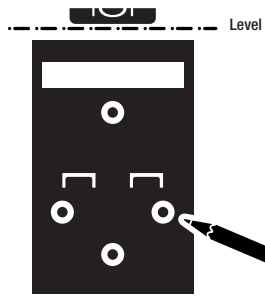


STEP 1

Place the GS-10 Pro wall mount on wall at your desired location. For maximum safety for your guitar, please make sure mount is level (bubble level pictured above for illustration).

STEP 2

Using either a pencil or one of the screws provided, mark the walls where holes will be drilled.

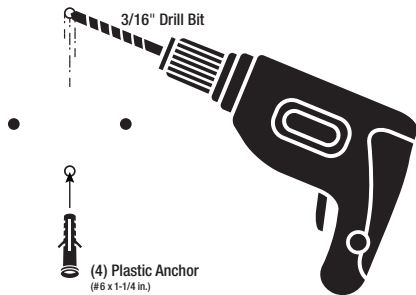


STEP 3

Using a 3/16" drill bit, drill holes for anchors.


STEP 4

Place #6 x 1-1/4 in. plastic anchors in holes. If needed, lightly tap in anchors with hammer.

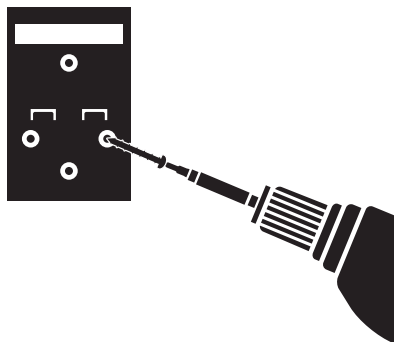

STEP 5


Line up holes on wall with holes in mount. Secure with Phillips head screwdriver / drill gun.

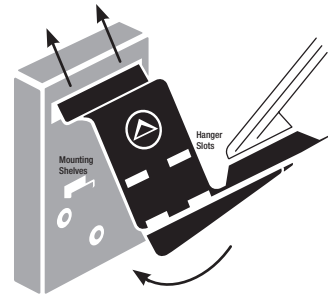

STEP 6


Line upper lip of GS-10 Pro hanger with upper slot of mount. Push flush with wall, making sure the two mount shelves line up in hanger slots.

MOUNTING TO SLAT WALL

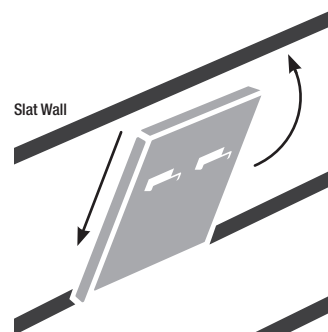

STEP 1

Making sure the lip is in the lower slat, place GS-10 Pro slat wall mount on slat wall.

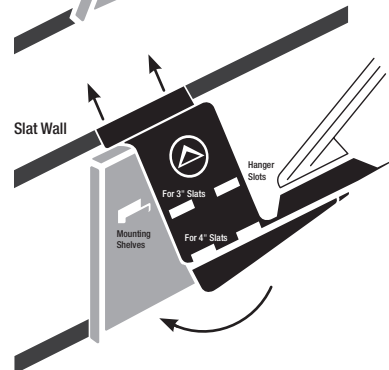

STEP 2

Line upper lip of GS-10 Pro hanger with upper slot of mount. Push flush with wall, making sure the two mount shelves line up in hanger slots. (NOTE: Same instructions for 3" or 4" slats.)