



HYP-PRO-MINI

HYP-PRO-AIR2

HYP-PRO-AIR

HYP-PRO-234

- Product Name: HYP-PRO-MINI
- Part Name: 17911
- Capacity: 2 lbs.
- Configurations: 5 Variations
- Type: iPad Mini

- Product Name: HYP-PRO-AIR2
- Part Name: 17937
- Capacity: 2 lbs.
- Configurations: 5 Variations
- Type: iPad Air 2

- Product Name: HYP-PRO-AIR
- Part Name: 17910
- Capacity: 2 lbs.
- Configurations: 5 Variations
- Type: iPad Air

- Product Name: HYP-PRO-234
- Part Name: 17912
- Capacity: 2 lbs.
- Configurations: 5 Variations
- Type: iPad 2, 3, 4

- Nombre del producto: HYP-PRO-MINI
- Nombre de pieza: 17911
- Capacidad: 0.90 kg
- Configuraciones: 5 variaciones
- Tipo: iPad Mini

- Nombre del producto: HYP-PRO-AIR2
- Nombre de pieza: 17937
- Capacidad: 0.90 kg
- Configuraciones: 5 variaciones
- Tipo: iPad Air 2

- Nombre del producto: HYP-PRO-AIR
- Nombre de pieza: 17910
- Capacidad: 0.90 kg
- Configuraciones: 5 variaciones
- Tipo: iPad Air

- Nombre del producto: HYP-PRO-234
- Nombre de pieza: 17912
- Capacidad: 0.90 kg
- Configuraciones: 5 variaciones
- Tipo: iPad 2, 3, 4

- Produktname: HYP-PRO-MINI
- Artikelnummer: 17911
- Kapazität: 0.90 kg
- Konfigurationen: 5 Variationen
- Typ: iPad Mini

- Produktname: HYP-PRO-AIR2
- Artikelnummer: 17937
- Kapazität: 0.90 kg
- Konfigurationen: 5 Variationen
- Typ: iPad Air 2

- Produktname: HYP-PRO-AIR
- Artikelnummer: 17910
- Kapazität: 0.90 kg
- Konfigurationen: 5 Variationen
- Typ: iPad Air

- Produktname: HYP-PRO-234
- Artikelnummer: 17912
- Kapazität: 0.90 kg
- Konfigurationen: 5 Variationen
- Typ: iPad 2, 3, 4

- Nom du produit : HYP-PRO-MINI
- Nom de la pièce : 17911
- Capacité : 0,90 kg
- Configurations : 5 variations
- Type : iPad Mini

- Nom du produit : HYP-PRO-AIR2
- Nom de la pièce : 17937
- Capacité : 0,90 kg
- Configurations : 5 variations
- Type : iPad Air 2

- Nom du produit : HYP-PRO-AIR
- Nom de la pièce : 17910
- Capacité : 0,90 kg
- Configurations : 5 variations
- Type : iPad Air

- Nom du produit : HYP-PRO-234
- Nom de la pièce : 17912
- Capacité : 0,90 kg
- Configurations : 5 variations
- Type : iPad 2, 3, 4

Visit ultimatesupport.com to download a detailed product manual, read full warranty details and to register for warranty.

ULTIMATE SUPPORT[®]

LIMITED LIFETIME WARRANTY

Ultimate Support products are constructed of the finest materials and designed and tested to stand up to the demanding lifestyle of the touring musician, gigging DJ, and working sound engineer. In the unlikely event that a product should fail due to manufacturing defect, Ultimate Support is pleased to repair or replace that product.

Please see www.ultimatesupport.com for more information.

This warranty applies to the original purchaser only and does not include damage to the product resulting from normal wear and tear, accident, misuse, improper installation or operation, or unauthorized repair or alterations.

ULTIMATE SUPPORT[®]

THE STRENGTH OF INNOVATION[®]

HYPERPAD PRO

USER MANUAL



HYP-PRO-234
ITEM #17912

HYP-PRO-AIR
ITEM #17910

HYP-PRO-AIR2
ITEM #17937

HYP-PRO-MINI
ITEM #17911

Attaching iPad into HyperPad Pro

(Four Steps)



1. Align tablet buttons and ports with Shell openings.



2. Slip top of tablet into top of Shell.



3. Wrap each corner of Shell around tablet and continue around edges until tablet is completely surrounded by the Shell.




4. Snap magnetic support plate onto back of Shell.

Detaching iPad from HyperPad Pro

(Three Steps)



1. Snip off magnetic support plate from back of Shell.

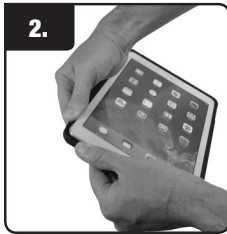


2. Release top corner of Shell away from tablet.



3. Pull Shell away from tablet towards next corner. Release next corner, repeating until tablet is free from Shell.

Using HyperPad Pro with Table Clamp

(Four Steps)

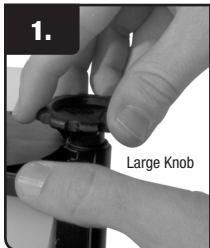

1. Turn large top knob to secure clamp to table. Turn small knob (bottom) for precise, secure adjustment.



2. Attach gooseneck onto top of clamp by turning it clockwise until tight.




3. Attach magnetic support plate by turning clockwise until tight.



4. Snap Shell onto magnetic support plate.

Using HyperPad Pro with Pole Clamp

(Four Steps)

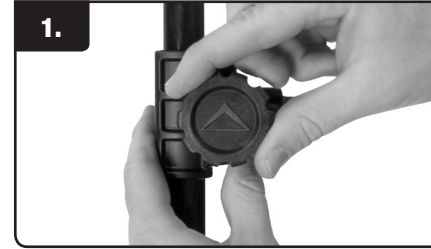

1. Attach clamp to lower tube of mic stand. Turn large knob to tighten and secure.



2. Attach gooseneck onto clamp by turning it clockwise until tight.



3. Attach magnetic support plate by turning clockwise until tight.



4. Snap Shell onto magnetic support plate.

Using HyperPad Pro with Top of Mic Stand

(Three Steps)



1. Attach gooseneck onto top of mic stand by turning it clockwise until tight.



2. Attach magnetic support plate by turning clockwise until tight.



3. Snap Shell onto magnetic support plate.