


# TS-70GB

## **SPEAKER STANDS MANUAL**

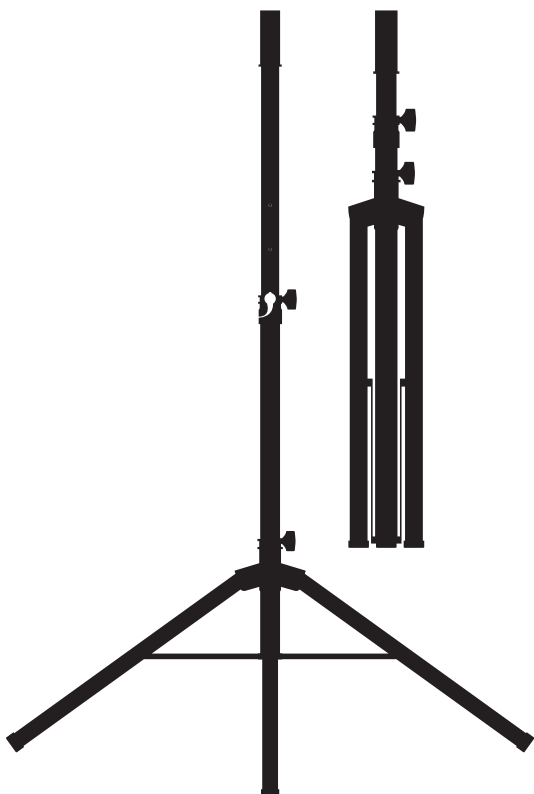

# SPECIAL INSTRUCTIONS

---

- Occasionally clean the stand with a damp cloth or non-abrasive cleaner. Do not lubricate or use silicone spray on the center tube.
- When loading the tripod, **ONLY** add the speaker when the tripod is in a fully upright position (all legs on the floor).
- Do not drag the tripod speaker stand while it is loaded; this could cause breakage of the fittings and result in damage to the stand.
- When supporting equipment, check that the telescoping collar is securely tightened.
- Always release the collar with caution and stand clear of load.
- **IMPORTANT:** don't over tighten any of z-knobs.

