
SPECIAL INSTRUCTIONS

- Occasionally clean the stand with a damp cloth or non-abrasive cleaner.
 Do not lubricate or use silicone spray on the center tube.
- When loading the tripod, ONLY add the speaker when the tripod is in a fully upright position (all legs on the floor).
- Do not drag the tripod speaker stand while it is loaded; this could cause breakage of the fittings and result in damage to the stand.
- When supporting equipment, check that the telescoping collar is securely tightened.
- Always release the collar with caution and stand clear of load.

TS-80GB & TS-88GB SPEAKER STANDS MANUAL



SPEAKER ADAPTER

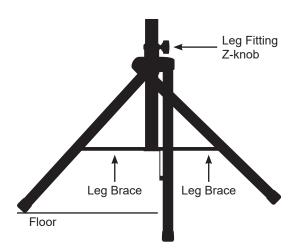

Opening Legs

Loosen leg fitting Z-knob and pivot legs so Ultimate Support label faces you. Leg braces should be parallel to floor for maximum stability.



Built-in Adapter

The built-in adapter fits both 1-1/2" or 1-3/8" internal diameter speaker sockets. Use the lower position for 1-1/2". For 1-3/8" sockets, depress push buttons and raise adapter until it locks in raised position.

IMPORTANT INFORMATION

For maintaining any of Ultimate Support's speaker stands, please read the back of this manual under <u>special instructions</u>. These instructions will help you maintain your stand and keep your warranty.