


QUICK REFERENCE GUIDE

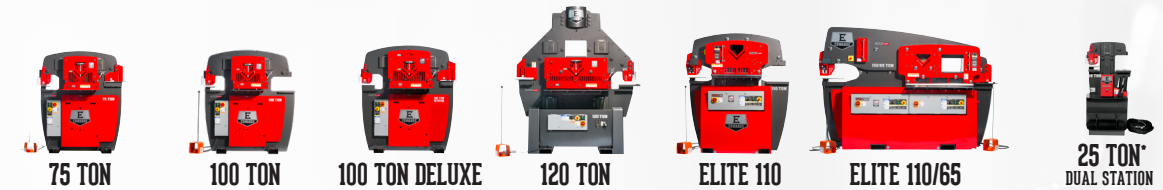

ATTACHMENTS					
STANDARD PUNCH ASSEMBLY	AC1023-2	—	AC1023-2	—	—
OVERSIZED PUNCH ASSEMBLY	AC1024	AC1024	AC1024	AC1024	AC1024
241 PUNCH ASSEMBLY	AC1055	AC1055	AC1055	AC1055	AC1055-2
ANGLE NOTCHER	AC0125-1	AC0125-1	AC0125-1	AC0125-1	AC0125
COPER NOTCHER	AC1013	Standard	AC1014	Standard	Standard
PIPE NOTCHER HOUSING	AC0925	AC0925	AC0925	AC0925	AC0925
PIPE NOTCHER HOUSING, OPEN CAVITY	—	—	—	—	AC0925C
TURRET PIPE NOTCHER HOUSING	AC0925T	AC0925T	AC0925T	AC0925T	AC0925T
MULTI-SHEAR	AC1075	AC1075	AC1075	AC1075	AC1075
ROD SHEAR	AC1074	AC1074	AC1074	AC1074	AC1074
7" BRAKE WITH 4-WAY DIE	AC1033	AC1033	AC1033	AC1033	AC1033
8" BRAKE WITH 4-WAY DIE	AC1034	AC1034	AC1034	AC1034	AC1034
10" BRAKE WITH 4-WAY DIE	—	—	AC1051	—	AC1051
10" BRAKE WITH 4-WAY DIE, OPEN CAVITY	—	—	—	—	AC1052
12" BRAKE WITH 4-WAY DIE	—	—	—	—	—
ACCESSORIES					
GAUGING TABLE KIT	AC0900	AC0900	AC0900	AC0900	AC0900
HEAVY DUTY GAUGING TABLE KIT	AC0903	AC0903	AC0903	AC0903	AC0903
HEAVY DUTY GAUGING TABLE KIT FOR OVERSIZE PUNCH ASSEMBLY	AC0905	AC0905	AC0905	AC0905	AC0905
COPER NOTCHER GAUGING TABLE KIT	—	—	AC0800	AC0800	AC0800
STRIPPER REDUCING PLATE	AC1914-3	AC1914-3	AC1914-3	AC1914-3	AC1914-4
URETHANE STRIPPER	AC1099	AC1099	AC1099	AC1099	AC1099
QUICK CHANGE PUNCH ASSEMBLY	AC1001	AC1001	AC1001	AC1001	AC1001
48" AUTO CUT	AC1010	AC1010	AC1010	AC1010	AC1010
48" BACK GAUGE	AC1009	AC1011	AC1011	AC1011	AC1011
PRESS BRAKE BACK GAUGE	PR135	PR135	PR135	PR135	PR135
PUNCH & DIE STARTER SET	PD1000	PD1000	PD1000	PD1000	PD1000
ACCESSORY LED LIGHT	AC1000	AC1000	AC1000	AC1000	AC1000
FABRICATOR'S PROTRACTOR	AC1017	AC1017	AC1017	AC1017	AC1017
FENCE GUIDES, SHORT 12", STANDARD HANDLES	AC1910	AC1910	AC1910	AC1910	AC1910
FENCE GUIDES, LONG 18", STANDARD HANDLES	AC1911	AC1911	AC1911	AC1911	AC1911
FENCE GUIDES, SHORT 12", HANDLES FOR HEAVY DUTY TABLE	AC1912	AC1912	AC1912	AC1912	AC1912
FENCE GUIDES, LONG 18", HANDLES FOR HEAVY DUTY TABLE	AC1913	AC1913	AC1913	AC1913	AC1913
PRODUCTIVITY PACKS	AC2000	AC2000	AC2000	AC2000	AC2000

ATTACHMENTS & ACCESSORIES



ATTACHMENTS						
—	AC1023-3	—	—	AC1023-4	—	AC1023-1
AC1024	AC1024	AC1026	AC1026	AC1024	AC1024	AC1027
AC1055-2	AC1055-2	AC1055-3	AC1055-4	AC1055-5	AC1055-6	AC1055-1
AC0125	AC0125	AC0126	AC0126	AC0125	AC0125	AC0124
Standard	AC1098	Standard	Standard	AC1097	Standard	AC1012
AC0925	AC0925	AC0925	AC0925	AC0925	AC0925	AC0925
—	—	—	AC0925C	—	AC0925C	—
AC0925T	AC0925T	AC0925T	AC0925T	AC0925T	AC0925T	—
AC1075	AC1075	AC1075	AC1075	AC1075	AC1075	AC1075
AC1074	AC1074	AC1074	AC1074	AC1074	AC1074	AC1074
AC1033	AC1033	AC1033	AC1033	AC1033	AC1033	AC1033
AC1034	AC1034	AC1034	AC1034	AC1034	AC1034	—
AC1051	AC1051	AC1051	AC1051	AC1051	AC1051	—
—	—	—	AC1052	—	AC1052	—
AC1035	AC1035	—	—	AC1035	AC1035	—
ACCESSORIES						
AC0900	AC0900	—	—	—	—	AC0902-1
AC0903	AC0903	AC0904	AC0904	AC0903	AC0903	—
AC0905	AC0905	AC0906	AC0906	AC0905	AC0905	—
AC0800	AC0800	AC0800	—	—	—	—
AC1914-4	AC1914-4	AC1914-6	AC1914-7	—	—	AC1914-1
AC1099	AC1099	AC1099	AC1099	AC1099	AC1099	AC1099
AC1001	AC1001	AC1001	AC1001	AC1001	AC1001	AC1001
AC1010	AC1010	AC1010	AC1010	AC1010	AC1010	—
AC1011	AC1011	AC1011	AC1011	AC1011	AC1011	—
PR135	PR135	PR135	PR135	PR135	PR135	PR135
PD1000	PD1000	PD1000	PD1000	PD1000	PD1000	PD1000
AC1000	AC1000	AC1000	AC1000	AC1000	AC1000	—
AC1017	AC1017	AC1017	AC1017	AC1017	AC1017	AC1017
AC1910	AC1910	AC1910	AC1910	AC1910	AC1910	—
AC1911	AC1911	AC1911	AC1911	AC1911	AC1911	—
AC1912	AC1912	AC1912	AC1912	AC1912	AC1912	—
AC1913	AC1913	AC1913	AC1913	AC1913	AC1913	—
AC2000	AC2000	AC3000	AC3000	—	—	—

*Requires and EDWARDS Ironworker with PowerLink System or a Portable Power Unit to operate

