VIDOKA

DJS70



User Manual

1000A JUMP STARTER

ACTIVATE YOUR 36-MONTH WARRANTY & GET AN EXCLUSIVE GIFT

Register within 7 days after receiving your new product.

 
PLEASE VISIT US NOW

→ warranty.myvidoka.com

CUSTOMER SERVICE







- 1, DO NOT start any engines that exceed the maximum displacement the jump starter can bear.
- 2. DO NOT crank the engine for more than 3 seconds.
- 3. Allow the jump starter to cool down for at least 1 minute between each start attempt.

A Big Thank You

We're thrilled that you have chosen to purchase the vidoka jump starter. At vidoka, we're committed to providing you with products that enhance your daily life. We also aim to give our customers excellent support. Should you have any questions or feedback about your new product, simply get in touch with our customer support team at

1-888-263-6667, or by email at support@myvidoka.com

Enjoy your new product!

CONTENTS

Attention	02
Accessories	02
Specifications	03
At a glance ·····	03
How to jump start your car	04
How to charge phones or tablets ·····	05
How to use the LED light ·····	06
How to recharge the device ·····	06
Warnings and cautions when using the product ······	07

ATTENTION

- This device is suitable for petrol engines up to 7.0L and diesel engines up to 5.5L. Please don't attempt a vehicle with a higher engine capacity or it will cause serious damage to the device and could be dangerous to the user
- Don't crank the engine for more than 3 seconds. Allow the jump starter to cool down for at least 1 minute after each start.
- Your jump starter will work best when it is fully charged. If less than 50% charged, it will not be able to start your engine.
- 4. Clear the dust on the electrodes of your car battery before jump starting.
- 5. If the instructions are followed correctly but your vehicle doesn't start instantly, please wait for 5-10 minutes and try again. But please don't make repeated attempts to jump start the engine without allowing time for the device to gool down.
- Do not allow the positive and negative clamps to come into contact with each other when powered on.
- 7. Separate the cables from the jump starter when they are not being used.
- It is prohibited to charge the device immediately after a jump start. Please wait at least 30 minutes if you want to charge the device after a jump start.
- To preserve lifespan, recharge the device at least once every 3 months.
 Use original or certified cables.
- 11. Do not expose the jump starter to liquids. Do not disassemble.
- 12. Avoid dropping the device and exposing it to extreme temperatures.
- 13. It is recommended to charge the device with the accompanying charging cable or a 5V/2A charging cable.

ACCESSORIES



1 x Intelligent Jumper Clamps



1 x LISB Cable





1 x User Manual

SPECIFICATIONS

Capacity	12800mAh/47.36Wh			
₩eight	313g/11oz			
Size	146*86*26mm/5.7*3.4*1 inches			
□ In	5V/2A			
USB Output	5V/2.1A; 5V/1A			
Jump Starter Peak Output	1000A			
Jump Starter Output	600A			
Operating Temperature Range	-20°C- 60°C/ -4°F- 140°F			

 AT A GLANCE

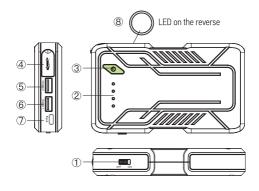



- 1. ON/OFF Button
- 2. Power Indication Light
- 3. Power Button
- 4. 12V/600A Jumping Port
- 5. 5V/1.0A USB Output
- 6.5V/2.1A USB Output
- 7. In Type-C 5V/2A
- 8. LED Flashlight/SOS/Warning Light
 - 9. Jumper Clamps

HOW TO JUMP START YOUR CAR

 Turn on your jump starter and ensure it has a charge of over 50%. (Charge fully before initial use)



Insert jumper cables into jumping port. The indicator light is flash alternately red and green.




3. Connect the red clamp to the positive(+) terminal and the black clamp to the negative(-) terminal of the car battery. The indicator light will changes from red and green flashing alternately light to green continuously on.




Note: In order to eliminate connection errors and ensure safety, the clamps will detect the load every 5 seconds and give a warning tone. This does not affect the jump start. In addition, the clamps will disconnect automatically after 30 seconds and red lights will stay on with no sound emitted. Please attempt to start the engine within 30 seconds. If you need to attempt to jump start the engine again after 30 seconds, please remove and reconnect the clamps, then try again.

4. Start your engine.

5. Remove clamps and pack away.

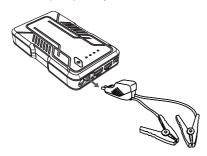

HOW TO CHARGE PHONES OR TABLETS

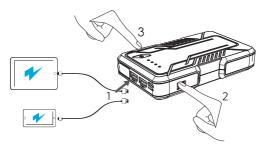

Please note that "Output 1" and "Output 2" cannot work together with "In" to charge other devices.

HOW TO USE THE LED LIGHT

1. Hold to turn on/off.



- Press and hold down the Function button for 2 seconds to turn the LED light on/off.
- 3. Press once to toggle between light modes (high/SOS/strobe).

HOW TO RECHARGE THE DEVICE



Note: Please switch the jump starter to 'OFF" when you are not using it. The jump starter will discharge itself when it's switched to 'ON'. A wall plug adapter is not included, please use a 5V universal charging adapter to charge the device. It is recommended to charge the device with the accompanying charging cable or a 5V/2A charging cable.



WARNINGS AND CAUTIONS WHEN USING THE PRODUCT

- Never short circuit the jump starter by connecting the Red and Black clamps.
- 2. Do not disassemble the jump starter.
- When children use this product, please operate under the guidance of parents.
- Store in a dry place, do not expose to damp conditions or near corrosive materials
- If the jump starter expands, leakage or peculiar smell is found, stop use immediately.
- Please use this jump starter at normal temperature and be far away from too wet too hot and fire
- Do not start the vehicle continuously, between starting twice you should allow an interval of at least 1 minute.
- 8. Do not start the car when the electric quantity of the product is less than 50%, otherwise it wil cause damage to the product.
- 9. Before first use, charging for 3 hours or more.
- 10. Please keep charge the jump starter atleast once every three months.
- 11. After starting the car, please wait atleast 30 minutes before charging the product.



To learn more about vidoka. please visit us at:

www.myvidoka.com





Scan QR Code & Start Chatting













1-888-263-6667

support@myvidoka.com

myvidoka.com