



Ustellar

LED Flood Light User Guide



LED Flood Light User Guide

Thank you for ordering from Ustellar. Set-up is easy and takes only a few minutes by following the instructions.

 
 
Warning

- (1) Please check if the light and the parts are intact before installation.
- (2) Make sure to cut off power before installation.
- (3) Please do not place this light in corrosive conditions.
- (4) If there is any damage to the cord, please cut off the power and stop using it immediately.
- (5) Please do not retrofit the light within the warranty period.
- (6) To ensure the light works properly, please use the voltage indicated on the packing.

1. Parameters

P/N	UT88861A-DW-US-3	UT88861A-DW-US-1
Quantity	3-Pack	1-Pack
Model	UT88861A	
Wattage	80W	
Color Temperature	5000K	
Dimmable	No	
Max Luminous Flux	8000lm	
Input Voltage	120V AC	
Frequency	50/60Hz	
Waterproof Rating	IP66	
Beam Angle	120°	
Working Temperature	-20°C-40°C	


2. Components

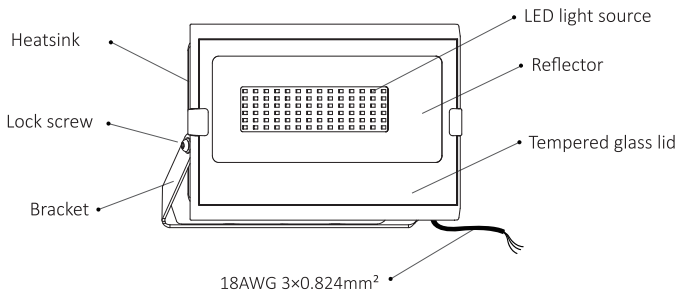

L—Black
G—Green
N—White

Warning: if the lighting for outdoor use, waterproof treatment should be done at the joints.

 
3. Dimension

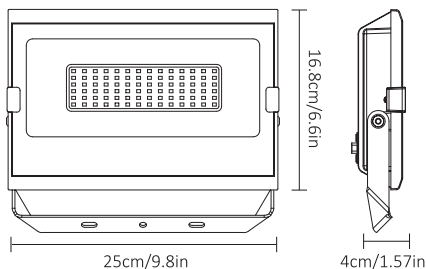

Weight: 2.97lb/1.35kg
Max Projected Area: 50m²


4. Installation

 Step A: According to the spacing of two screw bits on the bracket, drill two holes on the mounting panel.

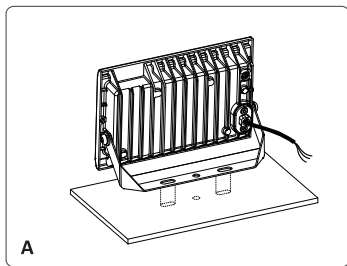


Note: Maximum mounting height is over 5m.

 
Step B: Aim the bracket at the holes and fix it with two bolts.

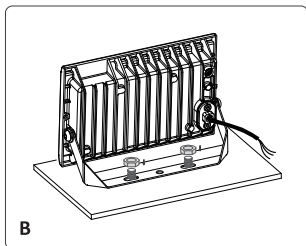

 Step C: Adjust the lighting direction up or down as per your need and plug in to power the light on.

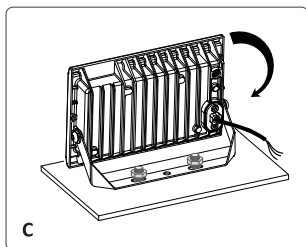

Note:

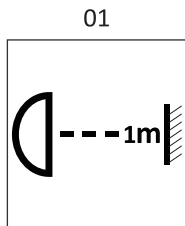 

01 Make sure that the distance between the light and the object being lit is more than 1 meter, so as to avoid high temperature caused by short distance.

The light source of this luminaire is not replaceable.

Limitation of Indoor and Outdoor Use

- (1) This light is waterproof and damp proof. It is protected against the rain, but it cannot be immersed in water.
- (2) The mounting position of this light should be able to bear at least 10 times as heavy as the light.
- (3) This light should be used in condition that is good for heat dissipation. Its working temperature should be less than 45°C Too high the working temperature will cause serious lumen depression and affect lifespan of the light.

Contact Us

Have some issue? No worries! Please reach us via these channels.
Our customer services team is more than happy to help.



www.ustellar.com



support@ustellar.com

Manufacturer: Shenzhen Ustellar Technology Ltd.

(shen zhen shi you shi tuo ke ji you xian gong si)

Address: C306, 3rd Floor, Building C, Youth Start-up Park, Jianshe East Road, Tsinghua Community, Longhua Street, Longhua District, Shenzhen, China 518000

Ustellar

E-manual



Step 1: Scan the QR code

Step 2: Click E-manual PDF file

Step 3: Read file online or download



Go paper-free, make life easier, and do something good for the environment.

IP66 (-----1m) FC



MADE IN CHINA