



CONNECTION DIAGRAM

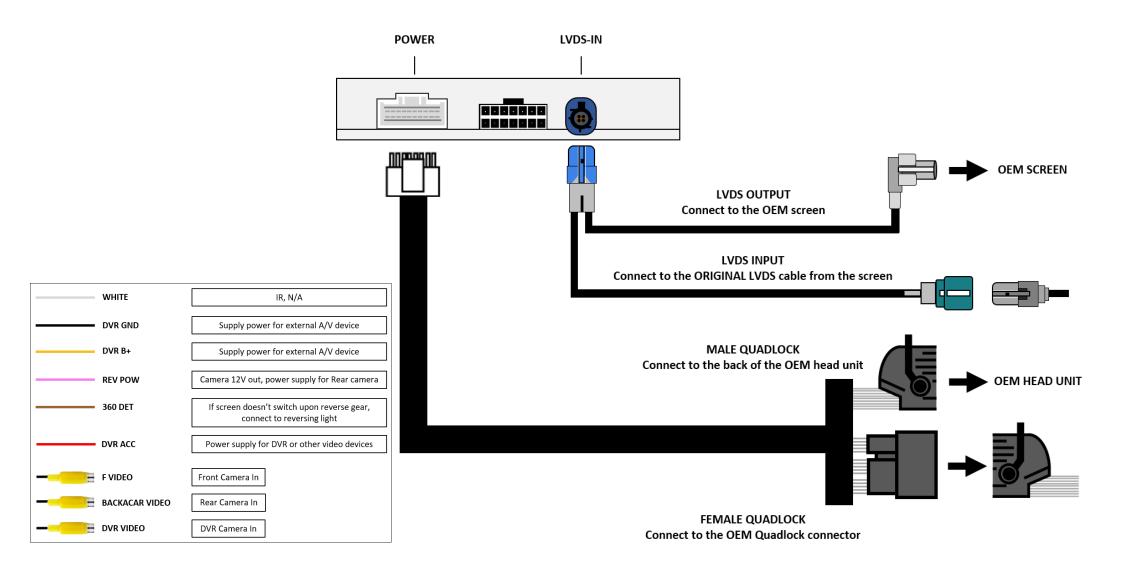



DIP SWITCH SETTINGS

Please disconnect & reconnect interface power after changing any DIP setting

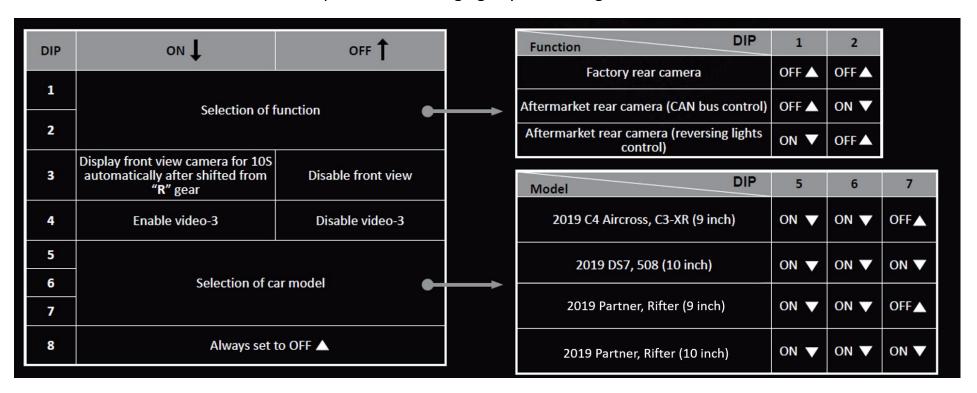



DISPLAYING VIDEO -3

Make sure DIP number 4 is "ON", press and hold the "LIST" button on the steering wheel or "MENU" for 3 Seconds to display external video.