



# 2PC. MANUAL BRAKE FLUID BLEEDER SET

## (INCLUDES 4L BLEEDER AND 1L RESERVOIR)

### OPERATIONS MANUAL

**SAFETY CAUTION:** Brake fluid is corrosive. When fluid spills, use water to flush away immediately.

(Compatible with ARES 18007 12-Piece Master Cylinder Adapter Set)

### FILLING PROCEDURE

1. Make sure no pressure remains inside the unit. Pressure can be release from the release valve by the side of the pump.
2. Remove new fluid cap on top of the unit, and fill the unit with new brake fluid. Make sure no remaining old fluid or debris in the tank.

### OPERATING INSTRUCTION

1. Select adapter provided with the unit, or suitable adapter from ARES Master Adapter Set (sold separately). Install adapter to the master cylinder of the brake system.
2. Pump the handle of the unit until recommended bleeding pressure is reached. Connect the bleed hose to the bleed valve nipple, and the other end to a suitable bleeding reservoir. Open the brake bleed nipple by turning 1/4 turn, or until fluid starts to flow. After seeing the new, fresh brake fluid flowing into the bleeding reservoir, close off the brake bleed nipple. Repeat the process on all 4 wheels.
3. Once the process is complete, release the pressure by pressing down on the release valve by the side of the pump. After releasing, disconnect fluid supply hose from the adapter on the master cylinder.

**NOTE:** Do not disconnect the adapter before releasing the pressure.

4. If necessary, adjust brake fluid level in the master cylinder by filling fresh brake fluid to the fill line. Replace the master cylinder cap.
5. Dispose of old or used brake fluid safely and in accordance with local regulations. DO NOT dispose of brake fluid in a drain or by conventional waste disposal means.



### NEED HELP?

(206) 453-6776

[www.arestool.com](http://www.arestool.com)

[customerservice@arestool.com](mailto:customerservice@arestool.com)

**Don't forget to register your product!**



# 2PC. MANUAL BRAKE FLUID BLEEDER SET (INCLUDES 4L BLEEDER AND 1L RESERVOIR)

## OPERATIONS MANUAL

**You are backed by the ARES Tool Performance Assurance!**

**ARES TOOL** warrants this product (excluding carrying cases and storage accessories and the product categories set forth below) to the original purchaser for its useful life (not to exceed one year for products with electrical or electronic components) against defects and deficiencies in material and workmanship.

This **LIMITED LIFETIME WARRANTY** does not cover products which in ARES Tool's judgement have been subject to negligence, misuse, abuse, accident, improper storage, alteration, improper repair, disassembly and/or reassembly. Normal wear and tear are also excluded. Deficient products will be replaced or repaired.

Please call or email at (206) 453-6776 / ares@arestool.com for more details or to receive support.

This warranty excludes blades, bits, bit sockets, carrying cases, pouches, torque products, punches, dies, bulbs, fuses, batteries, and other consumables which must be replaced under normal use and service. These warranties set forth herein are the sole warranties applicable to Products and is in lieu of all other warranties, whether expressed, implied or statutory.

The implied warranties of merchantability and fitness for a particular purpose are specifically excluded. Customer's sole and exclusive remedy for breach of this Warranty is, at the option of **ARES TOOL**, repair or replacement of the defective product.

Please visit us at [WWW.ARESTOOL.COM](http://WWW.ARESTOOL.COM) to register your product and sign up for our ARES Tool Club

**B22 MADE IN CHINA  
HECHO EN CHINA  
FABRIQUÉ À CHINA**



**WARNING:**  
Cancer and Reproductive Harm-  
[www.p65Warnings.ca.gov](http://www.p65Warnings.ca.gov)



**ALWAYS WEAR EYE  
PROTECTION THAT COMPLIES  
WITH ANSI STANDARD**

