



SinkTop AirSwitch™

exclusively from InSinkErator!

InSinkErator AirSwitch $^{\text{\tiny TM}}$ provides a safe and easy way to turn the disposer on and off. A simple push-button switch sends an air pulse through a thin plastic tube to the disposer switch unit. This activates/deactivates the disposer and eliminates the need for a separate wall switch.

Please note the AirSwitch can be disabled if wall switch operation is preferred. This will require an electrician hard wiring the unit and should never be attempted by people who do not hold the relevant qualifications to do so.



Convenient Alternative to a Wall Switch!

Air-activated and mounts easily to sink or countertop.

SinkTop AirSwitch™ available for all models.

Easy to install. Easy to Use.


Models 56, 66, Evolution 100 and Evolution 200

The innovative SinkTop AirSwitch is an ideal solution for homeowners looking for that touch of elegance that makes a new kitchen shine. And best of all, the SinkTop AirSwitch installs quickly and easily.

How to install

Drill a 33mm wide hole into kitchen bench, or the corner of the sink unit within one meter of the appliance. Remove the nut from the push button bellows, while keeping the stainless steel washer and rubber gasket in place. Fit the push button bellows in the hole and then thread the nut underneath until hand tight.

Push one end of the PVC tubing onto the spout of the push button bellows. Take the other end of the tubing and firmly push it over the covered spout, which is located on the underside of the waste disposer as per this diagram on the right.

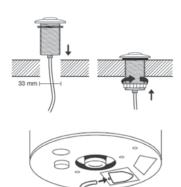

Note if you do not wish to use the AirSwitch you will need to disable the AirSwitch operation.

The disposer is shipped with the switch in the "off" position. If you wish to disable the AirSwitch as you would prefer to use a wall switch simply follow these easy instructions:

- 1. Push one end of the PVC tubing into the spout of the push button bellows.
- 2. Take the other end of the air tube and firmly push it over the end of the spout of the AirSwitch, which is located on the bottom of the unit as you have just seen.
- 3. Depress the AirSwitch one time until you hear the switch "click". Remove and discard the push button bellows and PVC tubing. The disposer may now be activated by a wall switch.


Model 46

The Model 46 is not sold with an AirSwitch however an AirSwitch with Electrical Adaptor can be purchased separately thereby allowing the unit to be used with the AirSwitch functionality.

How to install

To connect take the air tube and put onto the spout of the push button bellows. Take the other end and push onto the spout located on the electrical adaptor. Plug food waste disposer cord into electrical adaptor. Plug the cord from the electrical adaptor into the main power point.



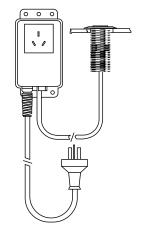

InSinkErator. 471 Mountain Hwy, Bayswater VIC 3153. Australian Sales Tel:1300 136 205, Fax: 03 9720 3178.

InSinkErator reserves the right to change product specifications without prior notice.

All products are for household use: usage in commercial situations is not covered by warranty.

The Emerson logo is a trademark and service mark of Emerson Electric Co. InSinkErator is a division of Emerson Electric Co.



