

PREMIUM BAR FRIDGE

SC-108FS (SC-108F)



108 LITRE

- A stylish and functional addition to your outdoor space
- #304 Stainless steel finish
- Triple glazed full glass door
- Designed for outdoor undercover use - IPx4 rated
- Front vents allow installation in outdoor cabinetry with minimal clearances
- Adjustable digital thermostat in door for temperature control
- Self closing door with lock and magnetic door seal
- Low E film on glass door to reduce condensation
- Internal light
- Adjustable shelves
- Height adjustable feet

Important: Retain these instructions for future use

PRODUCT DESCRIPTION


Inspect contents of the box to ensure all parts are included and undamaged:

1. Adjustable digital thermostat
2. Triple glazed full glass door with Low E film
3. Adjustable shelves


Glass Door

The glass door has Low E film applied to the glass door to reduce the chance of condensation building up during times of high humidity and on very warm days.

The door may be warm to touch. This is not a fault.

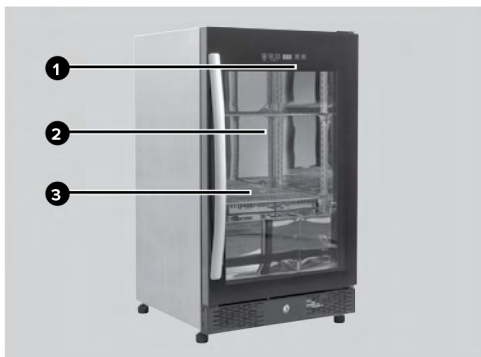

USING YOUR PREMIUM BAR FRIDGE

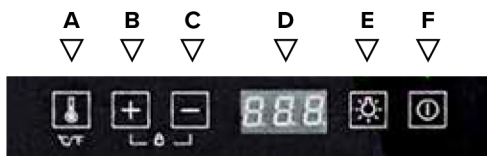

Temperature Control

Your unit is provided with a digital control.

Buttons

- A.** Changes display between Celsius and Fahrenheit
- B.** Increase set temperature
- C.** Decrease set temperature.
Unlock press A and B together wait for “beep”
- D.** Digital display, shows average cabinet temperature
- E.** LED light On/Off
- F.** Turns compressor off, internal fan continues to operate.

STABILISING FEET

These are already fitted to your premium bar fridge. Before turning your premium bar fridge on please ensure your premium bar fridge is level front to back and side to side.

1. If your premium bar fridge is not level use the fitted stabilising feet to level.
2. To level unscrew the low corner stabilising bolt out until premium bar fridge is level.
3. Once level lock the stabilising foot by screwing the locking nut up to the underside of the premium bar fridge body.

To Unlock

Press and hold these 2 buttons, B and C, at the same time until you hear a “BEEP”.

Now release the 2 buttons and start to adjust as required.

The unit will “self” lock after 1 minute.

To Adjust Temperature

Unlock as above.

To increase the temperature press button B.

To decrease the temperature press button C.

To Operate the LED Light

Unlock as above.


Press button E.

To Turn Complete Fridge On/Off

Unlock as above.

Press and hold button F till you hear the beep.

If turning off wait 2 minutes after turning complete fridge off before turning mains power off.

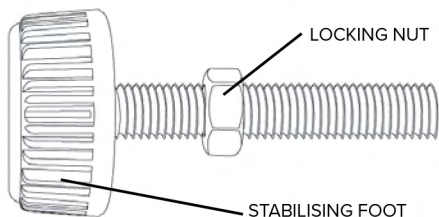

SAFETY PRECAUTIONS

- The purpose of the safety precautions in this manual is to ensure safe and correct use of the unit to minimize risks that could cause serious damage and injury to you or other persons. The safety precautions are divided into WARNINGS and CAUTIONS. Cases where improper handling of the unit could lead to death or serious injury are listed under the “& WARNING” heading. However, the cases listed under the “& CAUTION” heading could also lead to serious results. To ensure the safety, adhere strictly to both types of safety precautions.
- Text set off by the exclamation mark contains information that should be strictly adhered to.
- After reading the instruction manual, store it an easily accessible place where the user(s) of this product can easily find it.



WARNING

- Improper handling of the unit could lead to death or serious injury.
- Improper handling of the unit could lead to serious results depending on the circumstances.
- Installation should be performed only by the dealer or a qualified expert. Attempting to install the unit yourself could result in water leakage, refrigerant leakage, electrical shock or fire.

Precautions for Installation

 


WARNING




DONT TAMPER

Installation should be performed only by the dealer or qualified expert. Attempting to install the unit yourself could result in water leakage, refrigerant leakage, electrical shock or fire.




DANGER OF EXPLOSION

 Never put flammable or volatile substances into the unit as explosion and fire could result.



PROHIBITED

Use a dedicated wall outlet. Do not use extension cords or convenience receptacles as this could result in electrical shock, overheating and a fire.

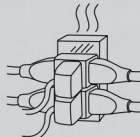

Store the unit in a location where it is not exposed to rain. Using a unit that has been exposed to rain could result in electrical leakage and electrical shock.



ELECTRICAL SHOCK HAZARDS

Never splash water directly onto the product or wash with water as short circuit and electrical leakage could result.



 
PROHIBITED

Do not damage, modify, excessively bend, strain, twist or bundle up the power cord. Also, placing heavy objects on the power cord or squeezing it in a tight place could damage it, possible resulting in electrical shock or fire.



FLAMMABLE

Never use flammable spray cans or leave flammable substances near the unit. Sparks from electrical switches could result in explosion and fire.



Away from hot air sources. Cooling performance is reduced if the unit is placed near heat sources such as hot plates and stoves and if it is exposed to direct sunlight.



SAFETY PRECAUTIONS

WARNING



This cooler is intended for the storage and display of beer and other beverages. Do not use for any other purpose than the intended use as this could adversely affect the items placed in the cooler.




Never attempt to insert fingers, sticks, etc. Fan is rotating at high speed inside the outlet. Injury, electrical shock and improper operation could result.




PROHIBITED

Using the unit in a location exposed to rain could result in electrical leakage and electrical shock.

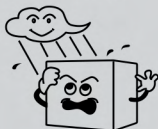


PROHIBITED

 Never place heavy objects or items containing water on top of the unit. Objects could fall down and cause injury and spilled water could deteriorate the insulation of electrical components and result in electrical leakage.




 Install the unit in a location where the floor is sturdy enough to support the load of the unit. If the floor is not sturdy enough or installation is incorrectly performed, the unit could tip over and falling shelves and products could cause personal injury.



CAUTION AGAINST EXPLOSION

 If you find gas leakage, please don't touch the cooler and close gas and open the door for ventilation. Gas leakage cause explosion, fire and fire injury.



Leave disassembly and disposal of the unit to qualified experts.



Should the unit need temporary storage, make sure not to store the unit in a location where children play and take precautions so that the door cannot be completely closed. This will minimize the risk that a child becomes trapped inside the compartment.

Details concerning precautions during user maintenance (IEC 60335-2-89)

- Children being supervised not to play with the appliance
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision instruction

For compression-type appliances which use flammable refrigerants, instructions shall include information pertaining to the handling, servicing and disposal (IEC 60335-2-89)

WARNING - Keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for building-in (IEC 60335-2-89)

WARNING - Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer (IEC 60335-2-89)

WARNING - Do not damage the refrigerant circuit (IEC 60335-2-89)


WARNING - Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer)

SAFETY PRECAUTIONS

WARNING




Please make more than 10cm space between cooler and wall. If there is no space, cooling capacity can drop down.

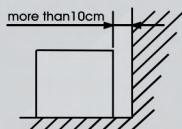


DANGER OF ELECTRICAL SHOCK

 If installation in a damp location is unavoidable, also install an electrical leakage circuit breaker. If no electrical leakage circuit breaker is installed, electrical shock could result.




PROHIBITED

Never hang from the door or climb onto the unit. The unit could tip over or fall and cause material damage or injury.

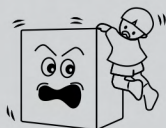

DISCONNECT POWER CORD PLUG FROM WALL OUTLET

 Disconnect the power cord plug from the wall outlet before moving the unit and make sure that the power cord is not damaged during transport. A damaged power cord could result in electrical shock and/or fire.



DON'T PINCH FINGERS

Grasp the handle when closing the door. Holding at other positions could result in pinched fingers and injury.




DON'T TOUCH


Do not push hand against or apply excessive force to glass surfaces as the glass could break and cause injury.



When disconnecting the power cord plug from the wall outlet, hold at the plug main body close to the outlet. Pulling the cord could cause wire breakage, possibly resulting in overheating and fire.

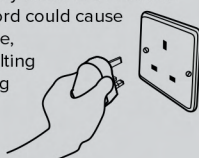

Make sure that the unit does not tip over or fall when it is moved. A falling unit could cause serious injury.

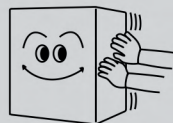


PROHIBITED

Do not throw items onto the shelves and do not place items totalling more than 30kg on each shelf. The shelf could fall down, possibly causing injury.



Be sure to attach and secure shelves correctly. An improperly attached shelf could fall down and cause injury.

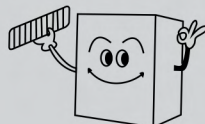

SAFETY PRECAUTIONS



WARNING

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. (For IEC standard)

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. (For EN standard)

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING: Do not damage the refrigerant circuit.

WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses and by clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments;
- Catering and similar non-retail applications.

WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.

WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.



WARNING: RISK OF FIRE/FLAMMABLE MATERIALS

Correct Disposal of Product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Before Use

Remove shipping package, tape, etc and leave doors open ventilation for a while.

The unit is cleaned before shipment. However, clean the compartment interior once after delivery.

Please insert power supply plug into the wall outlet, single-phase to specified voltage.

Allow the unit to operate for about 1 hour to cool the compartment before placing items in the cooler.

Wait 5 Minutes or More Before Re-Starting

Restarting the unit immediately after it has been turned off may cause fuses to blow and activate the circuit-breaker, the compressor may be overloaded, and/or other damage may occur.

Temperature Adjustment

For this cooler the interior temperature is selected via the digital control touch panel located on the door. The ideal temperature setting is 3-5°C. If the ambient temperature is high then the internal temperature may increase slightly and you may reduce the selected temperature down to 1-3°C. Conversely if the ambient temperature is low then the internal temperature may decrease slightly and you may increase the selected temperature to 5-7°C. Once you have moved the refrigerator, leave standing in a level position for 4 - 6 hours so that the gas can settle.

Drain Tray

Defrosting is performed automatically and drain water is collected in the drain tray.

Water in the drain tray is automatically evaporated away due to the compressor temperature. In high humidity conditions it is recommended to empty the drain tray manually every day.

IMPORTANT

Efficient Use

Please follow the below instructions, you could save energy:

- To prevent cold air from escaping, open and close the door quickly and keep the door opened for as short time as possible.
- Please install the unit in a place which is well-ventilated.

Shelf Height Adjustment

The shelf can be adjusted.

- Arrange the shelves in accordance with the dimensions of the items to be placed in the cooler.

Placing Items in the Showcase

This showcase employs a forced circulation of cold air system. If circulation of cold air is obstructed, the items will not be adequately refrigerated. Pay attention to the following points:

- Do not let items obstruct the cold air inlet and suction outlet.
- Place items so that they do not protrude from the shelves. The gap between the shelves and the door is used for circulation of cold air.
- Place items evenly on all shelves.
- Please do not display goods on the bottom. Please put goods on the shelf.
- Recommended temperate setting for optimal preservation of food (2-5°C).

CLEANING

Exterior and Cooler Compartment

- Wipe with a soft, dry cloth. If very soiled, wipe with a cloth that has been moistened with a detergent. Then wipe with a cloth that has been dipped in water.
- Clean the cooler regularly to keep it clean at all times.
- Never use polishing powder, soap powder, benzene, oil or hot water as these will damage the painting and plastic components.

Checks

To ensure safety, perform the following checks after cleaning:

- Is the power cord plug firmly inserted into a dedicated wall outlet? Confirm that the plug is not abnormally hot.
- Check the power cord for cracks and damage. Should the slightest irregularity be observed, contact the dealer from whom you purchase this unit or our customer service.

WARRANTY & SERVICE

- Warranty is valid for one year from the date of purchase.
- The warranty covers defective parts and workmanship. The following items are not covered under warranty.
 1. Loss of products.
 2. Damages caused by transportation.
 3. Damages caused by modifications made by unauthorised individuals.
 4. Fluorescent lights, glass parts or plastic component parts.
 5. Worn out plugs of defective electrical components.
 6. Maintenance of the unit.
- Warranty is valid showing the purchase receipt.
- We offer a professional service network which offers the necessary technical support for your unit.

See contact information in the back of the manual.



WARNING

- To prevent any electrical shock hazards or injury by rotating circulation fan, always disconnect the power cord plug from the wall outlet before cleaning.
- Do not splash water directly onto the cooler and do not wash with water. Short-circuit and electrical shock could result.



TROUBLE SHOOTING

In case the unit shows operating problems, check the following prior to calling the authorised service company		
Symptoms	Possible Cause	Solution
The unit is not operating	Faulty electrical contact	Verify electrical connections
	Poor electrical power	Check the power connections and electrical outlet
	Thermostat setting "0"	Change the thermostat to a higher number
Not reaching desired temperature	Unit is exposed to direct sunlight	Relocate the unit to a shaded area
	Thermostat is not properly adjusted	Adjust the thermostat setting to a higher number
	Clogged condenser	Review the Maintenance instructions listed in the manual
	Blocked grills	Clean the grills of any debris collected
	Door not properly closed	Check the levelling of the unit and door seal
	Products poorly distributed or excess product load	Redistribute the product load according to Start instructions
	For models with electronic temperature controller, indicates E0 or E1	Unplug the unit from the outlet. If the error continues, contact an authorised service technician
Abnormal noises	The unit is not properly level	Level the unit following the installation instructions
	Friction with other objects	Move the unit and avoid contact with other objects
Water is on the floor	Drain hose is outside of the drain pan	Locate the hose in the drain pan

TECHNICAL SPECIFICATIONS

Specifications are subject to change without prior notice.

If the technical specifications are different from the plate on the back of the refrigerator, please refer to the plate.

Model	SC-108FS (SC-108F)
Doors	1
Capacity	108L
Rated Voltage	220~240V AC
Rated Frequency	50Hz
Rated Current	1.0A
Rated Input Power at 240V AC	130W
Light	DC 8-15V~3W
Lamp Type	LED
Refrigerant	R600a
Refrigerant Charge Volume	50g
Foam Blowing Agent	Cyclopentane
Nett Weight	37.6kg
Reference to EN16902-2016	
Commercial beverage cooler	
M-can temperature class K1	
Test room climate class CC	



CE Product Certification:
#GZES1707011190HS

UKCA Product Certification:
211014095GZU-VOC001



Imported by:
M Richards Ltd
PO Box 1238
Cheddar, UK

Tel: +44 (0)1934 743322

Email: sales@beefeater europe.co.uk