



Leve H2

wireless pen machine



User Manual


Break the limit

OVERVIEW



SPECIFICATIONS

- **OUTPUT VOLTAGE: 4-12V**
- **CHARGER INPUT: USB-C 2A**
- **SIZE: H 133.6MM X W 34MM**
- **WEIGHT: 225G (≈7.94OZ) WITH BATTERY
176G(≈6.21OZ) WITHOUT BATTERY**
- **BATTERY LIFE: OVER 10 HOURS**
- **GRIP SIZE: 34MM**
- **STROKE:3.5MM|4.0MM**
- **INCREMENT/DECREMENT VOLTAGE INTERVAL: 0.1V**

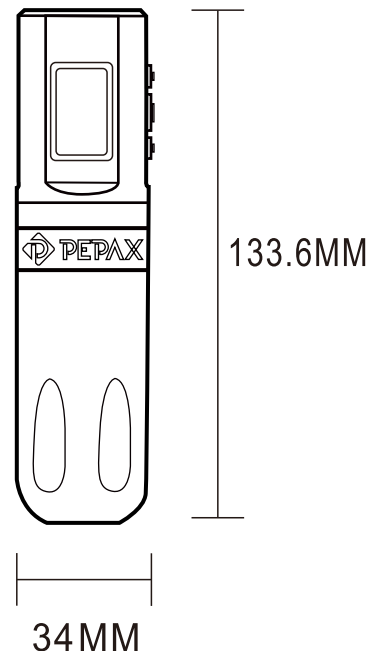

DISPLAY FUNCTION

| COLORFUL LED SCREEN



FUNCTION DETAILS OF COLORFUL LED SCREEN

Hold the power button for 5 seconds to work on or off

(Power off after 5mins not working)



Power on/off

⏪: Power on ⏩: Power off
After machine opened then press power button to start working.

10.5 v

Voltage

Voltage range: 4-12v | Click the voltage buttons to decrease/ increase voltage by 0.1v, long press to adjust voltage quickly.

L/S

Mode Change

S MODE SHADER ← Press power button twice quickly → L MODE LINER
To change liner or shader mode

108 HZ

Hertz

Hertz: 0-200HZ hold the central and Up buttons both for 3-5seconds then you can choice the hertz number. Long press to adjust quickly.

00:00

Working Time

Time: The time is 0-24 Hrs in one minute intervals, once time stops it resets back to zero.



Battery

Battery capacity percentage shows that if the battery less than 5%, please charge it in time. Working time about 10 hours, based on operating parameters.










Charging: Charging time is about four hours. For best results, please use provided charging cable.

FUNCTION

360-Positioning Of The Battery

Innovative connection allows for 360-positioning of the battery to customize screen position and easily swap batteries.

BUTTONS FUNCTION

-  **Voltage up:** Click the button to increase voltage by 0.1v, long press to increase voltage quickly.
-  **Power off/on:** Function one, Pressing 3 seconds to Power on / o f f. Function two, Pressing again to work start / pause. Function three, Fast double-click the button 2 times to choose liner or shader.
-  **Voltage down:** Click the button to decrease voltage by 0.1v, long press to decrease voltage quickly.
-  +  **Hertz Adjustment:** Hold the central and Up buttons both for 3-5 seconds then you can choose the hertz number. Long press to adjust quickly.
-  +  **Jump Start:** Press the central and down buttons both to open or close.
OPEN:  /  Red mark is opening.



3.5MM



4.2MM

HOW TO CHOOSE THE STROKE



Top Mark: 3.5
Machine color: Black

Advantage: Provide the perfect balance between lining and shading and is the all-rounder.



Top Mark: 4.2
Machine color: Orange

Advantage: Great balance between lining and color packing.

REPLACE POWER

WIRELESS
↕↕
RCA MACHINE

Hold the grip part



Up or down the battery as shown and remove

Up or down the RCA adapter as shown and remove

RCA ADAPTER

In order to ensure the sustainability of tattoos, we provide RCA adapters. When the battery power is used up, we can change the RCA adapter to connect the RCA cable.

THE POWER BATTERY

The battery part is 2000 mAh and can be used for about 10 working hours. When the battery is used up, you can replace another new spare battery and continue to complete your tattoo work, it is simple and convenient.

VOLTAGE PARAMETERS

While voltage is a parameter that will vary from artist to artist, the battery has been tested to operate at a minimum voltage of 4 Volts to a maximum voltage of 12 Volts. Depending on the type of needle configuration, or brand you use, feel free to adjust the voltage to obtain the desired performance.

WARRANTY

PEPAX LEVE wireless machine warranty period is 12 months from the date of purchase. If you discover a defective product covered by this warranty , we will repair the item . Proof of purchase in the form of a sales receipt must be provided for warranty repair .

This warranty will be void if the device shows signs of having been tampered, disassembled, handled roughly, dropped, overexposed to moisture or damage resulting in compromised functionality .

REPAIR PROCESS

Step 1

Please contact us by email before shipment.

Step 2

After we confirmed with you by email, you can ship the machine to us. Please make sure to securely package your machine. We are not responsible for lost or damaged machines during transit.

Step 3

Please don't forget send the tracking number to us after Shipping package. More information, please contact info@pepaxtattoo.com. We will reply and solve your question soon.

