



Please Read

Dirt and loose debris may become lodged inside the check valve(s) keeping check valve(s) open. One open check valve is enough to allow cold water to enter into hot water pipes or hot water to enter into cold water pipes. Generally, when check valves are open, cold water enters into hot water pipes making water "cold" in the whole facility or section of the facility where the trouble check valve is. If instead, hot water becomes present in the pipes, this indicates a pressure imbalance in the plumbing system.

Please change ALL check valves.

Prior to reinstalling water hoses to new adapters, please run hot and cold water through water hoses at high pressure to insure that initial debris has left the plumbing system.