


Faucet and Soap Dispenser in One


TiO-32/TiO-34 INSTALLATION MANUAL



www.macfaucets.com

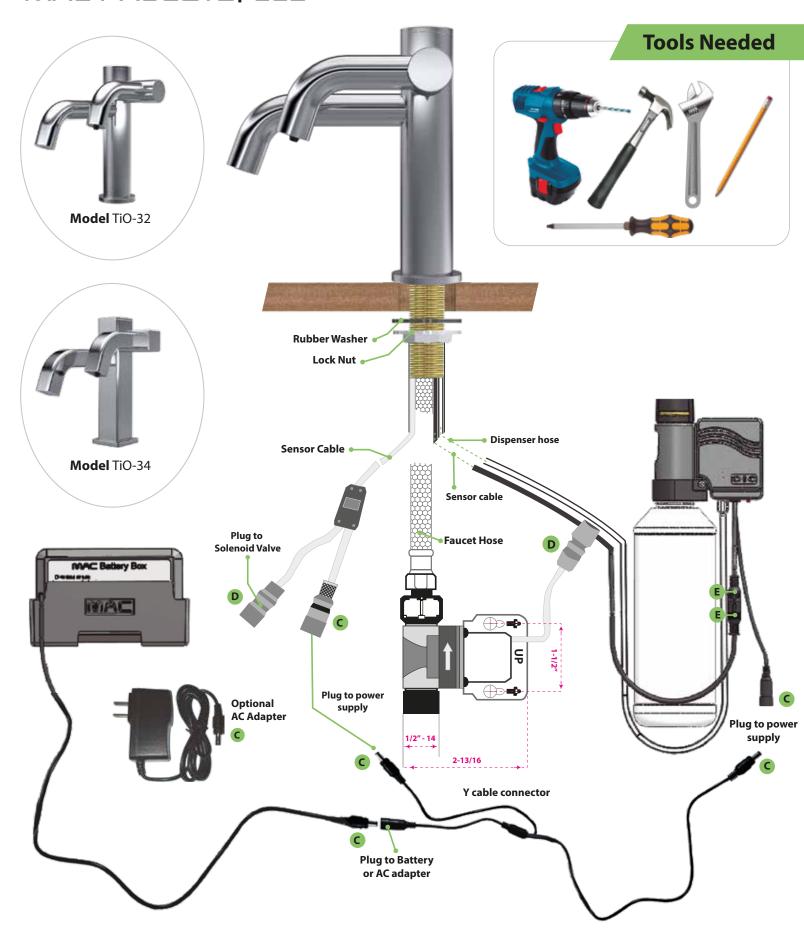

TIO-32/TIO-34 INSTALLATION MANUAL

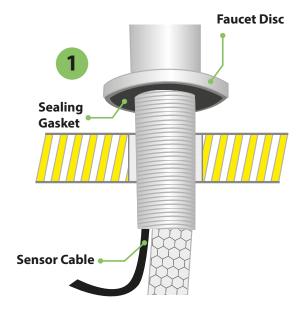

Rubber Washer


Sensor Cable

Lock nut

Insert faucet shank through sink hole

Place washer and lock nut onto shank


Tighten lock nut

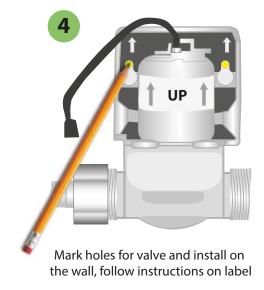




Connect cold supply line


NOTE: Drain the water line before the hose is connected

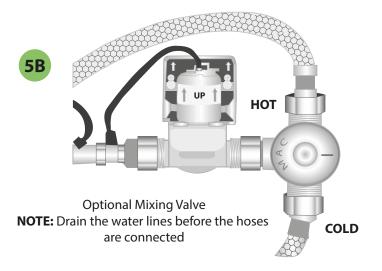

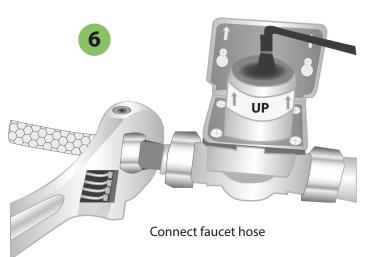


TIO-32/TIO-34 INSTALLATION MANUAL

MAC FAUCETS, LLC

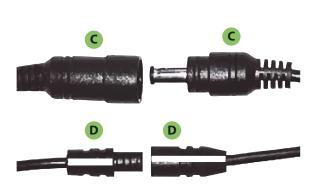


Align marks located on solenoid plug and push firmly. Power plug does not require alignment, Plug and push firmly.

Make sure no objects are present in the sink when pluging cables. After pluging cable, wait one minute before placing anything in the sink. Test for leaks before using faucet

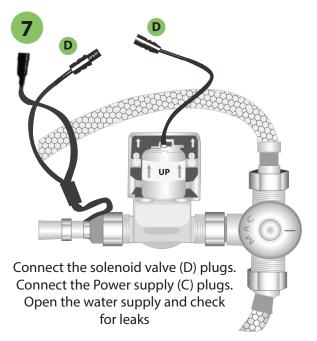

Soap Pump Installation

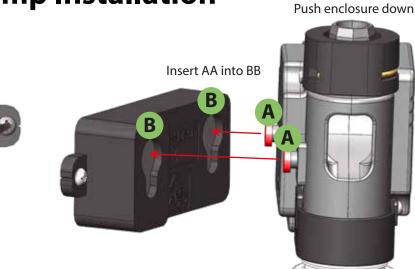


Mount wall bracket onto wall in a level horizontal position. Follow arrows showing UP side.

Install pump housing onto wall bracket (insert AA into BB and push enclosure down).

LIMITED WARRANTY

Mac Faucets warrants this product to be free of defects for a period of one year from date of purchase. Mac Faucets will replace, free of charge, during this warranty period, parts that prove defective when properly installed and under normal use and service. Damage that occurs as a result of abuse, improper installation, environmental conditions, or improper application will void this warranty. Products must be shipped with postage and handling prepaid, along with dated proof of purchase. This warranty does not cover installation or any other labor charges. It does not cover shipping and handling of both replacement parts and returned defective parts. Products or components that have been altered, or in any way modified, will not be covered under this warranty. Replacement parts are under warranty only for the remaining period under the initial warranty. Some states do not allow for exclusion of incidental or consequential damage.

TIO-32/TIO-34 INSTALLATION MANUAL

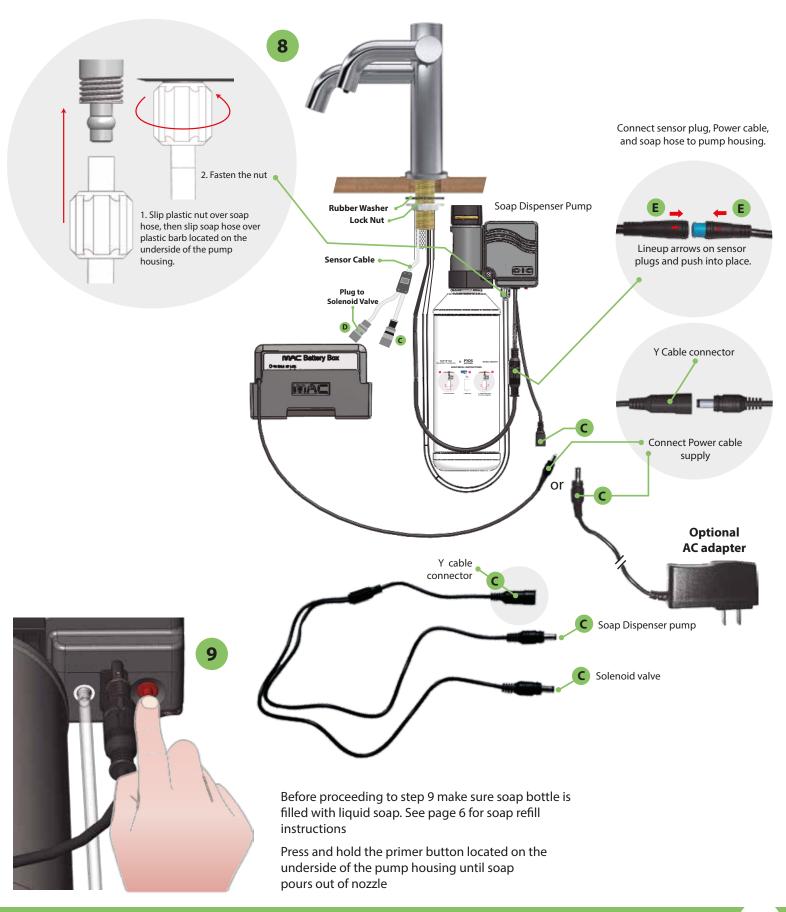

SOAP REFILL INSTRUCTIONS

DO NOT USE HEAVY CREAM SOAPS OR GRIT TYPE SOAPS

It is best to use same brand of soap every time, and not to let dispenser remain dry for to long



1. Unscrew the empty bottle




2. Add liquid soap into the emplty bottle




3. Affix bottle filled with soap onto pump housing. Do not overtighten.

BATTERY REPLACEMENT INSTRUCTIONS

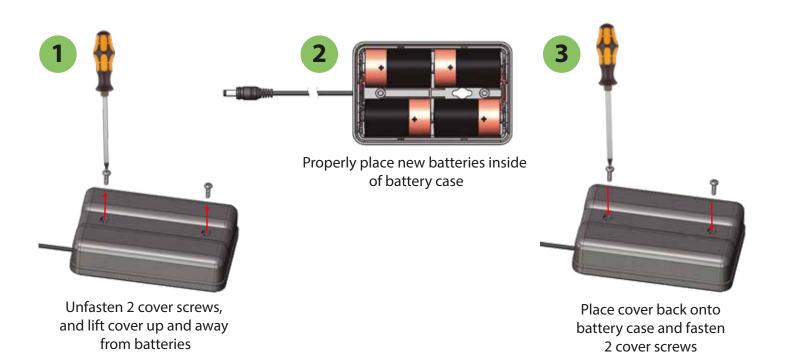


GALLON CONTAINER INSTALLATION

NOTE: GALLON CONTAINER MUST BE PLACED ON LEVEL SURFACE CAPABLE OF SUPPORTING 10LB WEIGTH OR GREATER

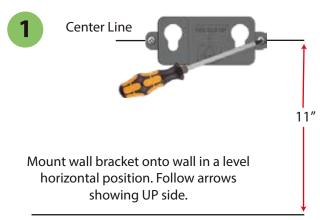

Floor

Insert the smaller diameter of the coupling into the threaded side of the pump, then insert the adapter to the coupling

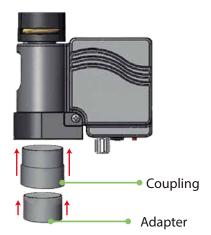

NOTE: Coupling and adapter are used only for Gallon Container






Place the gallon container against the wall underneath the bracket.



Install pump housing onto wall bracket (insert AA into BB and push enclosure down), insert the adapter onto the fitting of the lid at the same time

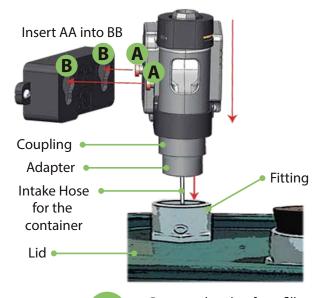



Available Washroom Accessories



TiO-324Two-in-one Automatic
Faucet and Soap Dispenser
(with 4" riser for high vessel sink)



TiO-344Two-in-one Automatic
Faucet and Soap Dispenser
(with 4" riser for high vessel sink)



ADA Grab Series Models GB-18, GB-36 and GB-42



ATD-10Automatic Towel Dispenser



AAD-12Automatic Aroma Dispenser



ASD-13Automatic Soap Dispenser



TH-2 Tissue Holder



SCD-4Toilet Seat Cover



HD-5Automatic Hand Dryer