



MAC FAUCETS California, USA 866 558 3200 310 919 3073 Info@macfaucets.com www.macfaucets.com





AAD-12

Package Includes


- ✓ Aroma Dispenser
- ✓ Stainless Steel Construction
- ✓ Integral Battery Compartment
- ✓ Mounting Hardware
- ✓ **Batteries Pre-installed** (2 C Batteries)
- ✓ All hardware necessary for satisfactory installation

Tools Needed

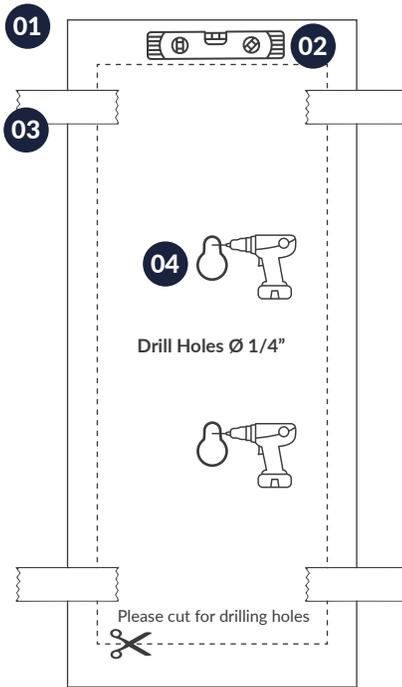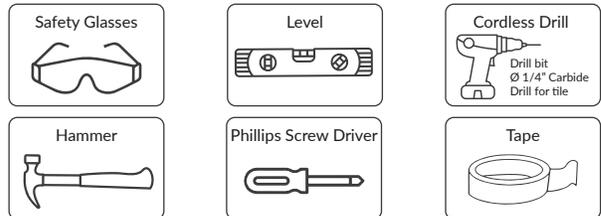


Once the location for the Aroma dispenser has been decided, proceed with the steps installation.

1. Cut the template from the back of the box.
2. Use a level to align the provided template.
3. Use painters tape to hold the template in place.
4. Drill 2 holes for supplied plastic anchors.

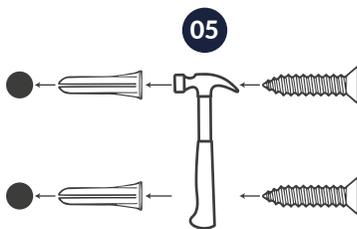


5. Place the 2 plastic anchors in the holes and push them with the help of a lite hammer.
6. With a Phillips screw driver, drive the screws provided into the plastic anchors, leaving out about 1/4" of the screw for final adjustment.

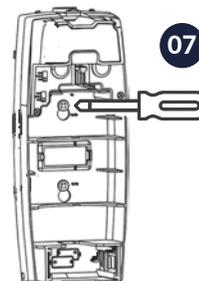

7. Install the Aroma dispenser in place and securely fasten screws.

Automatic Aerosol Dispenser Operation Instruction

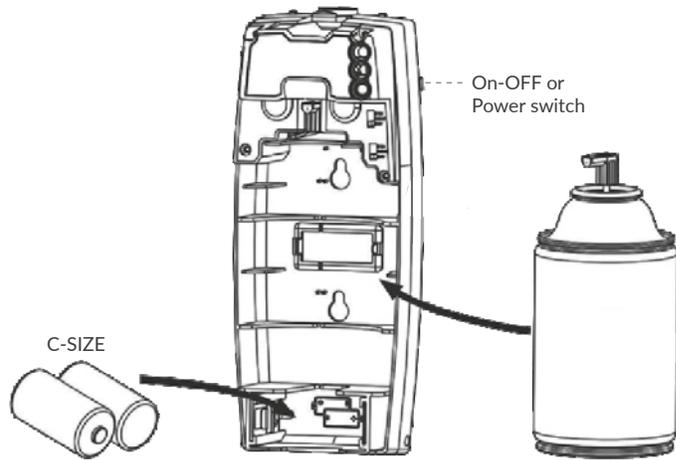

ON

01

Turn On the aroma dispenser with the ON-OFF switch. Upon activation, the aroma dispenser will automatically spray one time.



02


Green light will flash continuously for 5 seconds indicating proper operation.



03

Flashing red LED light indicates the need to change spray can. After the spray can has been changed, please restart the dispenser with the ON-OFF switch to clear spray record, and turn off the red LED light. Generally, one spray can may yield up to 3000 sprays.

Automatic Aerosol Dispenser Switch button and light function

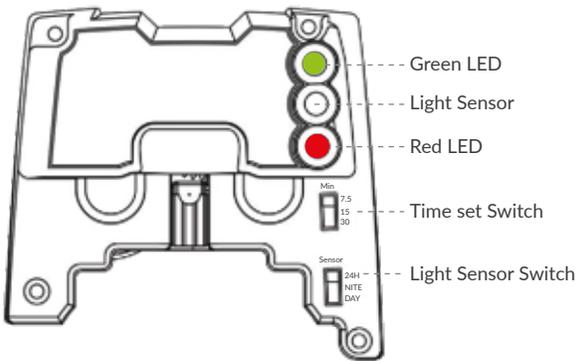

01 Time Set Switch

Helps the user adjust spray intervals to 7.5, 15, or 30 minutes apart.

02 Light Sensor Switch

For continuous spray operation, set switch to 24H. For spray operation while room light is OFF, or room is vacant, set switch to NITE. For spray operation while room light is ON only, set switch to DAY.

03 Green LED

Flashing Green LED light indicates normal operation status.

04 Light Sensor

Light sensor is responsible for determining light conditions for proper operation. Not an LED.

05 Red LED

Flashing Red LED light indicates the need to change spray can.

Limited Warranty

MAC FAUCETS warrant all MAC Faucets products to be free of defects for a period of one year from date of purchase. MAC FAUCETS will replace, free of charge, during this warranty period, parts that prove defective when properly installed and under normal use and service. Damage that occurs as a result of abuse, improper installation, environmental conditions, or improper application will void this warranty. Products or components that have been altered or in any way modified will not be covered under this warranty. This warranty does not cover installation or any other labor charges. This warranty does not cover shipping and handling of both replacement parts and returned defective parts. Defective products must be shipped back to MAC FAUCETS facilities with postage and handling prepaid, along with dated proof of purchase. Replacement parts are under warranty only for the remaining period under the initial warranty.