


INSTALLATION MANUAL

Central AC Cover

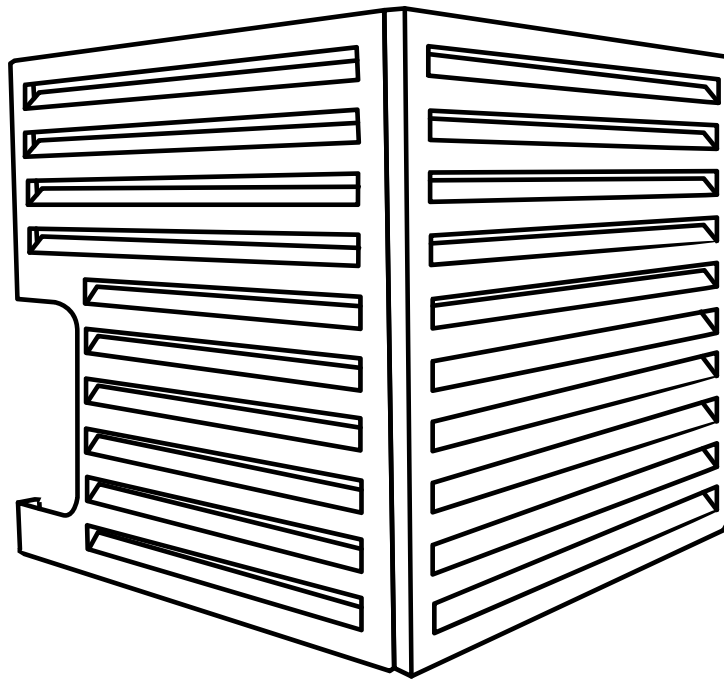


Disclaimer:


We recommend that you carefully read this disclaimer and review the installation manual prior to using any of our products.

The assembly and installation of this product requires caution, as the use of tools and screws is necessary. The company under no circumstances accepts liability for any injuries occurring during the assembly and installation of your cover. It is important to use gloves and protective eyewear while assembling and installing this product.


PART LIST

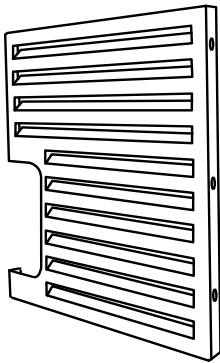


Left Panel (x1)

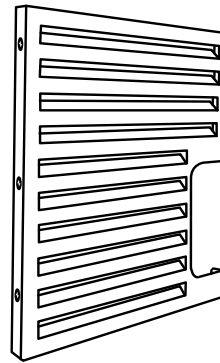


Right panel (x1)

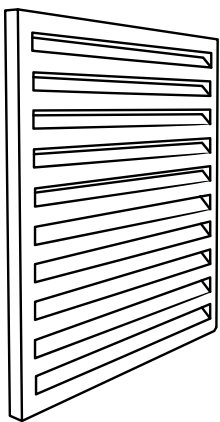


Front panel (x1)

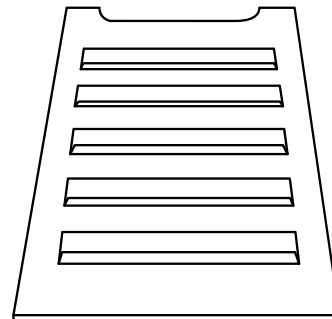


Top panel (x1)

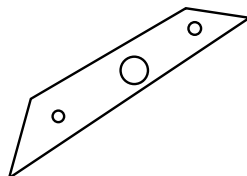


Angle bars (x2)

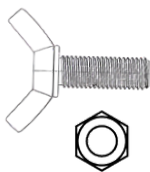

Wing screws
& bolts

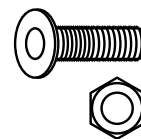

Flat screws
& bolts

 

Anti-theft bar




Tools

COVER ASSEMBLY


STEP 1

Use three sets of wing screws and bolts to connect the front panel with the left panel. Make sure that the louvers on each panels are facing in the same direction. Use the panel with the logo as a reference to differentiate top from bottom.

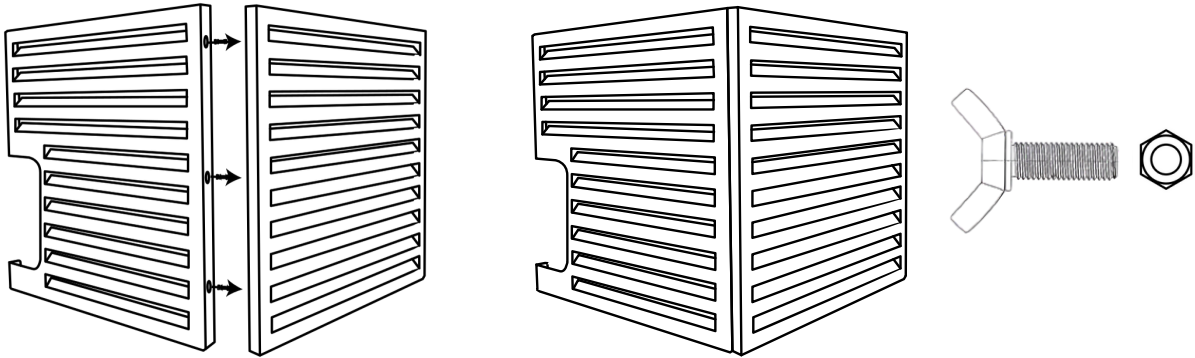

STEP 2


Repeat the step and use three sets of wing screws and bolts to connect the front panel with the right panel.

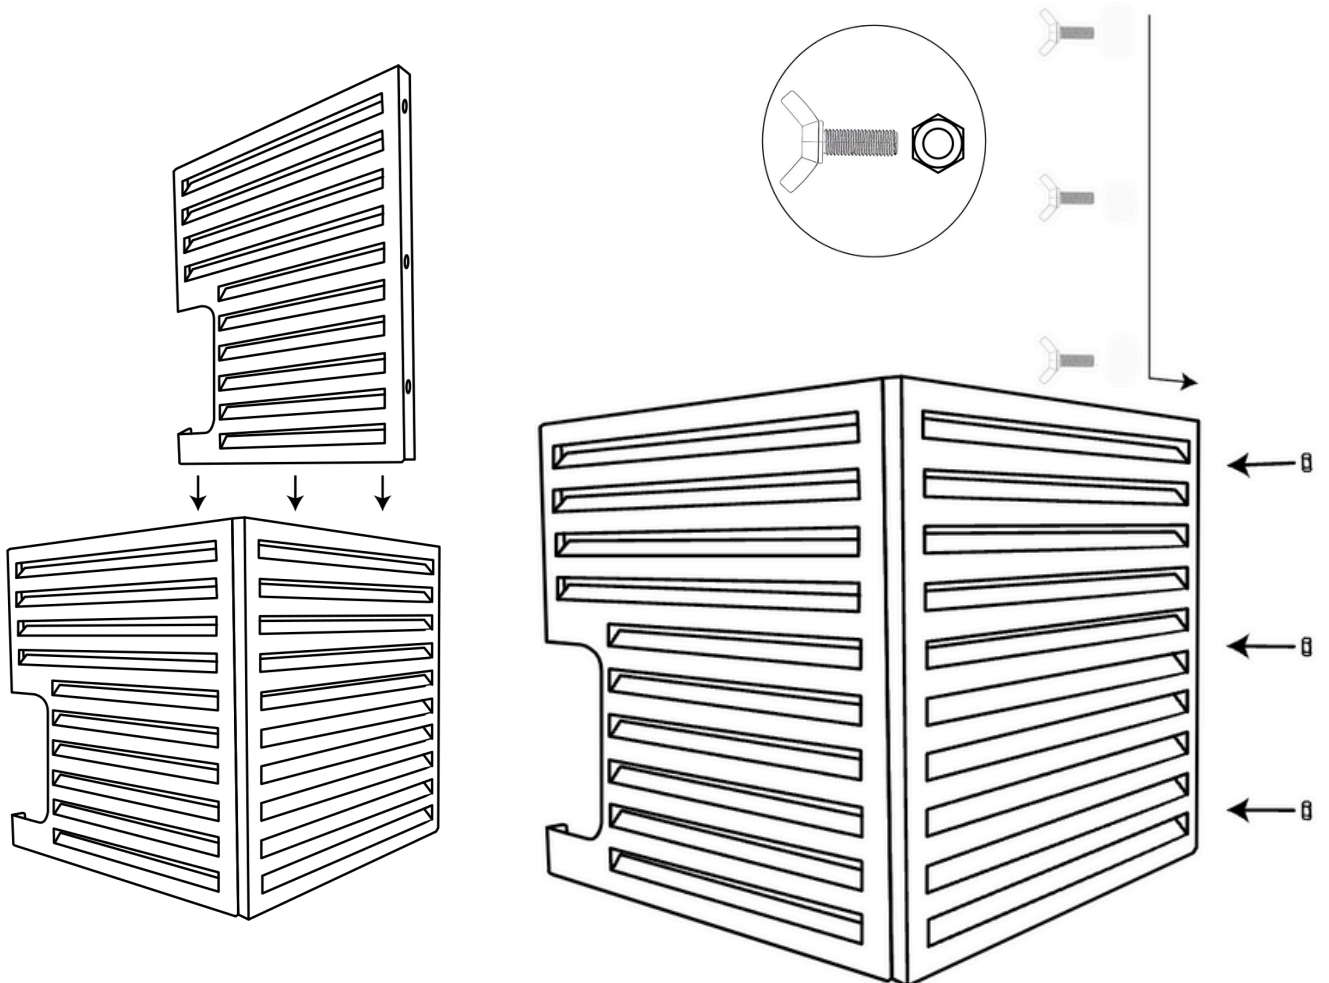


THE ANTI-THEFT ADD-ON

(Sold Separately)

 
YOUR PART LIST:



2x
Flat screws
& bolt

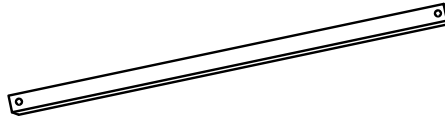

1x
Anti-theft bar



 


1x
Anti-theft pad

ANTI-THEFT INSTALLATION


STEP 1

 Attach the anti-theft bar to the back of the cover using flat screws and bolts

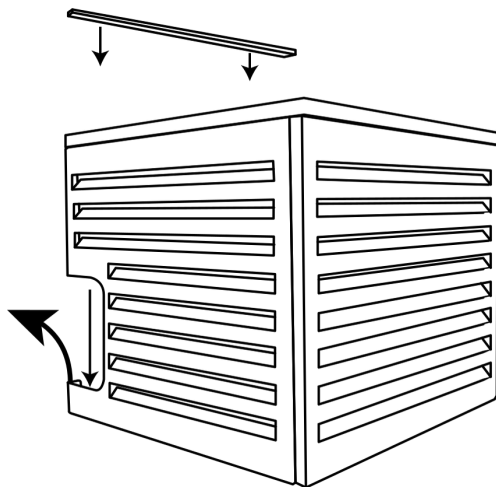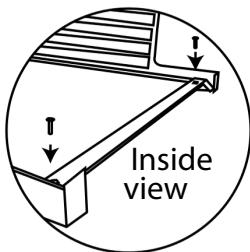


STEP 2

Use the 4 concrete screws (2 per side) to secure the anti-theft pad to the back of the concrete slab on which your HVAC system is installed.

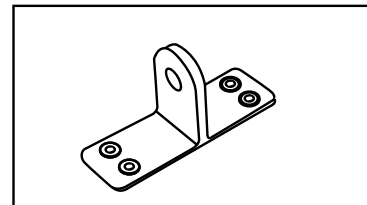

STEP 3

Insert the anti-theft bar in the anti-theft pad.

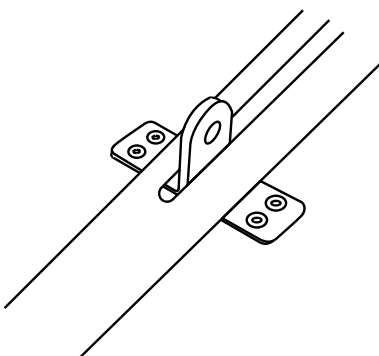

STEP 4

Install the lock in the hole of the anti-theft pad.

