## Transmitter Solutions Firefly3™ Type: FIRIII310LID22K3 FCC ID: SUCCF3102B3

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept interference received, including interference that may cause undesired operation.

#### NOTICE

Any changes or modifications to Transmitter Solutions equipment not expressly approved by Transmitter Solutions could void the manufacturer's warranty and could void the user's authority to operate the equipment.

#### WARRANTY

The warranty period of Transmitter Solutions Firefly3™ transmitters is twenty-four (24) months. This warranty shall begin on the date the transmitter is manufactured. During the warranty period, the product will be repaired or replaced (at the sole discretion of Transmitter Solutions) if the product does not operate correctly due to a defective component. This warranty does not extend to (a) the transmitter case, which can be damaged by conditions outside the control of Transmitter Solutions, or (b) battery life of the transmitter. This warranty is further limited by the following disclaimer of warranty and liability:

EXCEPT AS SET FORTH ABOVE, TRANSMITTER SOLUTIONS MAKES NO WARRANES REGARDING THE GOODS, EXPRESS OR IMPLIED, INCLUDING WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. BUYER MAKES NO BELIANCE ON ANY REPRESENTATION OF TRANSMITTER SOLUTIONS, EXPRESS OR IMPLIED, WITH REGARD TO THE GOODS AND ACCEPTS THEM "ASIS/WHERE'S'. TRANSMITTER SOLUTIONS ESLIST HE GOODS TO BUYER ON CONDITION THAT TRANSMITTER SOLUTIONS WILL HAVE NO LUBBILITY OF AVAY KIND AS A RESULT OF THE SALE. BUYER MARGRES THAT TRANSMITTER SOLUTIONS SHALL HAVE: NO LABILITY FOR DAMAGES OF ANY KIND, WHETHER DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING INURES TO PERSONS OR ROPERTY, TO BUYER, ITS EMPLOYEES OR AGENTS, AS A RESULT OF THE SALE. BUYER ALSO AGRES TO HOLD TRANSMITTER SOLUTIONS HARMESS ROM ANY CLAINS BUYER, OR ANY THIRD PARTY, MAY HAVE AS A RESULT OF BUYER'S USE OR DISPOSAL OF THE GOODS. BUYER HAS READ THIS DISCLAIMER AND AGRESS THAT TRESOLUTIONS INDERATION OF BECOMING THE GOODS.



3788 West 2270 South, Suite E Salt Lake City, UT 84120 (866) 975-0101 • (866) 975-0404 FX www.transmittersolutions.com

# Manual - 310 2 Button



Thank you for choosing a Transmitter Solutions product. Please read this manual carefully before using the product.

Made in Taiwan. Copywrite © 2015 Transmitter Solutions.

## CONTENTS

### 1 - TRANSMITTER OVERVIEW

- 1A General information
- 1B Technical specifications
- 1C Main components
- 2 NUMBERING
- 3 PROGRAMMING
- 4 OPERATION
- 5 BATTERY ACCESS
- 6 TROUBLESHOOTING

#### 1A - General information

The Transmitter Solutions- Firefly3<sup>TM</sup> Transmitter is a very small (1-1/2" x 2-1/8" x 3/8") key chain style wireless transmitter operating at 310 MHz. The FireflyT<sup>M</sup> achieves its small size by using state-of-the-art, surface mount components. It has been designed for use with and is compatible with all dip switch receivers operating at a 310 frequency, including all *Linear*<sup>®</sup> dip switch digital receivers.

Linear is a registered trademark owned by Linear Corporation

#### 2 - CODING

Set each of the eight-digit toggle code switches to match each code set in the receiver. Access to the Firefly<sup>TM</sup> toggle code switch is achieved by removal of the back cover and battery (if necessary). Move switches using a small pointed object, such as a paper clip, gently switching the small switches to either the ON or OFF position. (In Detail below, top switches 2, 4 and 7 are in the ON position.) When complete, reinstall battery and replace back cover, inserting bottom clip into front groove (see detail), then replace and tighten screw. Button #1 (large button) is set with the clip switches labeled 1, and button) is set with the clip switches labeled 2.

#### 3- OPERATION

Once the codes are set to match the receiver codes, you may test the system. Ensure the gate or door is visible and clear before testing.

**Step 1.** Push each Firefly™ button from a distance of about ten feet. If the receiver activates, the switches are properly matched.

**Step 2.** Test the transmitter from several locations to discover any "blind spots" caused by interference.

#### 4 - BATTERY ACCESS

Remove set screw and open case from back. Attend to proper polarity when installing or replacing battery. See "coding" for proper removal and replacement of back cover

## 5 - TROUBLESHOOTING

## PROBLEM

The system does not receive	Ensure clear plastic battery
the transmitter signal.	Insulator has been removed; OR
The transmitter LED will not light.	Replace the transmitter battery.
The system does not receive	Check to ensure the
the transmitter signal.	transmitter switches are coded to
The transmitter LED is ON.	match your system receiver.
The operating range is reduced.	Replace the transmitter battery.

Clip/Slot


Detail

The A23 battery has a shelf life of about 1 year. The product fully complies with Part 15 of the FCC Regulations.


#### 1B - Technical Specifications

Operating frequency :	300 MHz
Number of buttons :	2
Battery :	1 ea. 12V A23
Number combinations:	21024
Operating temperature :	-20°F - 100°F
Overall dimensions :	1-1/2 x 2-1/8 x 3/8 inch
Weight:	1 oz.

#### 1C - Main components

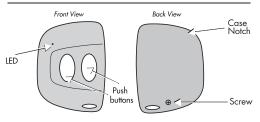

Black Case with White Buttons

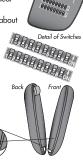

SOLUTION

Inside Back of

Transmitter