




Hygiene Without Limits

Elongated White:
Z3-EW

Round White:
Z3-RW

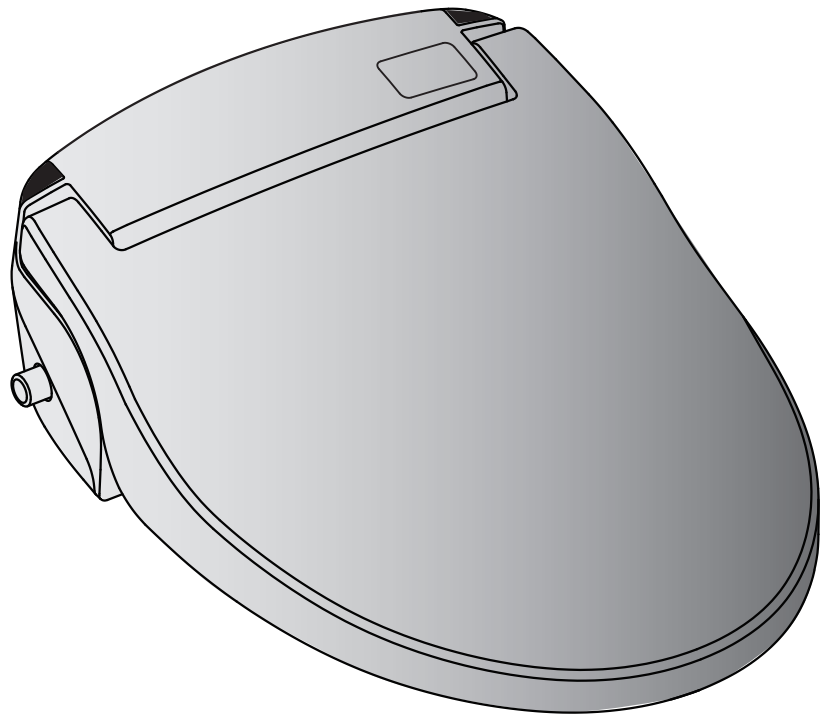

Read all operating instructions before installation and use.

External appearance and specifications are subject to change without
notice due to product improvements.

WARNINGS

READ ALL INSTRUCTIONS BEFORE USING

Always:

- Connect this product to a properly grounded outlet only (GFI recommended).
- Use 120 volt power on a 15+ amp circuit (max pull 13 amp).
- Return the product to a service center for examination if repair is needed.
- Keep the power cord away from heated surfaces.
- Keep the air openings free of lint, hair and any other debris.
- Keep the unit away from fires or inflammable substances.
- Properly connect the power cord to an electrical outlet rated for the voltage of the unit.
- Replace power cord or plug if damaged (repair done by authorized service center only).
- Disconnect the power plug before removing the unit from the toilet bowl.
- Disconnect the power plug if not in use for long period of time.
- Use this product only as intended (as described in this manual).
- Provide close supervision when this product is used by children.

Do NOT:

- Use while bathing.
- Use any attachments unless recommended by the manufacturer.
- Use if the cord or plug is damaged.
- Use if the unit is not working properly.
- Use if the unit has been dropped, damaged or immersed in water.
- Use outdoors or operate where aerosol (spray) products are being used.
- Use where oxygen is being administered.
- Place or drop into water or other liquid.
- Place product where it can fall or be pulled into a tub or sink.
- Place heavy objects on the unit.
- Block the air openings of the product or place it on a soft surface.
- Reach for a product that has fallen into water. Instead, unplug immediately.
- Use while sleeping or drowsy.
- Drop or insert any object into any opening or hose.
- Dismantle, repair or alter the unit.
- Pour or spray water onto the unit.
- Touch the power plug with wet hands.
- Connect to industrial water supplies.
- Connect to a power socket being used by other electrical appliances.
- Twist or pull the connection hoses.
- Slam or lean on the lid.
- Step on the unit.


CAUTION:

Any servicing should be performed by an authorized service representative.
Prolonged exposure to heated seat may cause low-temperature burns.

Table of Contents


Parts	4 - 5
Installation	6 - 8
Trial Operation	9
Basic Operation	10
Additional Functions	11
Water Temperature	11
Seat Temperature	11
Dryer Temperature	11
Deodorization	11
Water Pressure	11
Nozzle Position	11
Control Panel Functions	12
Power On/Off	12
LED Nightlight	12
Eco Mode	12
Max Eco Mode	12
Automatic Functions and Helpful Hints	13
Maintenance	14 -16
Cleaning the Water Strainer	14
Cleaning the Nozzle	14
Cleaning the Air Strainer	15
External Cleaning	15
Changing Batteries	16
Detachment and Service Requests	17
Troubleshooting	18
Product Specifications	19
Regulations	20
Warranty	21
Feedback	22

Parts Identification *(Main Unit)*

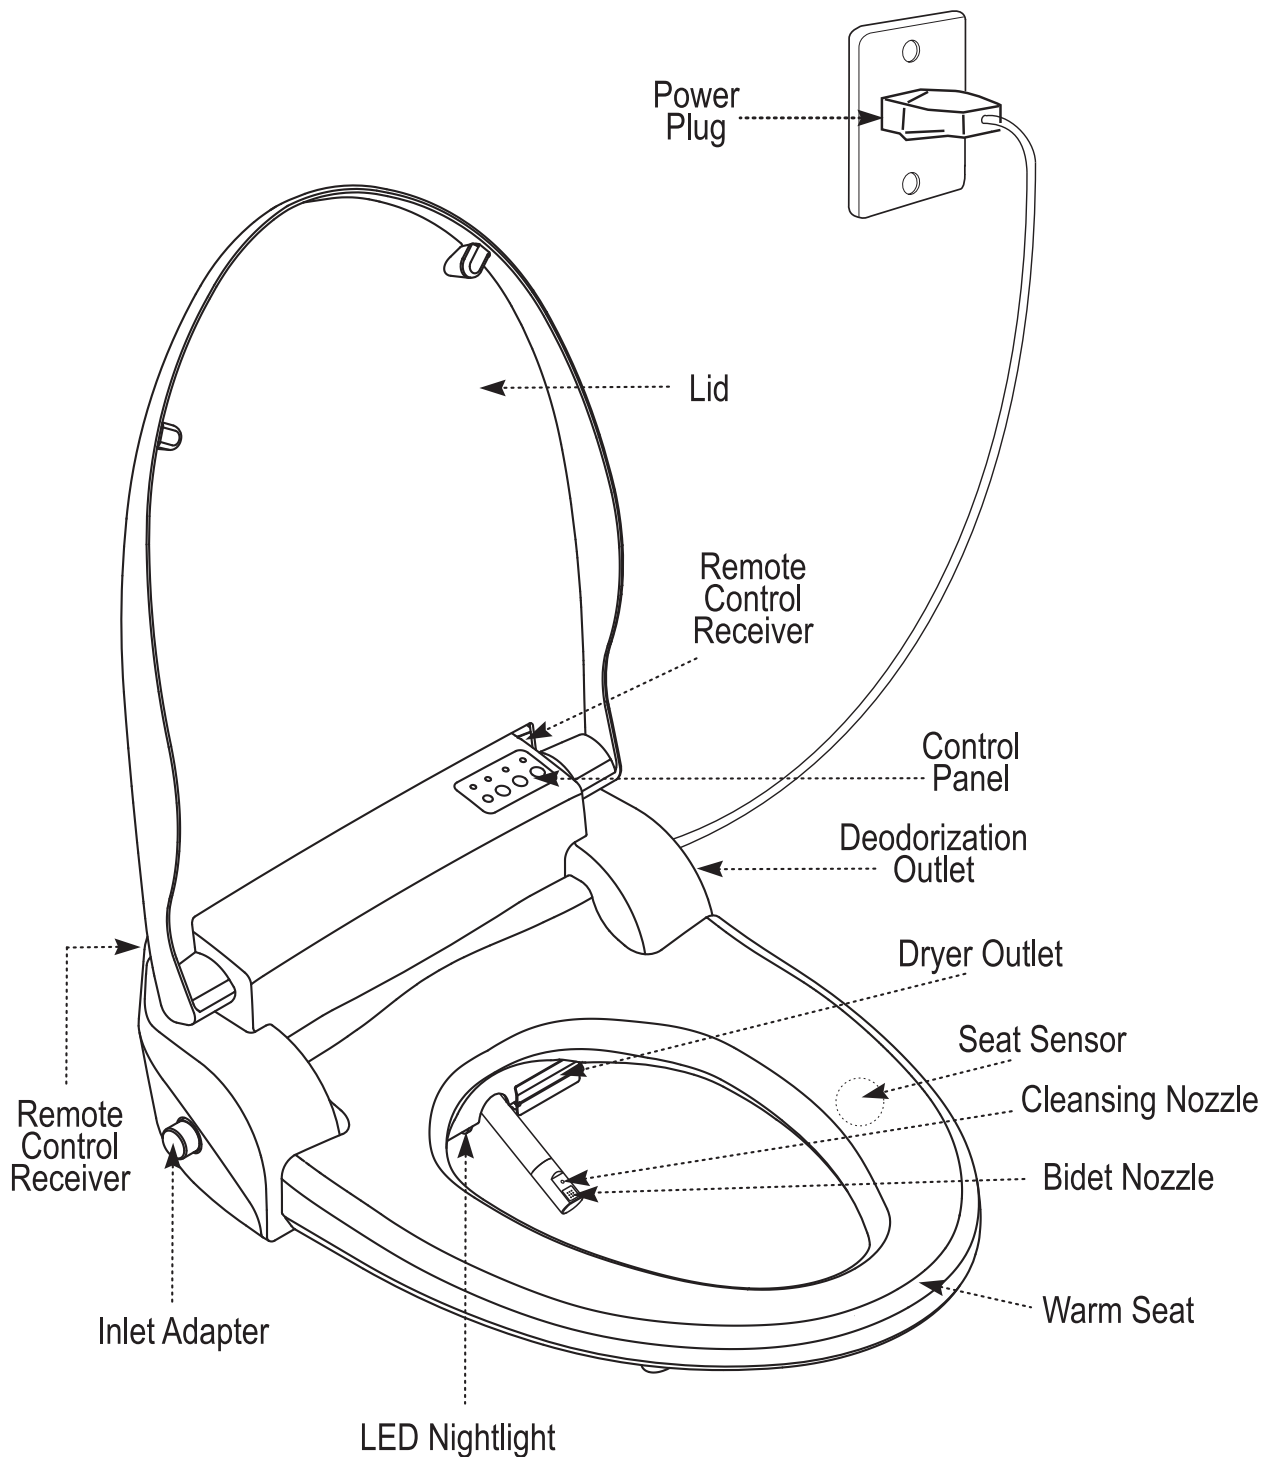


Parts Identification (*Hardware*)


Catch Plate

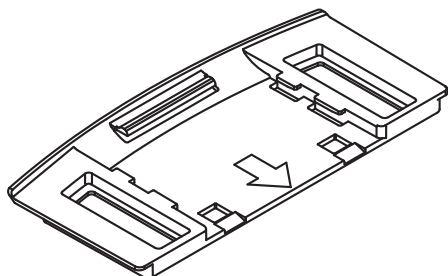


PVC Flex Hose (for Main Unit)

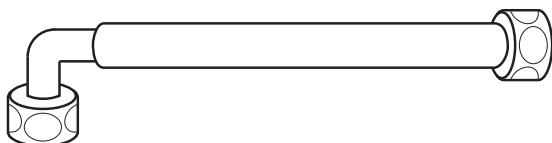


T-valve

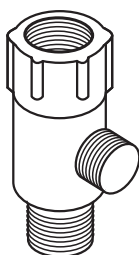

Brackets

 

For installation with top-tighten bolts

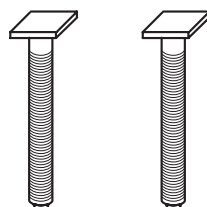

Fixation Bolts



Rubber Packings




Washers




Fixation Nuts

Remote Control & Holder

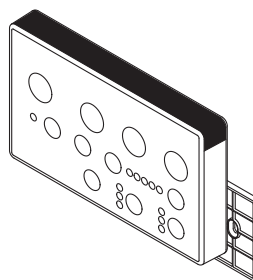

Batteries

 

Installation

Caution Before Installation ⚠

- Check whether the size and shape of the toilet seat are suitable for installation.
- Check that all the accessory parts are in place.
- Do not connect power until installation is finalized.

1. Remove Existing Toilet Seat

Remove existing toilet seat and lid by unfastening Fixation Nuts underneath.

Keep the detached seat, lid and nuts for later use.

Rubber Packings

Washers

Fixation Nuts



2. Drain Toilet Tank

Drain toilet water tank completely after turning off the water supply.

Water Supply Pipe

Shut-Off Valve

Flush

Drain


3. Install T-valve


Detach the Water Supply Hose from the toilet water tank, then install the T-valve.

- Do not use Teflon (plumbers) tape, as the vinyl fittings seal best without it.
- If your toilet uses a rigid pipe, you will need to purchase and install a separate flexible hose to replace the rigid pipe before installing the T-valve.

T-valve

Water Supply Hose

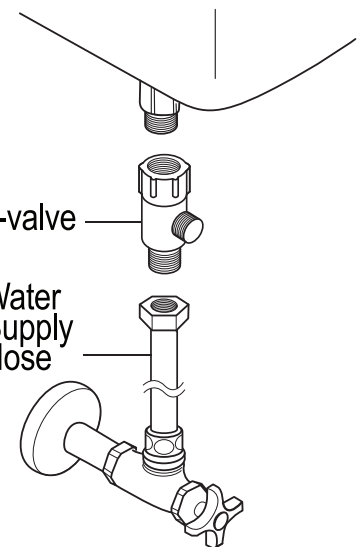

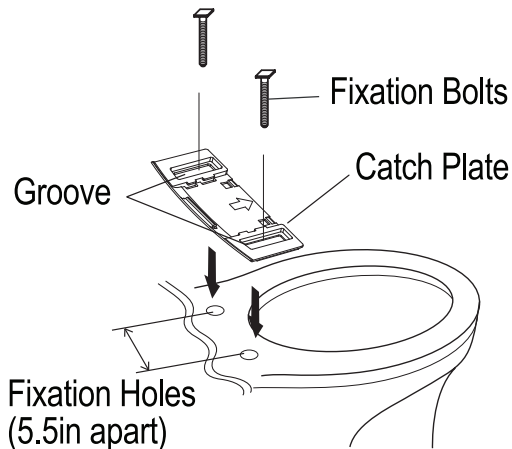

4. Place Catch Plate

Place the groove of the Catch Plate on the Fixation Holes of the toilet.


Catch Plate can only be installed on toilets with Fixation Holes 5.5in (140mm) apart. (This is the standard distance.)

5. Insert Bolts

Insert the Fixation Bolts into the holes of the toilet.

6. Fasten Bolts


Fix the Catch Plate tightly by fastening the Fixation Bolts with Rubber Packings, Washers and Fixation Nuts.

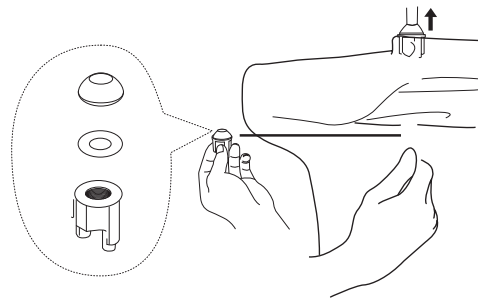

For toilets with top-tighten bolts



Use the Brackets included in the package and the Mounting Bolts from the old toilet seat.

4. Place the groove of the Catch Plate on the Fixation Holes of the toilet.
5. Set the Brackets in place on the Catch Plate.
6. Fasten the Catch Plate using the bolts from the old toilet seat.

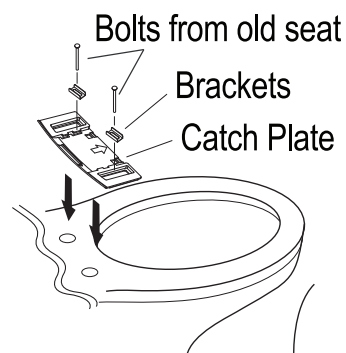


7. Connect Hose to Unit

Connect the PVC Flex Hose to the unit's Inlet Adapter.

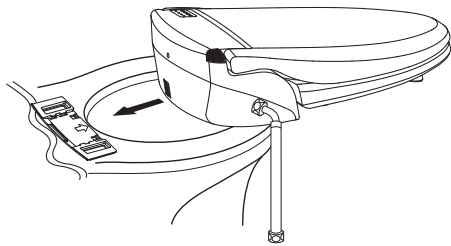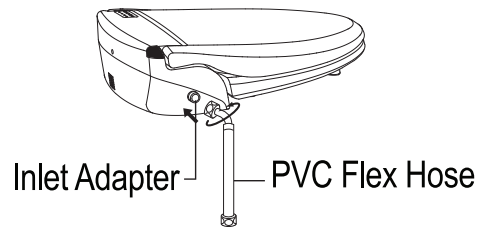

8. Slide Seat into Place


Mount the unit by sliding it into the Catch Plate grooves.

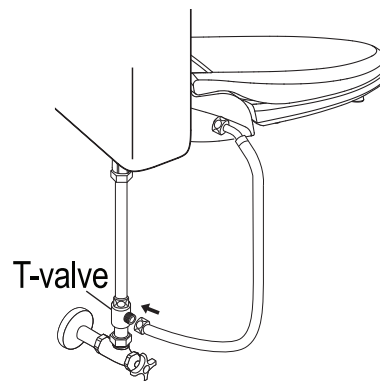

9. Connect to T-valve

Connect the PVC Flex Hose to the T-valve.

Double-Stick Tape




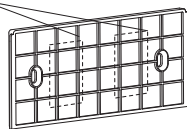


10. Install Mounting Plate

Attach the Remote Control Mounting Plate to the wall with double-stick tape or screws.

11. Install Remote Control

Insert batteries as shown in the illustration below and place the remote control into the Remote Control Mounting Plate.

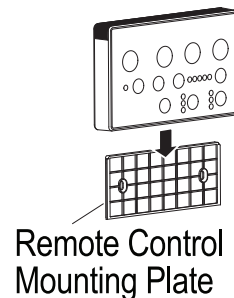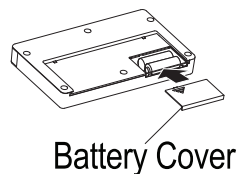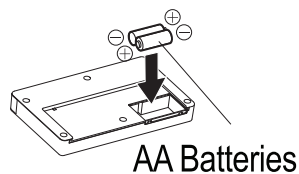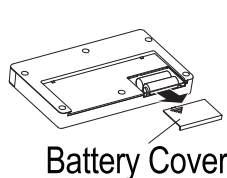


Trial Operation

1. Turn on Water

Open the Shut-Off Valve.

2. Check for Leaks

Check for any water leakage from the hose or connections.

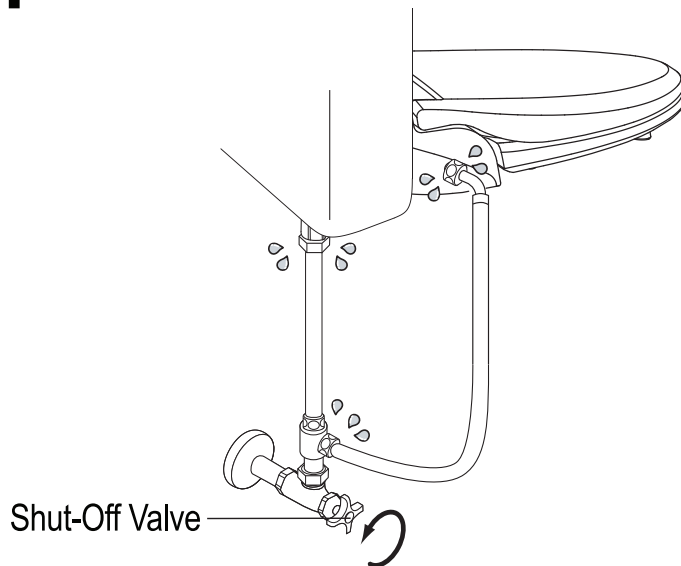

3. Plug in Power Cord

Connect the plug to a wall outlet. Use a GFI (Ground Fault Interrupter) outlet only.

If the power indication light does not turn on after the power plug is connected, press any button.


Warning: Do not move the unit after it is connected to power.

4. Test Operation

Place hand or wet cloth on seat sensor, then press either "REAR" or "FRONT" on the remote.

Hold other hand above the nozzle to check water flow.

Press the "STOP" button on the remote and remove hand or cloth from sensor.

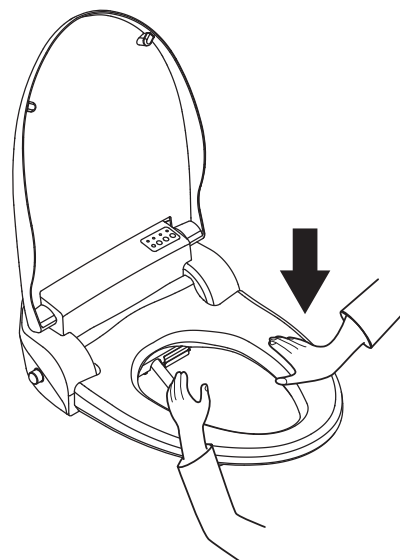


Basic Operation

ONE-BUTTON OPERATION

AUTO (Green Button)

Press the “AUTO” button to start a 60-second oscillating Rear Wash followed by a 3-minute Dry.

Pressing the “STOP” button will immediately end the wash or dry.

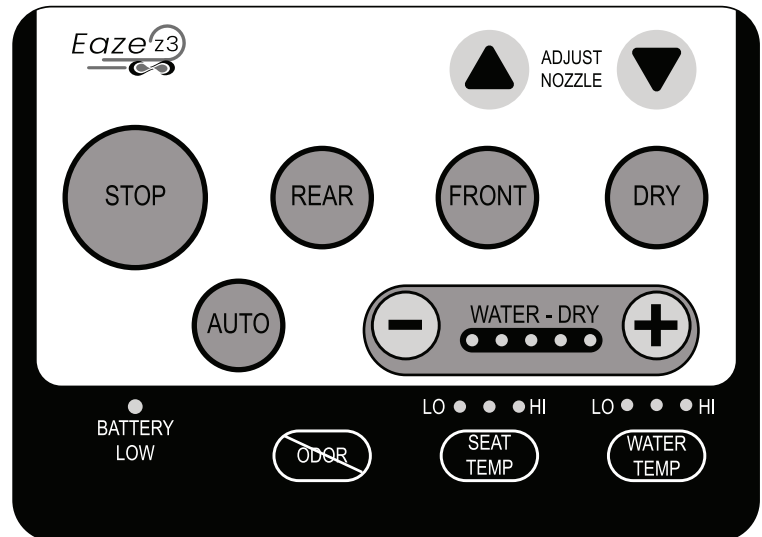

THREE-BUTTON OPERATION

1. REAR (Blue) and FRONT (Purple) Buttons

REAR will wash the anus and FRONT will run a feminine wash targeting the vaginal area. Press the “REAR” or “FRONT” button and the unit will wash the area for 90 seconds. The seat beeps when the wash is over.

Press either “REAR” or “FRONT” a second time to activate a MOVE (oscillation) wash. A third press will turn MOVE off.

Pressing “STOP” or “DRY” ends the wash cycle.

2. DRY (Orange) Button

Once the wash is complete, press the “DRY” button. The dryer will operate for 3 minutes. The seat beeps when the dryer function is over.

Drying effectiveness can be maximized by gently wiping wet areas with toilet paper before pressing “DRY”.

Press “STOP” to end the dry cycle early.

3. STOP (Red) Button

Once the desired wash or dry is achieved, press “STOP” and the unit will stop all operating functions.

Additional Functions

Water Temperature Adjustment

- Press the "WATER TEMP" button to adjust the water temperature level.
- Each button press increases the temperature until the highest setting is reached. Pressing "WATER TEMP" when the temperature is high resets it to the lowest temperature.
- There are 3 temperature control levels: Lo (93°F), Mid (99°F) and Hi (104°F).

Seat Temperature Adjustment

- Press the "SEAT TEMP" button to adjust the seat temperature level.
- Each button press increases the temperature until the highest setting is reached. Pressing "SEAT TEMP" when the temperature is high resets it to the lowest temperature.
- There are 3 temperature control levels: Lo (95°F), Mid (100°F) and Hi (104°F).

Dryer Temperature Adjustment

- The unit remembers the last warm air temperature setting.
- Press the "+" or "-" button to adjust the air temperature (levels 1 - 5).

Deodorize Mode

- Press the "ODOR" button to activate deodorize mode. When deodorize mode is active, the deodorizer runs automatically as long as the seat is occupied.
- When the deodorizer runs, a small fan pulls the air from the bowl through an active carbon filter to remove odor from the toilet bowl.
- After the seat is vacated, the deodorizing function automatically runs for 1 minute and stops. (When occupying the seat for more than 30 minutes, the deodorizing function runs for 30 minutes and stops.)
- To turn off deodorize mode, press the "ODOR" button a second time.


Water Pressure Adjustment

- Press the "-" or "+" button while the wash is running to adjust the water pressure.
- There are 3 pressure control levels: Lo, Mid and Hi.
- The unit remembers the last water pressure setting.

Nozzle Position Adjustment

- Press the "▲" or "▼" button to adjust the nozzle position during a "REAR" or "FRONT" wash.
- The nozzle defaults to the middle position.

Control Panel Functions

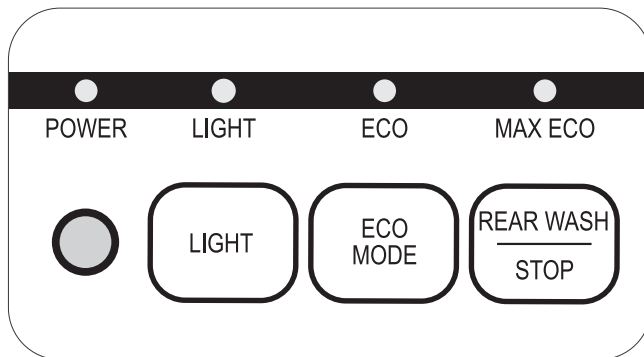

The Control Panel is located on the right rear side of the seat underneath the lid. (See Parts Identification diagram on page 4.)

Power On/Off

- Press the “REAR WASH/STOP” button for more than 4 seconds to turn off the seat.
- Press any button to turn the seat back on.
- The seat saves all settings even when powered down or unplugged.
- If you are unsure whether the seat is on, check the Power LED indicator.

LED Nightlight

- Press the "LIGHT" button to activate the LED nightlight's darkness sensor.
- When activated, the nightlight turns on automatically when the room is dark.
- To turn the LED Nightlight function off, press "LIGHT" button again.

The LED Nightlight uses very little electricity.

Eco Mode (Power Saving)

- Press the "ECO MODE" button until the ECO indicator lights up.
- The seat maintains a warm temperature of 86°F (rather than the last SEAT TEMP setting).
- When sitting on the seat, the temperature will rise to the SEAT TEMP setting selected.
- Eco Mode returns the seat to 86°F once the seat is vacated.
- To cancel the Eco Mode power saving function, press the "ECO MODE" button again.

Max Eco Mode (Max Power Saving)

- Press the “ECO MODE” button until the MAX ECO light turns on.
- The Max Eco Mode is the most energy-efficient option. In this mode, the seat will reduce water and seat temperatures to room temperature when the room is dark.
- When lights are on, the temperature settings revert to the last-used settings.
- The seat goes back to the last SEAT TEMP setting when occupied even if lights are off.
- To turn off Max Eco Mode, press the “ECO MODE” button until the MAX ECO light turns off.

Automatic Functions

Self-Cleaning Nozzle

- The Self-Cleaning Nozzle function runs and cleans the nozzle head before and after each operation.

Low-Temperature Burn Protection System

- The seat temperature automatically decreases if the temperature runs on "HI" for more than 30 minutes. This is done to reduce the risk of low-temperature burns.
- The seat returns to set point after resetting or moving away from the seat.


Helpful Hints

- When using the seat, sit in the center.
- The seat sensor is installed inside the seat itself (please refer to the diagram on page 4). The seat begins to operate only when a user's skin touches the seat sensor. If the seat cannot sense skin due to an object, residue, etc. between the seat and the user's skin, the seat will not operate.
- The Control Panel located on the body of the seat is designed to be used in case the remote batteries die. Because of this, more advanced features are not located on this panel. To operate more advanced features, the remote must be used.
- The unit remembers the water and seat temperature settings even if the power is turned off.

Maintenance


Cleaning the Water Strainer

1. Drain the toilet water tank completely after turning off the water supply by turning the Shut-Off Valve.
2. Detach the PVC Flex Hose from the Inlet Adapter.
3. Detach the Strainer from the Inlet Adapter and clean with warm water, then reinsert the Strainer.
If the Strainer cannot be loosened by hand, gently use pliers or a similar tool.
4. Attach the PVC Flex Hose to the Inlet Adapter, then turn on the water supply.

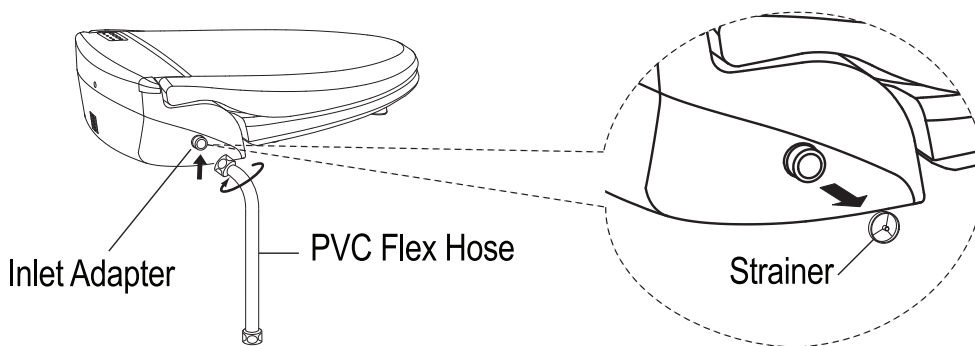

Cleaning the Nozzle


1. Press the "REAR WASH/STOP" and "ECO MODE" buttons on the seat simultaneously.
The nozzle will come out and stop.
2. Clean the nozzle with a soft brush. To return the nozzle to its storage position, press the "REAR WASH/STOP" button.
The nozzle self-cleaning function automatically activates.

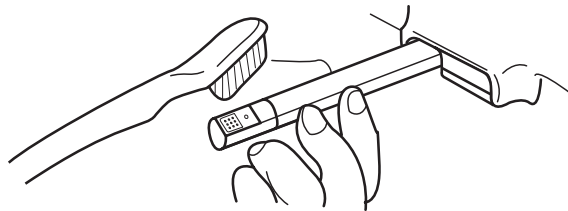

Cleaning the Air Strainer

The Air Strainer keeps dust from flowing into the deodorizer.

1. Pull the Strainer out of the body of the seat.
2. Delicately brush or wash off dust.
3. Let the Strainer dry, then insert the Strainer back into the seat.

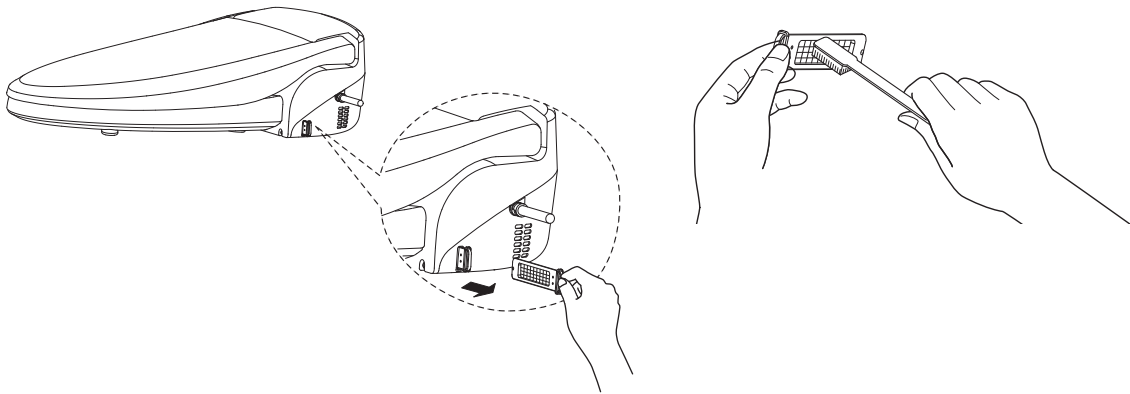


External Cleaning

1. Disconnect the power plug before cleaning.
2. Place the plug in a dry location.
3. Wipe the unit with a tightly wrung wet soft cloth.

Only use all-natural cleaners.

Do not spray water, bleach or other liquids on the unit.

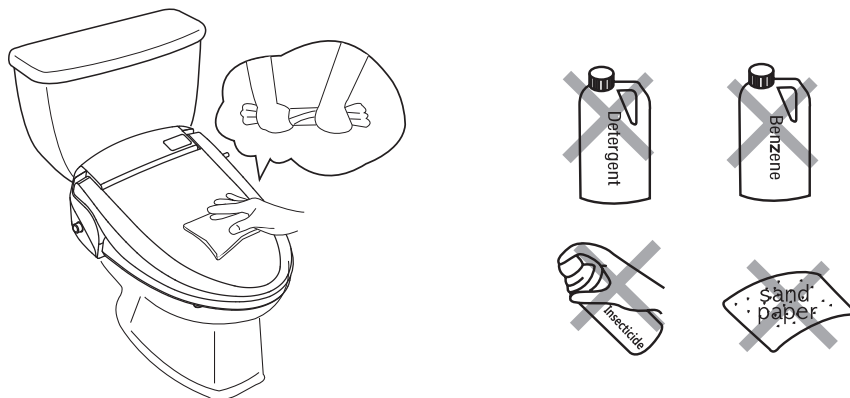





Changing Remote Control Batteries

When the “BATTERY LOW” indicator blinks on and off, remote buttons will not work properly and it is time to replace the batteries.

Batteries may discharge quickly under certain operating conditions. In this case, the remote control unit may not work properly before the user notices the “BATTERY LOW” indicator begin blinking.

Battery Type: AA

1. Remove the remote control from the Remote Control Holder.
2. Open the Battery Cover. Remove old batteries and insert new batteries. (Average battery life is about 1 year.)
3. Close the Battery Cover and insert the remote control into the Remote Control Holder.

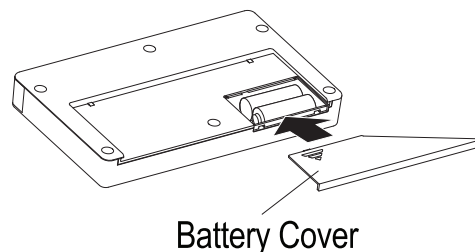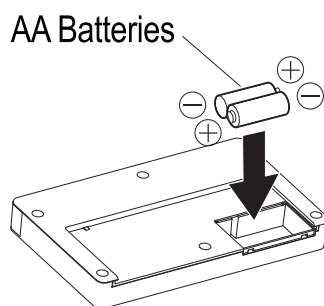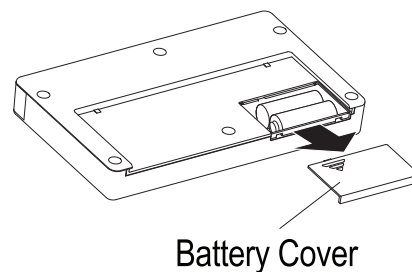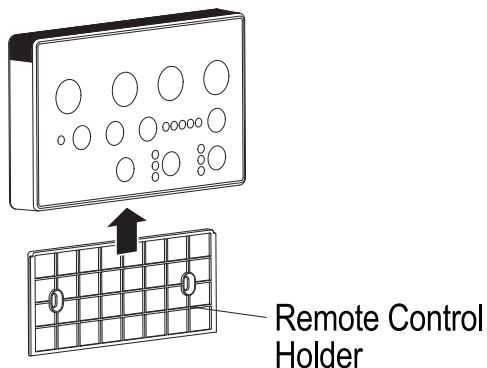

⚠ CAUTION


- Battery type: AA. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
- Insert the batteries according to the (+) and (-) indications on the remote control.
- Do not use new and used batteries together.

Detachment and Service Requests

Detachment

1. Disconnect the power plug.
2. Close the water supply by turning the Shut-Off Valve clockwise and drain the toilet water tank completely.
3. Disconnect the PVC Flex Hose from the T-valve and remove the seat from the toilet. Then, remove the Catch Plate from the toilet.

To detach the unit, pull forward and slightly up on the seat, as shown.

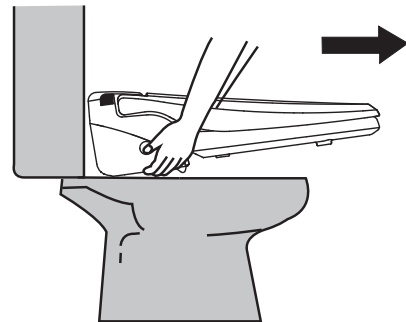

4. Disconnect the T-valve.
5. Reconnect the water-supply hose to the toilet.
6. Open the Shut-Off Valve and check any leaks on the connections.
7. Reinstall the original seat and lid.

Service Requests

For all service requests, please contact us at <https://infinitybidet.com/contact-us/>.

Troubleshooting

Check the list below before requesting service.

Problem Description	Possible Causes
Unit does not operate at all	<ul style="list-style-type: none"> • The power is OFF. (<i>Press any button to check.</i>) • The power plug is disconnected. (<i>Plug in unit.</i>) • There is a power failure.
Wash (Rear/Front), Dry, and/or Auto functions do not operate	<ul style="list-style-type: none"> • Make sure there is nothing blocking the seat sensor.
Remote control does not operate at all	<ul style="list-style-type: none"> • Batteries in the remote control may have died. • Something in the bathroom is interfering with remote's signal. • The toilet is in a very tight space.
No water spray	<ul style="list-style-type: none"> • The shut-off valve is closed. • The water strainer is clogged.
Low water pressure	<ul style="list-style-type: none"> • The water pressure level is set to "LO". • The water strainer is clogged.
Water temperature is low	<ul style="list-style-type: none"> • The water temperature level is turned off or set to "LO".
Seat is not warm	<ul style="list-style-type: none"> • The warm seat temperature level is turned off or set to "LO".
Dryer air is not warm	<ul style="list-style-type: none"> • The warm air dryer temperature level is turned off or set to "LO".

Product Specifications

Item			Eaze z3
Power Supply			120V~ , 60Hz
Max. Power Consumption			1460W
Length of Power Cord			3.94ft (1.2m)
Water Supply Connection			Direct connection to the water supply
Water Supply Pressure			14.223psi~106.675psi
Cleansing	Water Flow Rate	Rear	Max. 0.185gal/min
		Front	Max. 0.185gal/min
	Water Pressure Adj.		3 Levels
	Temp. Adjustment		Normal Temp. 93.2°F(34°C), 98.6°F(37°C), 104°F(40°C)
	Heater Capacity		1400W
	Safety Device		Thermal Fuse, Thermostat
Warm Seat	Temp. Adjustment		Normal Temp. 95°F(35°C), 100.4°F(38°C), 104°F(40°C)
	Heater Capacity		55W
	Safety Device		Thermostat
Dry	Temp. Adjustment		Normal Temp. ~ 122°F(50°C) (5 Levels)
	Heater Capacity		195W
	Safety Device		Thermal Fuse, Bi-metal
Deodorization			Catalytic Deodorization
Water Supply Temp.			37.4°F(3°C) ~ 95°F(35°C)
Temp. of Circumstance for Use			37.4°F(3°C) ~ 104°F(40°C)
Product Size	Elongated		1.26ft (W) x 1.74ft (L) x 0.51ft (H) (385mm x 530mm x 155mm)
	Round Front		1.26ft (W) x 1.62ft (L) x 0.51ft (H) (385mm x 495mm x 155mm)
Product Weight	Elongated		8.60lbs (4.2kg)
	Round Front		8.38lbs (4.1kg)

Regulations

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from the circuit to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Warranty

Product Warranty Card

To make a claim, visit <https://infinitybidet.com/contact-us/>.

- We warranty our products to be free from manufacturing defects under normal use and service for a period of four (4) years after purchase. This warranty is extended only to the original purchaser.
- For product defects, please contact your vendor or our service center.

Product Name		Model Name	
Date of Purchase		Subscription ID	
Name of Purchaser		Duration of Warranty	4 Years

Free After-Sales Service Regulations

- During the warranty period, if a product defect occurs during normal application as stated in the Instruction Manual, Cautionary Notes, Direction Labels, etc., the product is eligible for after-sales service free of charge.
- Even during the warranty period, after-sales service is not free of charge in case of the following conditions:

- (1) Damage occurring from customer negligence or fault, and defect or damage occurring from wrongful repair or alteration.
- (2) Defect or damage occurring from fire, gas, flood, earthquake, lightning, other natural calamities, pollution or abnormal electrical power.
- (3) Defect or damage occurring from outside of normal household usage (long-term public usage, use inside a vehicle, installation inside a moving vessel, etc.).
- (4) Defect or damage occurring from transportation or mistreatment after purchase.
- (5) Defect or damage occurring during removal after installation.
- (6) Wearing of consumable parts (Packing, Filters, etc.).
- (7) Any actions cautioned in the Instruction Manual or on other Labels.

*Read the Instruction Manual carefully before requesting after-sales services.
Charges will be invoiced for faulty service calls.*

Feedback

Help Us Improve!

You can be a part of the Infinity Bidet team and help us ensure hygiene without limits!

If you have ideas that could remove accessibility barriers to enhance health, dignity and independence – whether for bidet units or anything else – we want to hear them.

- Are there other functions or features you would like this unit to have?
- Is this bidet easy to use? How could it be easier?
- Are any specific controls difficult to operate?
- Do you have any other dignity- or hygiene-related needs that are not being met?
- Are there other wellness goals you would like help attaining?

It makes our day every time we hear that our solutions are having a positive impact in the daily lives of our customers. Please let us know how this bidet unit has helped you or a loved one.

Interested in sharing your ideas or need assistance finding solutions for pain points in everyday life? Visit us at <https://infinitybidet.com/contact-us/>.



by



Phone: 248-230-9025
E-mail: info@infinitybidet.com
Web: www.infinitybidet.com