

CARE AND USE GUIDE

4oz & 9oz GLASS BABY BOTTLE

GENERAL CARE

- Before first use, place glass bottle and silicone nipple or valve in boiling water for 3 minutes to ensure cleanliness. Please note that silicone valves are only included in sippy caps.
- Use caution when boiling the glass bottle and silicone nipple or valve as the boiling water and steam may cause severe skin burns.
- Before first use and as soon as possible after each use, wash all parts with warm, soapy water. Rinse all parts thoroughly and allow time to dry.
- To allow venting and prevent nipple/valve collapse, do not over-tighten lid when reassembling product.
- For sippy caps only, before first use, pinch the tip of the silicone valve. Control silicone valve flow rate by tightening or loosening cap. Valve in sippy cap is removable for fastest flow.
- Contents should not be left in the container for longer than 24 hours. As soon as possible after each and every use, wash all parts with warm, soapy water. Rinse all parts thoroughly with clean water. Allow all parts to dry completely prior to next use or storage.
- DO NOT use abrasive cleaners or scrubbers since they may scratch or chip the glass.
- DO NOT use bleach or cleaners containing chlorine on any parts of the product.
- This product is top-rack dishwasher safe; however, hand washing is recommended as the dishwasher uses harsher detergents and hot water that may affect the appearance of your product.
- Residual liquids or other contents may become trapped between product components, such as lid parts, container parts, the bottle and the sleeve, gaskets (flexible band around the lid) and/or straws (if present in the product).

Although this product is top-rack dishwasher safe, hand washing is recommended to ensure that these parts of the product are thoroughly cleaned.

- Silicone bottle sleeve does not need to be removed. If you wish to remove the sleeve, it comes off best with warm soapy water. Replace silicone sleeve with warm soapy water. Use caution when taking the silicone sleeve off or replacing it as the glass may be slippery to handle when using warm soapy water.
- Volumetric measurements (if present) are approximations only.
- When using baby formula, prepare formula strictly according to the manufacturer's instructions.
- When using breast milk, store and handle your breast milk according to pediatrician's instructions.
- Choose the appropriate nipple size for your baby's age. Age suggestions appear on nipple packaging, but suggestions might not be right for every baby. Consult with your pediatrician for any questions.
- Be sure to contact your physician should you have any feeding problems or questions.

TO USE:



How to Replace Your Silicone Sleeve:

- Be Safe. Please ensure your glass bottle does not have cracks and is not shattered when removing from the sleeve. Safety is a priority, so if you cannot safely remove the sleeve, please throw the bottle and sleeve away.
- Remove the sleeve from the used bottle. Wash by hand with warm soapy water and lather up the glass bottle to remove the silicone sleeve.
- Prepare the new bottle. Use warm soapy water to clean the new glass bottle inside and out. Lather up the glass bottle to easily slip the silicone sleeve on.
- Slide the sleeve onto the new bottle. Ensure that both the bottle and sleeve are lathered with warm soapy water and slide the new sleeve onto the bottle.
- Rinse and Dry. Rinse off any residual soap from the bottle and let the bottle dully dry. Enjoy your new bottle.

WARNING

- DO NOT leave children unattended with this product. Do not prop bottle. Do not leave baby in crib or bed with bottle. Use only with adult supervision.
- For use with liquids only.
- Do not use nipples as a pacifier.
- Before each use, pull on the silicone nipple in all directions to inspect for damage. Discard immediately at any sign of damage or weakness.
- DO NOT leave silicone nipples or valves in direct sunlight, heat or sterilization fluid longer than recommended as this may weaken silicone nipple or valve.
- Check periodically to make sure any valve or nipple is present and properly positioned to prevent contents from passing through the lid when lid is closed. Missing, worn or misaligned valve or nipple may cause product to leak.
- Remove bottle before baby has finished the contents of the bottle so that baby does not swallow air, which may cause digestive problems.
- To avoid possible injury, do not let child chew or teethe on any part of the product including the soft or hard material of the spout as small parts may break off and may present a choking hazard.
- To avoid possible injury, do not let child walk or run with product.
- Continuous and prolonged sucking of fluids may cause tooth decay.
- The silicone sleeve DOES NOT guarantee against breakage. If cracks or breaks appear in the glass, dispose of bottle immediately.
- Extreme temperature differences between glass and contents may cause cracking or breaking of glass.
- Always check glass for cracks or breakage before each use. If cracks or breaks appear in the glass, dispose or recycle of glass immediately.
- DO NOT use the product on stove top, or in any type of oven.
- The glass bottle and silicone sleeve are microwave safe; however, the microwave is not recommended for use as it may cause uneven heating or burning. The lids, silicone nipples and valves are not microwave safe and must

be removed before placing glass bottle in the microwave.

- Always test temperature of contents before feeding your baby. If warming the contents, stir liquid before feeding to baby to avoid uneven warming.
- Hot liquids may burn or scald user. NEVER use with hot beverages.
- Use caution when consuming warm drinks in the glass bottle as the bottle will be warm to the touch (RISK OF BURNING). Run warm water in the bottle before adding warm liquid to temper the glass.
- DO NOT overfill the container: Leave space at top of container for lid to avoid overflow.
- When freezing, store upright. DO NOT FILL TO TOP. Must leave open a minimum of 2oz/59ml from neck of bottle to prevent glass breaking while frozen.
- Never use nipples or sippy caps with juices that contain pulp.
- In general, contents should not be left in container for longer than 24 hours. However, the rate at which contents spoil depends on several factors. Certain contents that include, for example, dairy and/or tomato may start to spoil sooner. Proceed with caution when using the product with quick spoiling contents.
- If contents are left in container longer than 24 hours, or you suspect spoilage, use caution when opening container. Contents spoilage can cause pressure inside container to build, possibly leading to forceful ejection of contents. In such circumstances, before attempting to open container, ENSURE THE OPENING IS POINTED AWAY FROM THE USER OR OTHER PERSONS TO AVOID INJURY.
- DO NOT use tools or devices to force container to open.
- If you are unable to open container by hand, do not open it and dispose of it at your local waste facility.
- DO NOT use to store or carry carbonated drinks or dry ice. This may cause lid/stopper and contents to eject forcefully or leak.

LIMITED WARRANTY

Thermos L.L.C. warrants this product to be free from defects in material or workmanship for one year from date of purchase. This warranty does not cover ordinary wear and tear or color fading, or any condition affected by abuse, neglect, alteration, accident or improper use or maintenance.

We will, at our option, repair or replace any product component part that fails to conform to this warranty within 30 days after its receipt by our factory service department.

IN NO EVENT WILL THERMOS BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES.

Some jurisdictions do not allow the exclusion of incidental, consequential, or special damages, so the preceding exclusion may not apply to you.

This is a factory guarantee.

Please do not return this product to the retailer.

Send defective unit or component along with written explanation of defect directly to: Thermos L.L.C. - Warranty Service 355 Thermos Road Batesville, MS 38606, USA 1-800-831-9242 www.lifefactory.com

This warranty gives you specific legal rights and you may also have other rights, which vary from state to state or province to province.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REPRESENTATIONS OR CONDITIONS OF QUALITY AND PERFORMANCE, WHETHER WRITTEN, ORAL OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A

PARTICULAR PURPOSE. SUCH IMPLIED WARRANTIES, REPRESENTATIONS AND CONDITIONS ARE HEREBY DISCLAIMED. THE REMEDIES STATED HEREIN CONSTITUTE PURCHASER'S EXCLUSIVE REMEDIES AND THERMOS'S ENTIRE LIABILITY FOR ANY BREACH OF WARRANTY.

© 2018 Thermos L.L.C. All rights reserved.

LIFEFACTORY is a registered trademark of Thermos L.L.C. in the U.S. and other countries.