Installation Guide

Branch

NOTES

Make sure the ceiling is capable of supporting the weight of the light. We recommend you seek the advice of a structural engineer or construction professional.

Fixings not supplied. The appropriate fixing will vary depending on the ceiling substrate, therefore fixings will not be supplied. Please use an appropriate fixing to suit your solution.

Installation should be carried out by a suitably qualified electrician. Access to ceiling void required.

Installation requires two people.



Installation Guide

Branch

- ES-CR

NOTES

Make sure the ceiling is capable of supporting the weight of the light. We recommend you seek the advice of a structural engineer or construction professional.

Fixings not supplied. The appropriate fixing will vary depending on the ceiling substrate, therefore fixings will not be supplied. Please use an appropriate fixing to suit your solution.

Installation should be carried out by a suitably qualified electrician. Access to ceiling void required.

Installation requires two people.



Installation Guide

Branch

- ES-CR

NOTES

Make sure the ceiling is capable of supporting the weight of the light. We recommend you seek the advice of a structural engineer or construction professional.

Fixings not supplied. The appropriate fixing will vary depending on the ceiling substrate, therefore fixings will not be supplied. Please use an appropriate fixing to suit your solution.

Installation should be carried out by a suitably qualified electrician. Access to ceiling void required.

Installation requires two people.

emptystate.com technical@emptystate.com



Wire the driver to the mains via the terminal blocks in the driver, making sure they connect to power in. Note: Align ceiling void hole to driver access point. Fix the ceiling rose canopy to the ceiling using 5mm wood screws. Fixings are not provide.

Note: Be sure the screws sit within the counter sink

Step 02



Attach the drop rod to the ceiling canopy. Do this by screwing the collect at the top of the drop in to the cross bar with the tool provided.



Cover the ceiling rose canopy with the two half's of the cover plates.

Step 07



Cover the ceiling rose canopy with the two half's of the cover plates.



Offer up the Branch Tier to the drop bar. Connect the bullet connectors feeding any excess cable back into the drop rod. Make sure the bullet connectors are fully engaged with no metal parts of the connectors exposed.



Offer up the next tier with he sub drop rod already connected. Connect the bullet connectors feeding any excess cable back into the Sub drop rod. Make sure the bullet connectors are fully engaged with no metal parts of the connectors exposed.



Screw the drop rod in to the end of the tier. Try not to twist the cables inside. Note: You will be able to position the tier when the drop is fully screwed in to the tier due to a ball joint in the ceiling rose. If you have more that one tier please follow the instructions. If you are only installing one tier please go to

Step 12

Installation Guide

Branch

- ES-CR



With the bullet connectors connected fix the connector collet to the underside of the tier fixing in place with the 4 M4 machine screws provided.

Add the two halves of the collett connector cover plate. If you are connecting multiple tiers please repeat steps 09-11

NOTES

Make sure the ceiling is capable of supporting the weight of the light. We recommend you seek the advice of a structural engineer or construction professional.

Fixings not supplied. The appropriate fixing will vary depending on the ceiling substrate, therefore fixings will not be supplied. Please use an appropriate fixing to suit your solution.

Installation should be carried out by a suitably qualified electrician. Access to ceiling void required.

Installation requires two people.

Installation Guide

Branch

NOTES

Make sure the ceiling is capable of supporting the weight of the light. We recommend you seek the advice of a structural engineer or construction professional.

Fixings not supplied. The appropriate fixing will vary depending on the ceiling substrate, therefore fixings will not be supplied. Please use an appropriate fixing to suit your solution.

Installation should be carried out by a suitably qualified electrician. Access to ceiling void required.

Installation requires two people.



Installation Guide

Branch

- ES-CRM

NOTES

Make sure the ceiling is capable of supporting the weight of the light. We recommend you seek the advice of a structural engineer or construction professional.

Fixings not supplied. The appropriate fixing will vary depending on the ceiling substrate, therefore fixings will not be supplied. Please use an appropriate fixing to suit your solution.

Installation should be carried out by a suitably qualified electrician. Access to ceiling void required.

Installation requires two people.



Installation Guide

Branch

- ES-CRM

NOTES

Make sure the ceiling is capable of supporting the weight of the light. We recommend you seek the advice of a structural engineer or construction professional.

Fixings not supplied. The appropriate fixing will vary depending on the ceiling substrate, therefore fixings will not be supplied. Please use an appropriate fixing to suit your solution.

Installation should be carried out by a suitably qualified electrician. Access to ceiling void required.

Installation requires two people.

emptystate.com technical@emptystate.com



Align the ceiling plate to the aces point to the ceiling void and wire the driver to the mount via the terminal blocks. Driver need to be stored within ceiling void or within 8m of the light.

Step 04

cover plates.

Fix the ceiling plate canopy to the ceiling using three 5mm wood screws. Fixings are not provide. Note: Be sure the screws sit within the counter sink

Step 02



Offer up the Branch Tier to the drop bar. Connect the bullet connectors feeding any excess cable back into the drop rod. Make sure the bullet connectors are fully engaged with no metal parts of the connectors exposed.



Offer up the next tier with he sub drop rod already connected. Connect the bullet connectors feeding any excess cable back into the Sub drop rod. Make sure the bullet connectors are fully engaged with no metal parts of the connectors exposed. Step 03



Attach the drop bar to the mount by screwing in the mount collet.

Note: Use the tool provided to tighten the mount collet in to place.



Screw the drop rod in to the end of the tier. Try not to twist the cables inside. Note: You will be able to position the tier when the drop is fully screwed in to the tier due to a ball joint in the ceiling rose.



With the bullet connectors connected fix the connector collet to the underside of the tier fixing in place with the 4 M4 machine screws provided.



Cover the ceiling rose canopy with the two half's of the

If you have more that one tier please follow the instructions. If you are only installing one tier please go to Step 12

Installation Guide

Branch

- ES-CRM



Add the two halves of the collett connector cover plate. If you are connecting multiple tiers please repeat steps 09-11

NOTES

Make sure the ceiling is capable of supporting the weight of the light. We recommend you seek the advice of a structural engineer or construction professional.

Fixings not supplied. The appropriate fixing will vary depending on the ceiling substrate, therefore fixings will not be supplied. Please use an appropriate fixing to suit your solution.

Installation should be carried out by a suitably qualified electrician. Access to ceiling void required.

Installation requires two people.

Installation Guide

Branch

NOTES

Make sure the ceiling is capable of supporting the weight of the light. We recommend you seek the advice of a structural engineer or construction professional.

Fixings not supplied. The appropriate fixing will vary depending on the ceiling substrate, therefore fixings will not be supplied. Please use an appropriate fixing to suit your solution.

Installation should be carried out by a suitably qualified electrician. Access to ceiling void required.

Installation requires two people.



Installation Guide

Branch

- ES-CRL

NOTES

Make sure the ceiling is capable of supporting the weight of the light. We recommend you seek the advice of a structural engineer or construction professional.

Fixings not supplied. The appropriate fixing will vary depending on the ceiling substrate, therefore fixings will not be supplied. Please use an appropriate fixing to suit your solution.

Installation should be carried out by a suitably qualified electrician. Access to ceiling void required.

Installation requires two people.



Installation Guide

Branch

- ES-CRL

NOTES

Make sure the ceiling is capable of supporting the weight of the light. We recommend you seek the advice of a structural engineer or construction professional.

Fixings not supplied. The appropriate fixing will vary depending on the ceiling substrate, therefore fixings will not be supplied. Please use an appropriate fixing to suit your solution.

Installation should be carried out by a suitably qualified electrician. Access to ceiling void required.

Installation requires two people.



Installation Guide

Branch

- ES-CRL



Offer up the next tier with he sub drop rod already connected. Connect the bullet connectors feeding any excess cable back into the Sub drop rod. Make sure the bullet connectors are fully engaged with no metal parts of the connectors exposed.



With the bullet connectors connected fix the connector collet to the underside of the tier fixing in place with the 4 M4 machine screws provided.



Add the two halves of the collett connector cover plate. If you are connecting multiple tiers please repeat steps 09-11

NOTES

Make sure the ceiling is capable of supporting the weight of the light. We recommend you seek the advice of a structural engineer or construction professional.

Fixings not supplied. The appropriate fixing will vary depending on the ceiling substrate, therefore fixings will not be supplied. Please use an appropriate fixing to suit your solution.

Installation should be carried out by a suitably qualified electrician. Access to ceiling void required.

Installation requires two people.