Illustrated Parts for Machine Style 54200J-12-16 (Supplement to Catalog 102L and Adjusting Manual INS9203) Manual No. PRT9204

First Edition Copyright 1992

By

Union Special Corporation Rights Reserved In All Countries Printed in U.S.A. September, 1992

APPLICATION OF MANUAL

This manual is a supplement to Catalog 102L and Adjusting Manual INS9203 and should be used in conjunction there with.

Only new parts found on Style 54200J-12-16 are illustrated. Use catalog 102L for parts not illustrated or described in this manual. Reference numbers that are inside a bracket or box on the illustrated page and have indented descriptions indicate they are component parts of a complete part or sub-assembly.

For clarity, certain parts are shown in phantom to help locate the new 54200J-12-16 parts.

NEEDLES

Each Union Special needle has both a type and size number. The type number denotes the kind of shank, point, length, groove, finish and other details. The size number, stamped on the needle shank, denotes the largest diameter of the blade midway between the shank and the eye. Collectively, the type number and size number represent the complete symbol which is given on the label of all needles packed and sold by Union Special.

The standard needle for the 54200J-12-16 is Type 113GS Size 125/049.

Туре	Description	Sizes A	vailable
113 GS	Round shank, round point, extra short, double groove, spiral groove, struck groove, ball eye, spotted, chromium plated	075/029 080/032 090/036 100/040	110/044 125/049 140/054

Needle orders will be promptly and accurately filled when a sample needle, an empty needle package or the type and size number of the needle is forwarded. The type and size number of the needle is located on the needle package label. A complete order would read as follows: "1000 needles, Type 113GS, Size 100/040".

REPAIR PARTS

Implementation of preventative maintenance procedures can bring significant improvements in operator productivity by avoiding costly equipment breakdowns. Wherever it becomes necessary to make repairs or replace parts on your machine, be sure to insist on genuine UNION SPECIAL repair parts. These parts are designed specifically for your machine and manufactured with utmost precision to assure long lasting service.

IDENTIFYING PARTS

Where construction permits, each part is stamped with its part number. On some of the similar parts and on those where construction does not permit, an identification letter is stamped into the part to distinguish it from similar ones.

Part numbers represent the same part, regardless of which manual they appear. On all orders please include part number, name and style of machine for which the part was ordered.


TERMS

Prices are strictly net cash and are subject to change without notice. All shipments are forwarded F.O.B. shipping point. Parcel Post shipments are insured unless otherwise directed. A charge is made to cover postage and insurance.

OILING


The oil has been drained from the machine before shipping and the reservoir must be filled before beginning to operate. Use a straight mineral oil, Saybolt viscosity of 90 to 125 seconds at 100° Fahrenheit.

Run the machine slowly for a few minutes to allow the wicks to carry oil to the bearings. The puller drive shaft bushing and the puller connecting link must be oiled by hand.

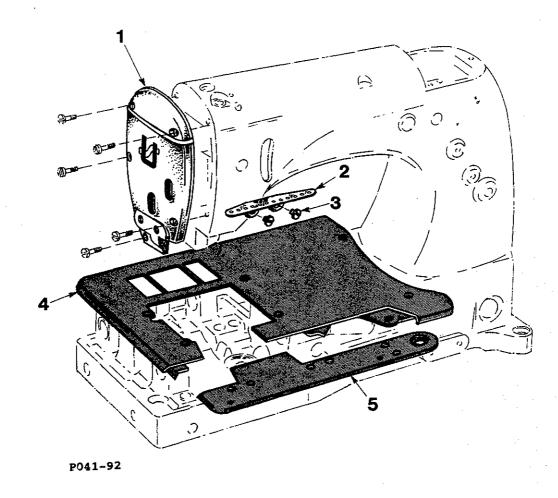


MISCELLANEOUS COVERS

Ref. No.	Part No.	Description	Amt. Req.
1	54282 AA	Head Cover	1
2	54258 A-12-16	Needle Frame Eyelet	1
3	22561	Screw, needle thread eyelet	2
4	54201 F	Cloth Plate	1
5	54464 A	Folder Mounting Bracket	1

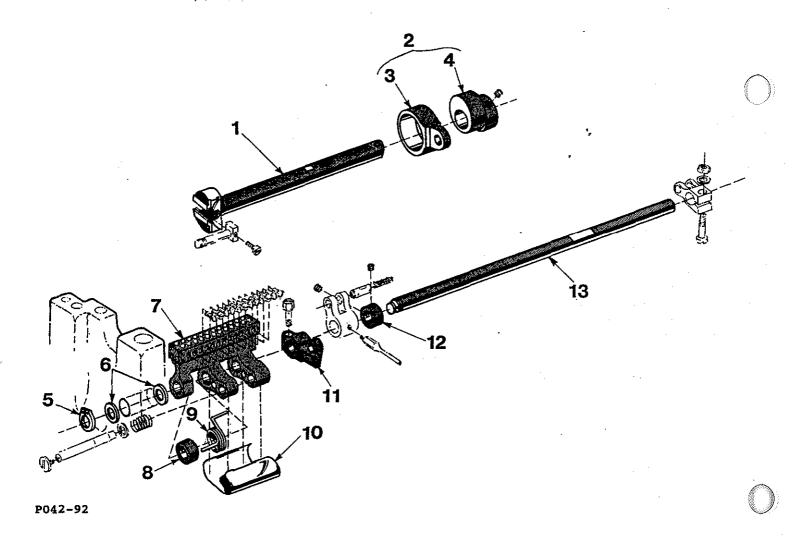


MAIN SHAFT & MISCELLANEOUS LOOPER PARTS

	Part No.	Description	Amt. Req.
1	54222 H	Main Shaft	1
2	29133 R	Looper Drive Eccentric Assembly	1
3	61285 G	Pump Eccentric Strap	1
4	54243 D	Feed Eccentric	1
5	660-891 C	"C" Ring, for looper rocker shaft	1
6	54242 L	Thrust Washer	2
7	54244 T	Looper Holder	1
8	24244 Y	Collar, for looper throw-out spring	1
9	54244 X	Looper Throw-Out Spring	1
10	54244 V	Looper Holder Frame Thread Shield	1
11	54244 W	Looper Holder Driving Arm	1
12	54244 Y	Collar	1
13	51244 K	Looper Rocker Shaft	1

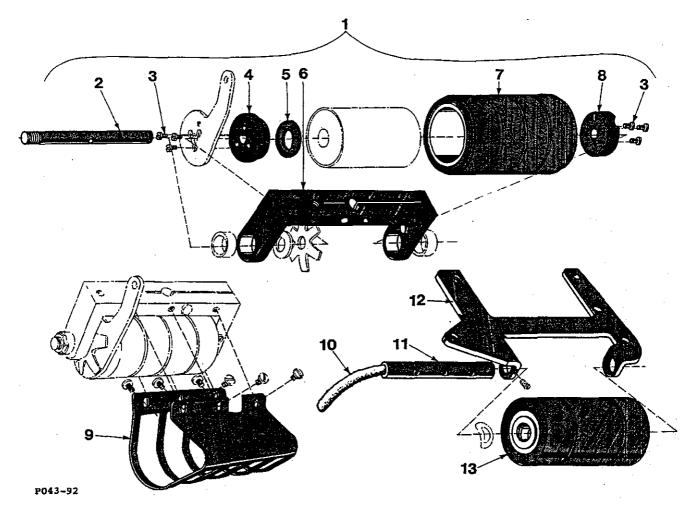

FEED ROLLER CLUTCH ASSEMBLY & LOWER ROLLER PARTS (As viewed from rear of machine)


Ref. No.	Part No.	Description	Amt. Req.
1	29476 RG	Feed Roller Clutch Assembly	1
2	54274 AC	Clutch Shaft	1
3	22797 B	Screw	6
4	54274 AB	Clutch Spacer, right	1
5	54274 AD	Spacer	1
6	54278 AE	Feed Roller Yoke	1
7	54275 N	Upper Feed Roller	1
8.	54274 AA	Clutch Spacer, left	1
9	54276 Y	Feed Roller Guard	1
10	666-326	Oil Wick	1
11	54276 AA	Lower Feed Roller Shaft	1
12	51280 P	Throat Plate and Lower Feed Roller Support	1
13	54276 AB	Lower Feed Roller, rubber	1

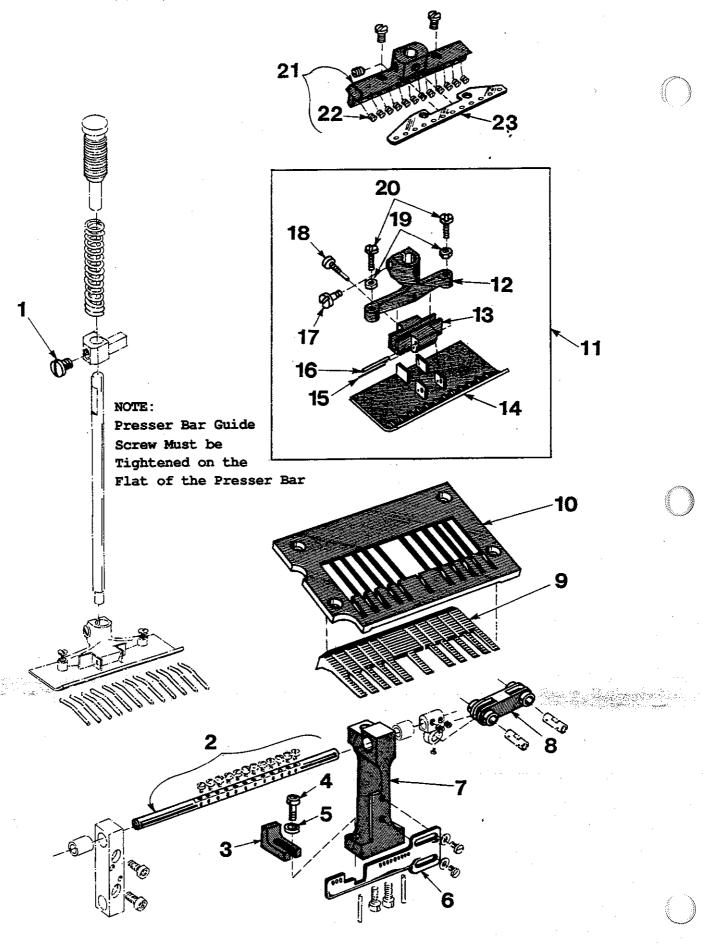

P044-92

RETAINER HOLDER, FEED DOG, THROAT PLATE & PRESSER FOOT PARTS

Ref.	Part	Description	Amt.
No.	No.		Req.
1	94	Screw, presser bar guide	1
2	54242 A-12-16	· -	
_			
4	22653 B-8	-	
5	8372 A	_	
6	54259-12	_	
7	54254 G	<u>-</u>	
8	54254	Retainer Drive Lever Link	
9	54205 A-12-16	Feed Dog	1
10	54224 B-12-16		
11	54220 J-12-16	•	
12	54230 G		
13			
14	-		
15	-	Roll Pin	
16		Roll Pin	. 1
17	22839		-
18	22747 C		
19	43443 O	· •	
20	22747 B	·	
21	54218 B-12-16	•	
22	22560	Screw	
23	54258-12-16		1
	No. 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22	No. No. 1 94 2 54242 A-12-16 3 54244 Z 4 22653 B-8 5 8372 A 6 54259-12 7 54254 G 8 54254 9 54205 A-12-16 10 54224 B-12-16 11 54220 J-12-16 12 54230 G 13 54230 H 14 54230 F 15 660-219 AF 16 660-219 A 17 22839 18 22747 C 19 43443 Q 20 22747 B 21 54218 B-12-16 22 22560	No. No. 1 94 Screw, presser bar guide 2 54242 A-12-16 Retainer Holder 3 54244 Z Looper Holder Rest 4 22653 B-8 Screw, looper holder rest 5 8372 A Washer, looper holder rest screw 6 54259-12 Looper Thread Eyelet 7 54254 G Looper Holder Bearing 8 54254 Retainer Drive Lever Link 9 54205 A-12-16 Feed Dog 10 54224 B-12-16 Throat Plate 11 54220 J-12-16 Presser Foot, complete 12 54230 G Shank 13 54230 H Hinge 14 54230 F Base 15 660-219 AF Roll Pin 16 660-219 A Roll Pin 17 22839 Screw, shank 18 22747 C Screw, hinge 19 43443 Q Nut, shank 20 22747 B Screw, shank 21 54218 B-12-16 Needle Head 22 22560 Screw

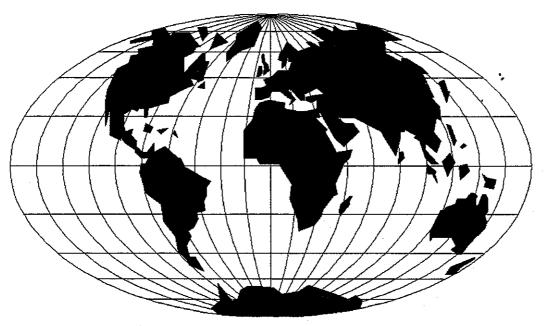

WORLDWIDE SALES AND SERVICE

Union Special Corporation maintains sales and service facilities throughout the world. These offices will aid you in the selection of the right sewing equipment for your particular operation. Union Special Corporation representatives and service technicians are factory trained and are able to serve your needs promptly and efficiently. Whatever your location, there is a qualified representative to serve you.

Corporate Office:

One Union Special Plaza

Huntley, IL 60142 Phone: 847•669•5101 Fax: 847•669•4454

European Distribution Center:

Union Special GmbH Raiffeisenstrasse 3

D-71696 Möglingen, Ger-

many

Tel: 49•07141•247•0 Fax: 49•07141•247•100

Union Special unterhält Verkaufs- und Kundendienst-Niederlassungen in der ganzen Welt. Diese helfen Ihnen in der Auswahl der richtegen Maschine für Ihren speziellen Bedarf. Union Special Vertreter und Kundeniensttechniker sind in unseren Werken ausgebildet worden, um Sie schnell und fachmännisch zu bedienen.

Brussels, Belgium Charlotte, N.C. Hong Kong, China Huntley, IL Leicester, England Lille, France Miami, FL Milan, Italy Möglingen, Germany Montreal, Quebec Osaka, Japan Santa Fe Springs, CA Suwanee, GA Wayne, NJ

Other Representatives throughout all parts of the world.

Weitere Vertretungen in allen Teilen der Welt.



Union Special INDUSTRIAL SEWING EQUIPMENT