 


ELECTRIC FIREPLACE STOVE HEATER

— SFP 203C —

PRODUCT USE GUIDE

ELECTRIC FIREPLACE STOVE HEATER OWNER'S MANUAL

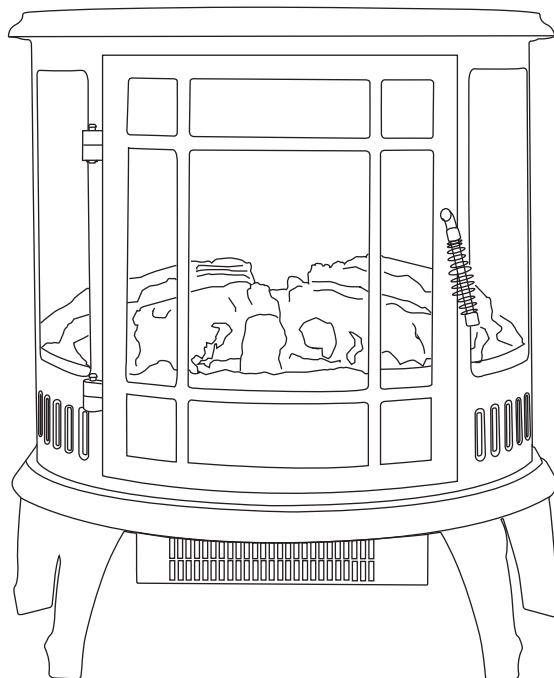

Thank you for choosing our Electric Fireplace Stove Heater. This user manual will provide you with valuable information necessary for the proper care and maintenance of your new product.

Please take a few moments to thoroughly read the instructions and familiarize yourself with all the operational aspects of your new product.

INTRODUCTION

**Please take a few minutes to read
this manual carefully.
Proper maintenance and operation of this
machine can provide better service.**

TABLE OF CONTENTS

SECTION 1

IMPORTANT INSTRUCTIONS PAGES 4-6

SECTION 2

PARTS & ACCESSORIES PAGE 6

SPECIFICATIONS PAGE 7

PRODUCT DIAGRAM PAGE 7

SECTION 3

OVERHEAT PROTECTION PAGE 8

SECTION 4

ASSEMBLY INSTRUCTION PAGE 8

PREPARATION PAGE 9

OPERATION FUNCTIONS PAGE 9

OPERATING YOUR HEATER PAGE 9-10

SECTION 5

CARE AND MAINTENANCE PAGE 10

CLEANING PAGES 10

MAINTENANCE PAGES 11

STORAGE PAGES 11

IMPORTANT INSTRUCTIONS

When switching on the appliance for the first time, allow it to run at full power for about two hours to get rid of the unpleasant smell. Make sure that the room in which the appliance is located is well ventilated during this operation. It is normal for the appliance to emit small cracking sounds when you turn it on if the first time.

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handle when moving the unit. Keep flammable materials such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front and top of the heater and keep them away from the sides and rear of the heater. Keep the rear grille away from walls or drapes so as not to block the air intake.
3. Extreme caution and supervision is necessary when any heater is used near children or invalids and whenever the heater is left operating and unattended.
4. Always unplug heater when not in use.
5. Do not use any heater with a damaged cord or plug or after the heater malfunctions or has been dropped or damaged in any manner. Discard heater or return to an authorized service facility for examination and/or repair.
6. Do not use outdoors.
7. This heater is not intended for use in bathrooms, laundry areas or other similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic areas and place it where it will not be tripped over.
9. To disconnect heater, turn controls to off, then remove plug from outlet.
10. This appliance has a polarized plug (one blade is wider than the other). This plug is intended to fit a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, consult a qualified electrician. Do not connect the heater to extension cords, surge protectors, timers, direct breakers, or an outlet with other appliances connected to the same outlet. Risk of fire, overheat, malfunction, property

damage, injury, or even death may result if not adhered to !

11. Connect to properly polarized outlets only.

12. Do not insert or allow foreign objects to enter ventilation or exhaust openings, as this may cause an electric shock or fire, or damage the heater.

13. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.

14. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.

15. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, injury to persons or other damage to property.

16. This heater must be plugged into a 120V, 15 amp (or more) circuit of its own. Nothing else can be plugged into the same circuit. If unsure if your home meets this specification, consult a certified electrician prior to use. Risk of fire, overheat, malfunction, property damage, injury, or even death may result if not adhered to !

17. To prevent overload and blown fuses, be sure that no other appliance is plugged into the same outlet or into another outlet wired into the same circuit.

18. It is normal for the heater's plug and cord to feel warm to the touch. A plug or cord that becomes hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet. Worn outlets or receptacles should be replaced prior to further use of the heater. Plugging heater into a worn outlet/receptacle may result in overheating of the power cord or fire.

19. Ensure the heater is on a stable, secure surface to eliminate the potential of tipping over.

20. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet /power strip).

21. Be sure that the plug is fully inserted into appropriate receptacle. Please remember that receptacles also deteriorate due to aging and continuous use: check periodically for signs of overheating or deformations evidenced by the plug. Do not use the receptacle and CALL your electrician.

22. Check that neither the appliance nor the power cable has been damaged in any way during transportation.

 
23. Make sure that no pieces of polystyrene or other packaging material have been left between elements of the appliance. It may be necessary to pass over the appliance with a vacuum cleaner.

24. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

PARTS & ACCESSORIES

Parts

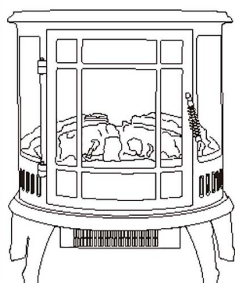

Electric Fireplace Stove Heater



User Manual

Accessories



Legs x 4




Screws x 16

* Attention: ("+") screwdriver (not included)

SPECIFICATIONS

Model No.	SFP203C
Item Name	Electric Fireplace Stove Heater
Rated Voltage	120V (60Hz)
Rated Power	1500W
Two Setting	Low/High
Safy Protection	Overheat Auto-off
Heating Element	Heating Wire
Net Weight	18.52 LBS
Product Size	22.05x11.42x25 inch

 PRODUCT DIAGRAM

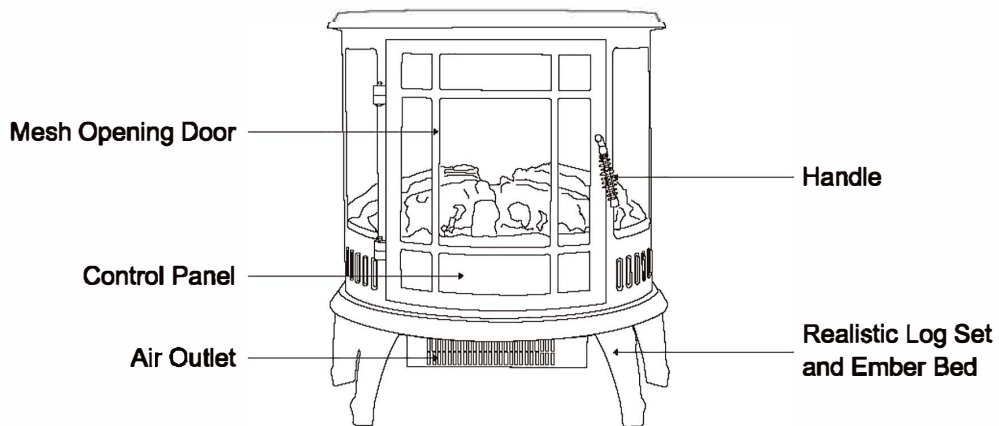


OVERHEAT PROTECTION

This heater is protected with an overheat protection that switches off the appliance automatically in case of overheat, e.g. due to the total or partial obstruction of the grids. In this case, unplug the appliance, wait about 30 minutes for it to cool and remove the object which is obstructing the grids. Then switch it back on as described above. The appliance should operate normally. Should the problem persist, please contact the customer service.

ASSEMBLY INSTRUCTION

 Attention: **ALWAYS** make sure the unit is unplugged before beginning assembly !
NEVER move or clean the heater, or change the bulbs, while it is plugged in.

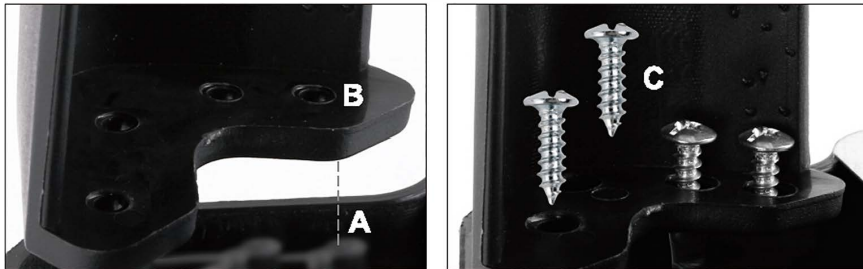

- (1). Carefully turn the **STOVE (A)** upside down and lay it on a clean soft surface.
- (2). Insert the **TAB** of one **LEG (B)** into the **SLOT** in the corner of the stove frame.
- (3). Thread three **SCREWS (C)** through the holes in the leg and into the stove frame.
Partially tighten the screws with a Phillips screwdriver.
- (4). Repeat Steps 2 and 3 for the other three legs.
- (5). Check the alignment and tighten all 8 screws securely with the screwdriver.
DO NOT over-tighten the screws.

 
ALWAYS attach the feet before using! **NEVER** plug in or operate this unit if the feet are not securely attached!

PREPARATION

Place the heater on a firm, level surface and plug into a 120V 60Hz power outlet. And turn on the power switch in the rear of the unit. Insert 2 AAA batteries into the remote control before using (Batteries Not Included)



OPERATION FUNCTIONS

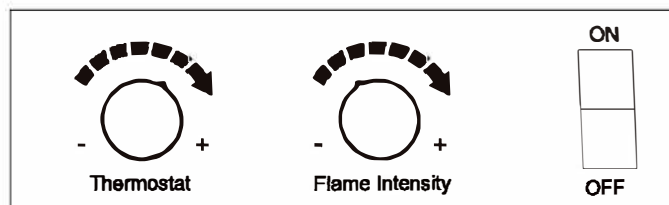Control Panel: Located at the lower right corner of the insert. Open the door to access it.



OPERATING YOUR HEATER

Control Panel Functions

CONTROL	OPERATION / FUNCTION
 <p>ON / OFF</p>	<p>ON : Press the power switch ON. The power indicator light will glow, and the flame effect will turn on.</p> <p>OFF: Press the power switch OFF. All functions will turn off.</p>
 <p>FLAME INTENSITY</p>	<p>FLAME INTENSITY : This knob controls the brightness of the flame effect. Turn the knob to the right (High) to brighten the flame effect .Turn the knob to the left (Low) to dim the flame effect.</p> <p>(NOTE : The ON/OFF switch turn the flame effect on and off. The flame effect will not turn off unless the power is turned off.)</p>



- +
Thermostat

THERMOSTAT

THERMOSTAT : This knob controls the thermostat that turns the heat on and off to maintain the desired temperature.

Turn the knob to the desired setting. The heat will turn on and off automatically to maintain the set temperature.

To lower the temperature, rotate the knob further counter-clockwise towards the LOW(left) position.

To raise the temperature, rotate the thermostat knob clockwise towards the HIGH(right) position

(NOTE : If the room temperature is higher than the thermostat setting, the Thermostat heater will not turn on.)

NOTICE

When the heat function is used for the first time, a slight odor may be present. This is normal and should not occur again unless the heater is not used for an extended period of time.

CARE AND MAINTENANCE



ALWAYS turn the heater OFF and unplug the power cord from the outlet before cleaning, changing the light bulbs, or moving this stove. Failure to do so could result in electric shock, fire, or personal injury.



NEVER immerse in water or spray with water. Doing so could result in electric shock, fire, or personal injury.



Risk of electric shock ! DO NOT OPEN the main panels !
No user-serviceable parts Inside !

CLEANING

Metal: Buff using a soft cloth, slightly dampened with a citrus oil-based product.

DO NOT use brass polish or household cleaners as these will damage the metal.

Glass: Use glass cleaner and dry thoroughly with a paper towel or lint-free cloth.

NEVER use abrasive cleansers or any cleaner that could scratch the surface.

Plastic: Wipe with a slightly damp cloth and a mild solution of dish soap and warm water.

Vents: Use a vacuum or duster to remove dust and dirt from the heater and vent areas.

STORAGE

Store heater in a clean dry place when not in use.