## Garrison Grip MagCamWizard Base Plate and Grip Extension Disassembly Tool Instructions for GLOCK

## Why Use the MagCamWizard?®

Thank you for investing in the Garrison Grip Patent Pending **MagCamWizard**. GLOCK magazine base plates and other magazine accessories can be difficult to disassemble from a GLOCK Magazine because there is a tab on either side of the magazine that locks into the base plate's slots. See **Image A**.

The MagCamWizard Base plate disassembly tool unlocks the tabs without causing damage to the components of your gun which can be caused by using more primitive tools and which can cause a magazine to fail without warning. Here 3 major uses for the Mag Cam Wizard:

- Removal of a grip extension of any length.
- Removal of a Plus 1, 2, or 3 Extensions (Povided they are removable)
- · Removal of a standard base plate for any purpose.

Protect your GLOCK firearm investment and ensure your ability to defend yourself by using the correct tools for scheduled maintenance or upgrades.




Image A.

## Always Wear Eye Protection

Image A shows the components of the GLOCK Magazine. Following the dotted line shows how it is assembled. The following instructions contain the names of the components you will be working with as a reference. Note that to assemble the component of a Magazine, the Magazine Follower goes in first, then the Spring, the Magazine Insert and finally, the Magazine Floorplate.

## **Disassembly Steps**

 Step 1: Make sure you have the right MagCamWizard (MCW) for your model GLOCK. Check the model of your GLOCK against the models indicated on the display card that came in the package.





Step 3: With the MCW cams disengaged, insert the Disassembly Tool into the hole of the Magazine Floorplate to displace the Magazine Insert. Push the Disassembly Tool all the way into the center of the Magazine Tube then take it out and insert it again. in all directions as many times as it takes to displace the Magazine Insert to the side of the Magazine Tube. Leave the Disassembly Tool in the hole as far as can be reached during Step 4. See Image C.





Step 4: Keep the Disassembly Tool in the hole of the Magazine Floorplate, Push the MCW snugly against the Magazine Floorplate while engaging the Cam Arms on both sides of the MagCamWizard, See Image D.

Step 5: Remove the Disassembly Tool and push off the Magazine Floorplate with your thumb holding the Magazine Spring down while sliding off the Magazine Floorplate. See Image E. If it "is not"



Image E.

