

R010 - #2 Mirror

Table of Contents

NOTE: Installing the mirror backwards will destroy the mirror once the laser beam penetrates the backside of the mirror so be sure that you re-install the mirror correctly.

1. Turn off the laser machine.



2. Open the top door and bring the X-Axis Arm forward.



3. Locate the #2 Mirror holder (red). Grasp its protruding handle with your thumb and forefinger and slide it out. It is held in place by magnets so you may feel a slight resistance when you begin to slide it out.

4. Re-insert the #2 Mirror holder by sliding it into the mounting slot until it stops.