

## Laser Source


**NOTICE:** Handle the laser with care! Do not bump or jar it.

1. Power OFF and unplug the VLS system.
2. Open the rear cover by pulling the latches toward the back of the system or by pressing down on the button part of the latches until the latches pop up.
3. Unplug the electrical connector from the Laser by manually undoing the two thumb screws and gently pulling to the outside.



4. Rotate the laser a few degrees to the outside from the bottom and lift it up and off the mounts. Store the Laser in a safe place.

5. For laser re-installation, locate the alignment fork (1) on the right side of the back of the system as well as the two laser supports (2) on the back of the system.

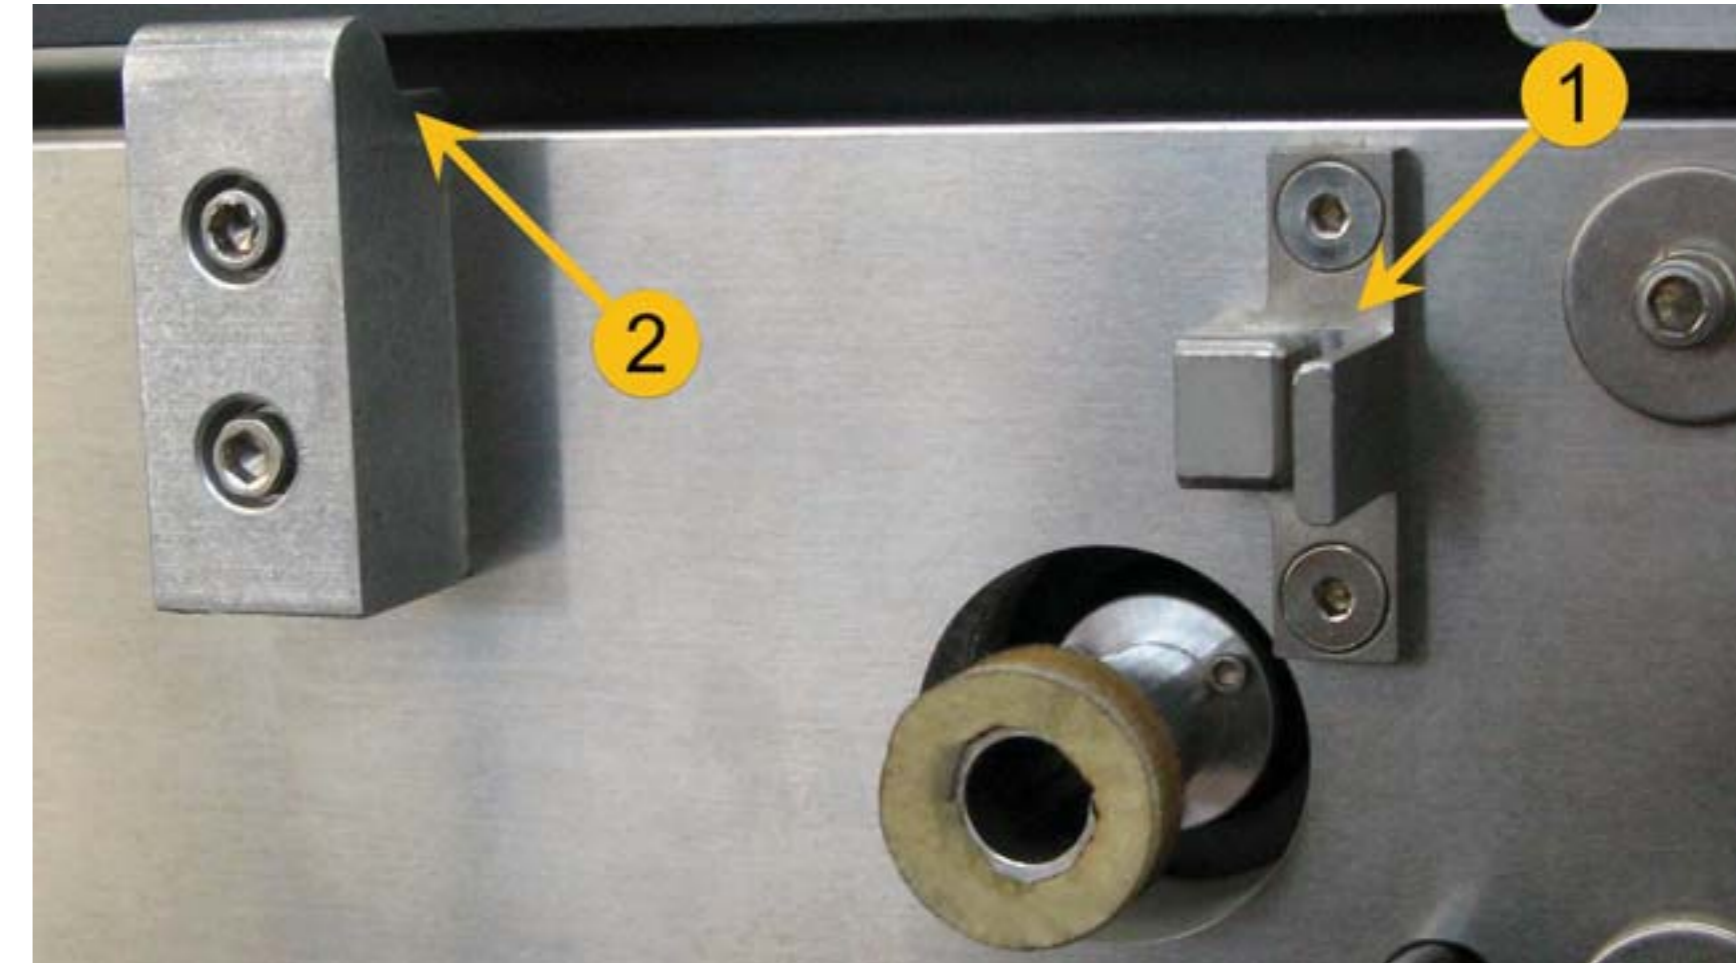

6. From the optics side of the laser (opposite to the connector) have the frame of the laser rest in the center of the alignment fork with the larger tab exposed to the outside.



7. With the laser at an angle make sure it is hanging correctly on the two laser supports while still seated on the alignment fork correctly.



8. When rotating the laser down, make sure there are no obstructions, such as cables that could be pinched. At the end of the rotation you should feel a slight click and the laser should be completely parallel to the back plate of the system.



9. Plug the electrical connector to the back of the laser as removed in step 3.