

Matrix ICR50

IX Display & LCD Console Guide



IX Display



LCD Console

Table of Contents

IX Display

- [Connecting a Device](#)
- [Display Controls](#)
- [Using Zwift](#)
- [Cleaning the Display](#)

LCD Console

- [Console Overview](#)
- [Console Setup](#)
- [Machine Settings](#)
- [Cleaning the Console](#)

Useful Resources

[Customer Technical Support](#)

IX Display

The high-definition, 22-inch IX Display completes the immersive experience when you mirror your smartphone, tablet, or digital media player to stream live and on-demand classes, virtual courses, or your favorite entertainment.

Important: *This is NOT a console. This is simply a monitor to mirror a device.*


Connecting a Device

Connect an HDMI-to-HDMI cable to the display (not included). Then, use a HDMI to USB-C or Lightning cable (cables not included) to connect a device to the open end of the HDMI cable to mirror your device on the 22" LED screen.

HDMI Cable



Lightning Cable to HDMI

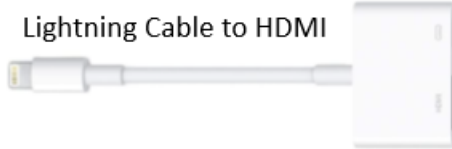

USB-C to HDMI



Ref	Connection
A	Power cable
B	VGA cable
C	HDMI cable



Display Controls

The controls are located on the back of the display.

Ref	Connection
A	Auto
B	Menu
C	Volume up
D	Volume down
E	Power



Using Zwift

You can download Zwift on your device and mirror it on the display.

Setup video: https://youtu.be/OVbulGR_w5Q

Cleaning the Display



Use a micro-fiber cloth and [LCD screen cleaner](#) to clean your display as needed. If you do not have a screen cleaner, use a damp (with water) micro-fiber cloth instead.

LCD Console

The LCD console can be purchased and used with the ICR50 cycle. An RF sensor that comes with the console will need to be installed in the frame.

Console Overview

Use the console buttons to navigate through the console.

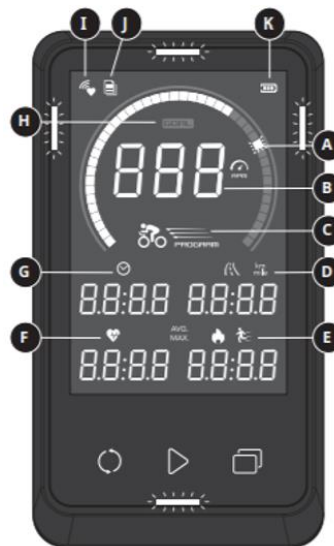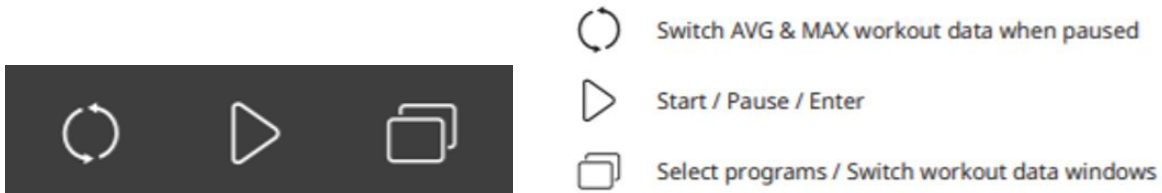


- | | |
|---|--|
| <p>A. WORKOUT TRACK</p> <ul style="list-style-type: none"> • Solid = In-progress RPM workout • Blinking = Goal to achieve (Program 2 only) <p>B. TARGET / RPM</p> <ul style="list-style-type: none"> • Program 1: Resistance target level • Program 2: Current RPM • Program 3: HR target <p>C. WORKOUT PROGRAMS</p> <ul style="list-style-type: none"> • Select by pressing at standby page <p>D. DISTANCE</p> <p>E. CALORIES / SPEED</p> <ul style="list-style-type: none"> • Press to switch | <p>F. HEART RATE</p> <p>G. WORKOUT TIME</p> <p>H. GOAL ACHIEVEMENT</p> <ul style="list-style-type: none"> • Light will illuminate once goal is achieved <p>I. WIRELESS HEART RATE CONNECTION</p> <p>J. WORKOUT DATA</p> <ul style="list-style-type: none"> • To see AVG & MAX workout data, press: to pause to switch calories / speed to switch AVG / MAX <p>K. BATTERY</p> <ul style="list-style-type: none"> • Indicates 100% or less, 70% or less, 40% or less, and 10% or less |
|---|--|

Console Setup


1. Install the console bracket onto the handlebar, then slide the foam sheet between the handlebar and console bracket.
2. Install 4 AA batteries into the console.
3. Attach the console to the console bracket using 2 screws.
4. Remove the 4 screws and the handlebar adjustment knob from the frame, then remove the plastic cover.
5. Plug the unused wire into the RF Sensor.
6. Using the Velcro, mount the RF Sensor to the Main Frame.
7. Reinstall the plastic cover and handlebar adjustment knob.



Steps 1-3

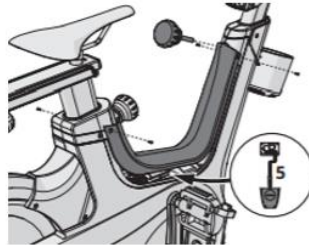

Steps 4-5

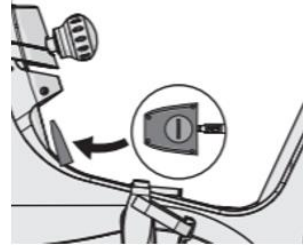

Steps 6-7

Battery Replacement



Install the RF SENSOR CR2032 battery with the positive side up. Replace the battery when the console is flashing.

Machine Settings

You may adjust settings to customize the console.

Press and hold and for 3 to 5 seconds to enter Machine Settings. The console will display "SET" when ready.

Model Selection

1. Press once to enter the Model Selection page.
2. Press to select the frame model.
3. Press to select and set the frame model.

Brightness Setting

1. Press twice to enter the BL page.
2. Press to adjust the brightness.
3. Press to set the selected brightness.

Unit Setting

1. Press three times to enter the Unit page.
2. Press to scroll to Miles or KM.
3. With your selection shown, press to save and set.

Cleaning the Console

Use a micro-fiber cloth and [LCD screen cleaner](#) to clean the console screen as needed. If you do not have a screen cleaner, use a damp (with water) micro-fiber cloth instead.

Useful Resources

At the link destination below, you will find information on **product registration**, **warranties**, **FAQs**, **troubleshooting**, **setup/connectivity videos**, and available **software updates** for consoles.

Matrix Fitness - <https://www.matrixfitness.com/us/eng/home/support>

Customer Technical Support – *Please refer to your Owner’s Manual for warranty terms*

Warranty Product

Brand	Phone	Email
Matrix	800-335-4348	info@johnsonfit.com

Out-of-Warranty Product

Brand	Phone	Email
Matrix & Vision	888-993-3199	visionparts@johnsonfit.com