

Safety Key Troubleshooting

Required Tools:
Philips Screwdriver

Symptom	Possible Cause	Test Procedure	Repair
The console displays dashes or "Safety Key Off" when the safety key is in place.	Reed switch wire is disconnected or damaged	<ul style="list-style-type: none"> - Open the console and locate the entry point of the safety key near the bottom front - Check the wire coming from the safety key entry point (reed switch). 	<ol style="list-style-type: none"> 1. Connect the wire to the upper control board 2. Replace the reed switch if the wire is pinched or damaged
	Failed reed switch or failed upper control board	<p>Short the switch connector on the upper board by using a flat-head screwdriver or by placing a jumper switch on the connector.*</p> <p><i>*Call Customer Tech Support for assistance</i></p>	<ol style="list-style-type: none"> 1. If console display becomes normal, replace the reed switch. 2. If the console still displays dashes, replace the upper control board.