

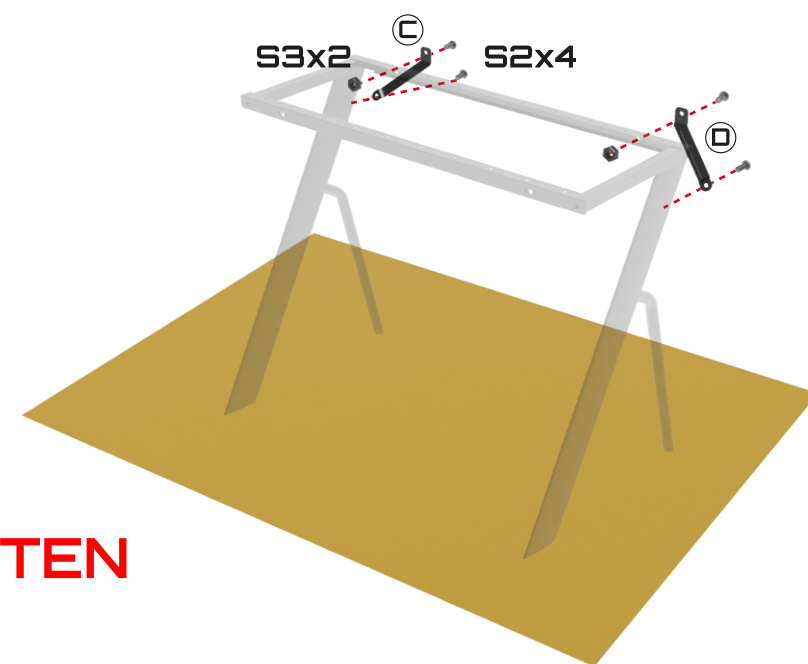
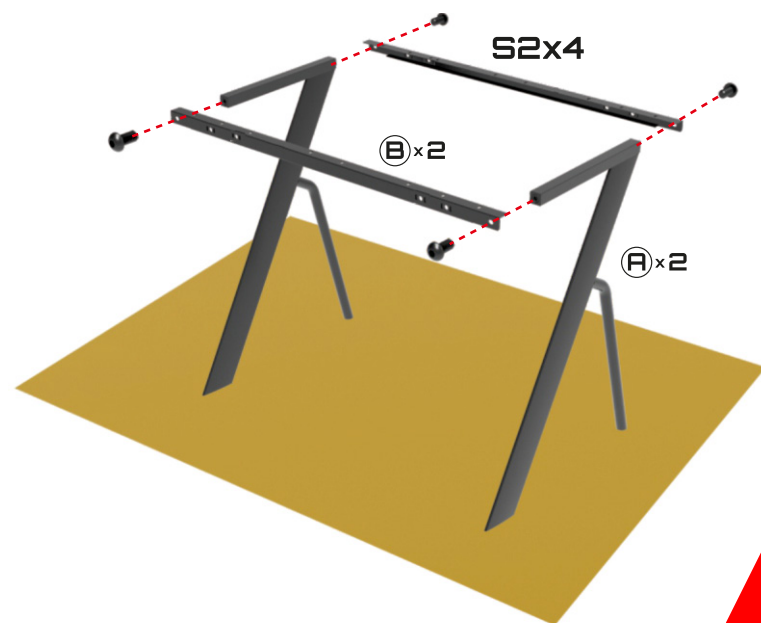
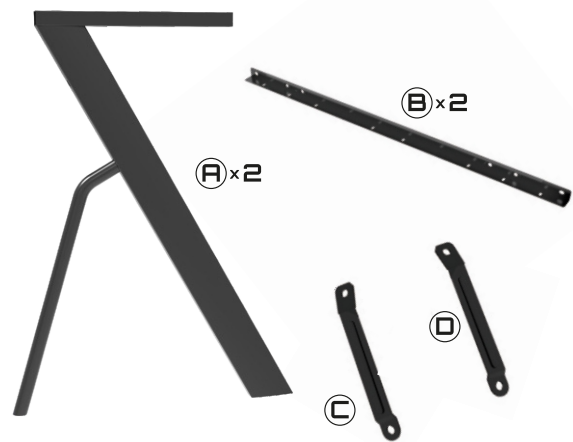
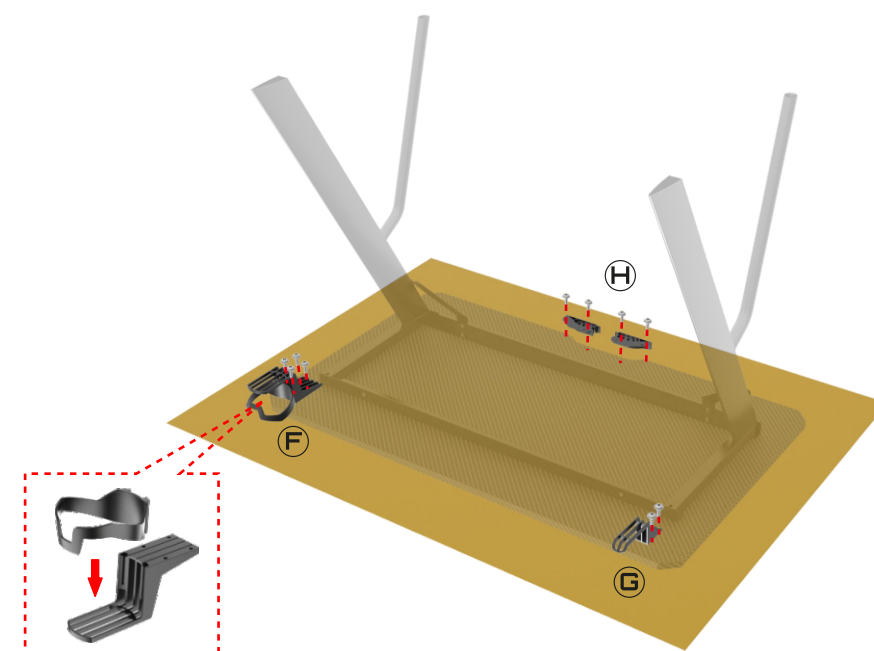


### STEP 1



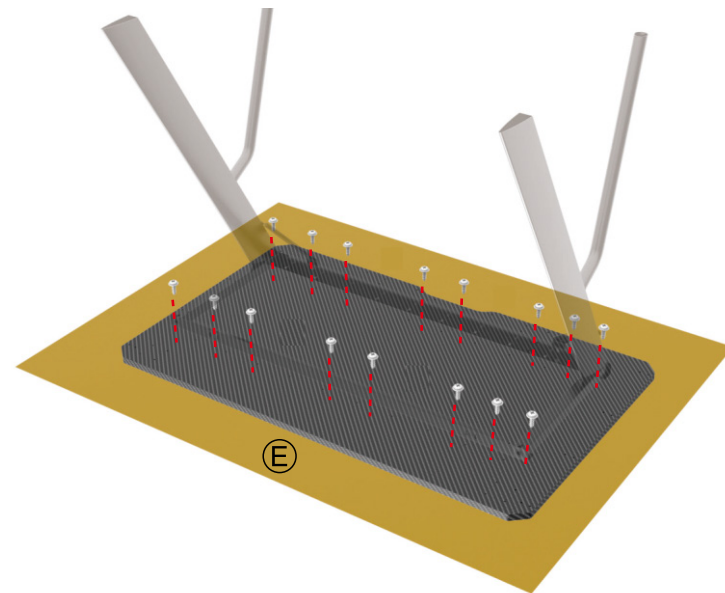


**PLEASE TIGHTEN  
SCREWS**



### STEP 2

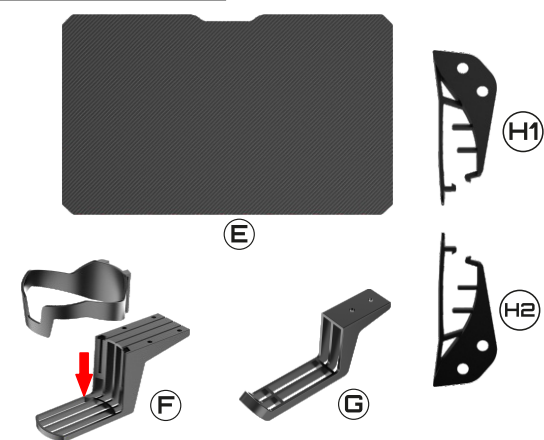


### STEP 3

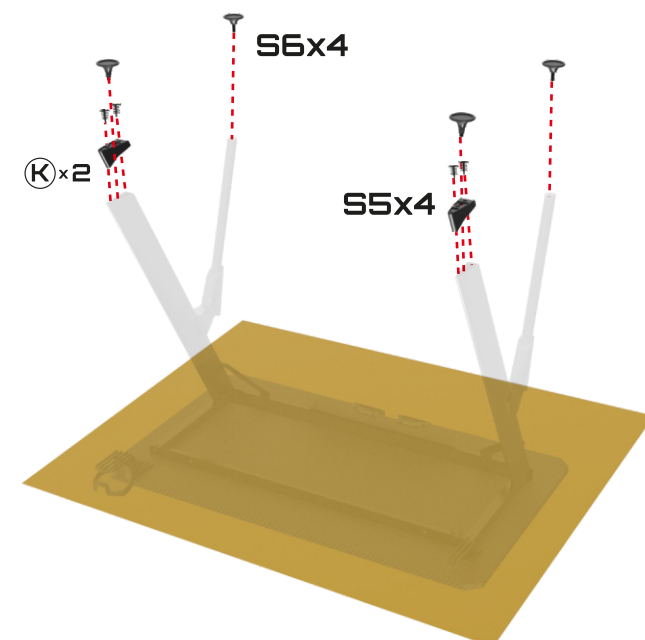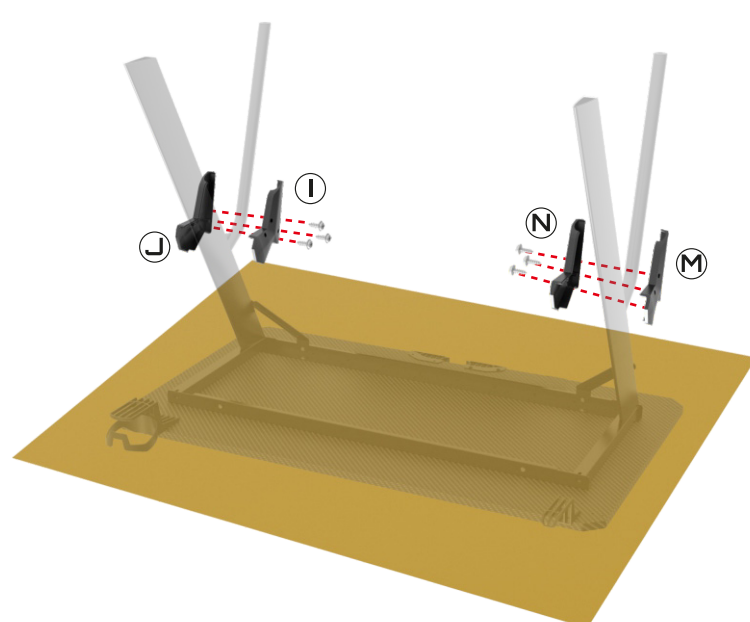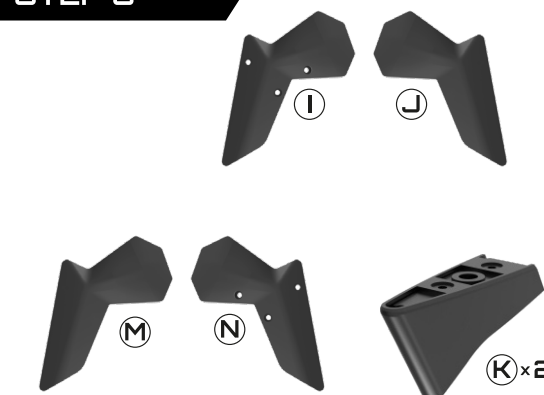

RGB EXTENSIONS

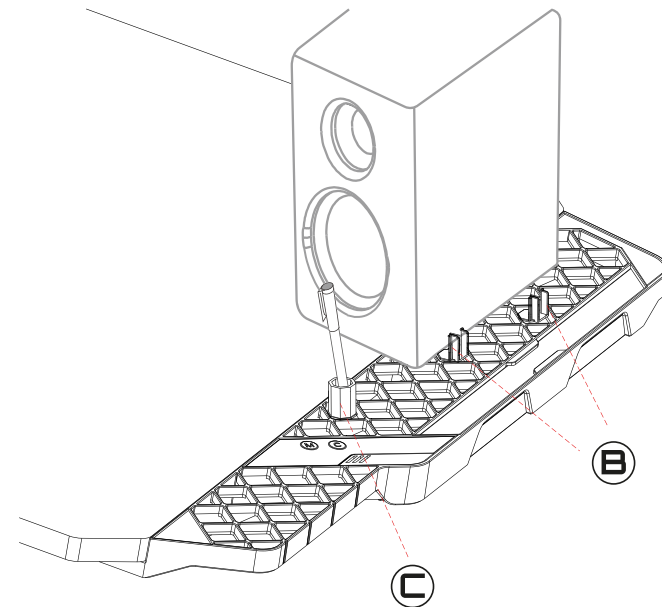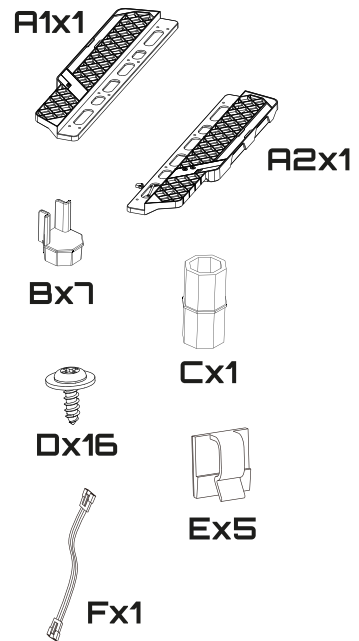



STEP 1

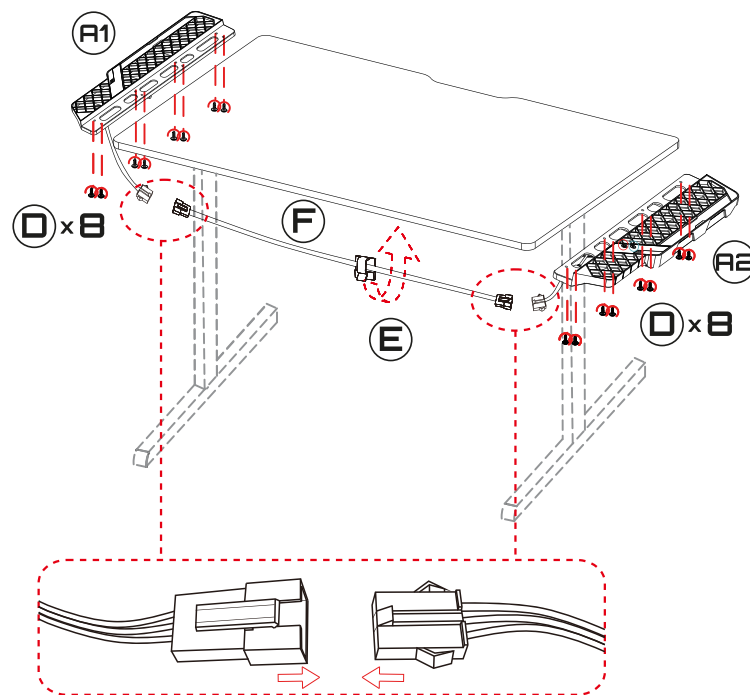

RGB CONTROL BUTTONS:


- Press **M** Button once to light on RGB
- Press **M** Button twice to enter in the music reactive mode
- Press **M** Button three times to turn off the RGB lights
- Press **C** Button to switch between colors

CABLE ACCESSORY INSTALLATION

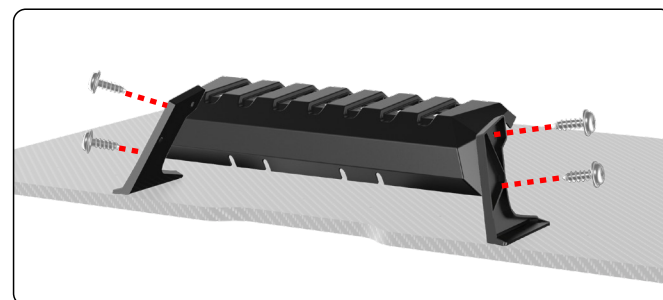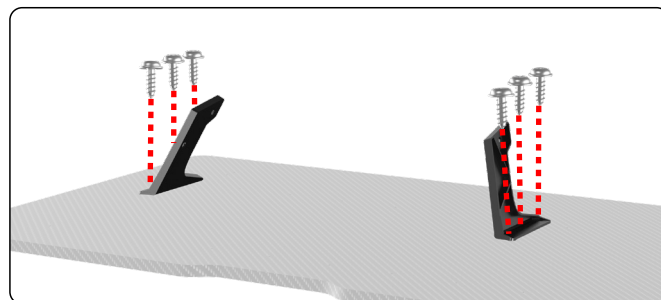

# DRIFT DZ150

ADVANCED RGB GAMING DESK

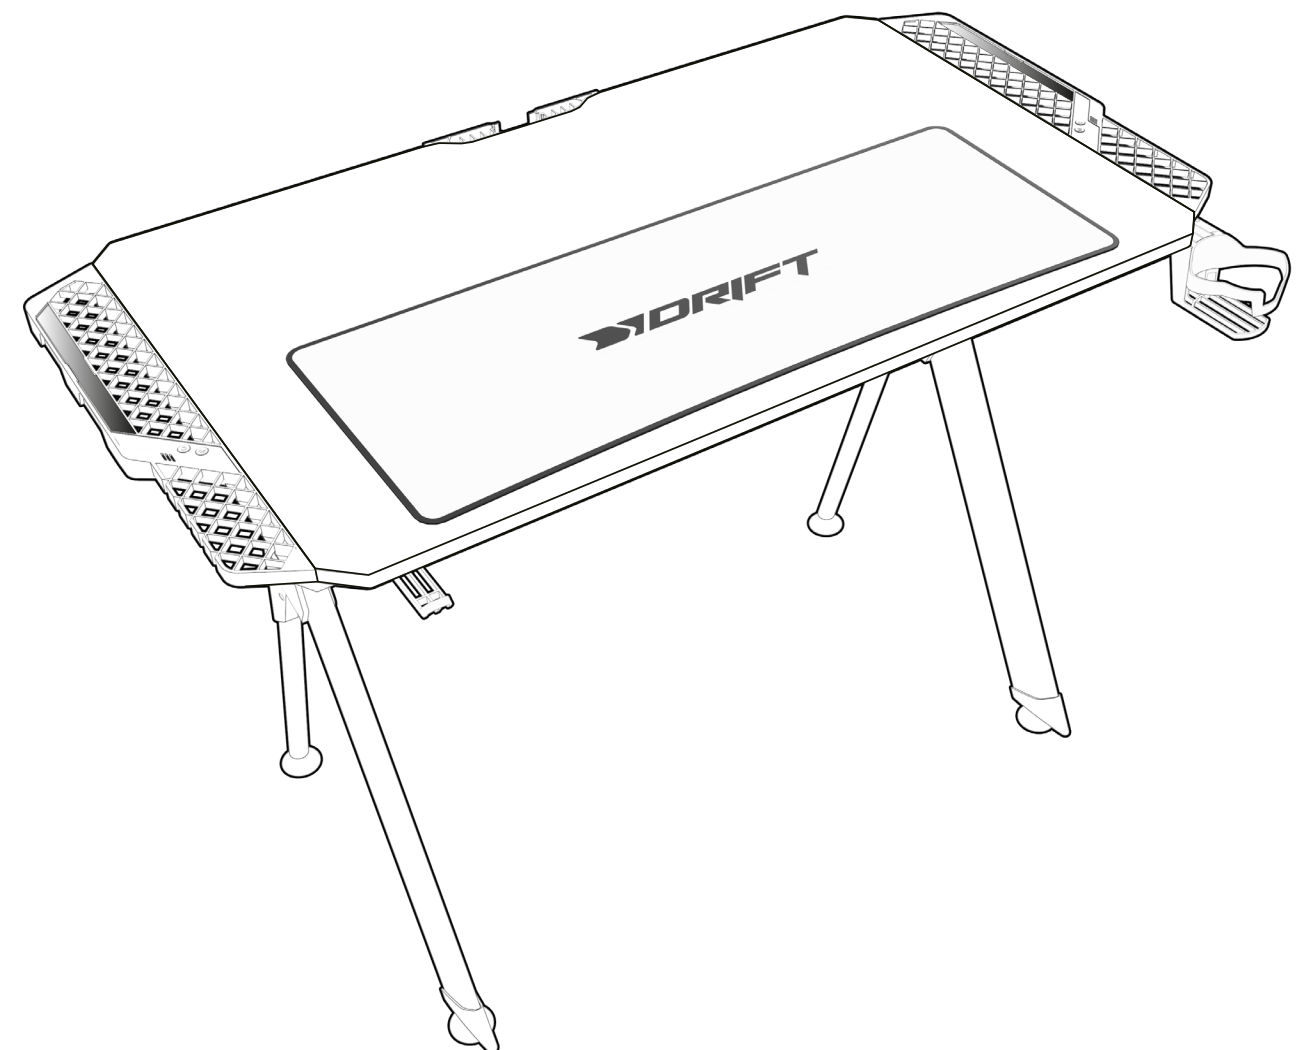

## INSTALLATION GUIDE