

TC32G OLD THERMOSTAT TROUBLESHOOTING

temperature controller changing

- 1、Screw off the screws(four) of the back panel, and remove the back panel,



- 2、Take out shelves




- 3、Take out the drip tray



4、Reverse the unit




5、Take off the fixation of the temperature controlling sensor

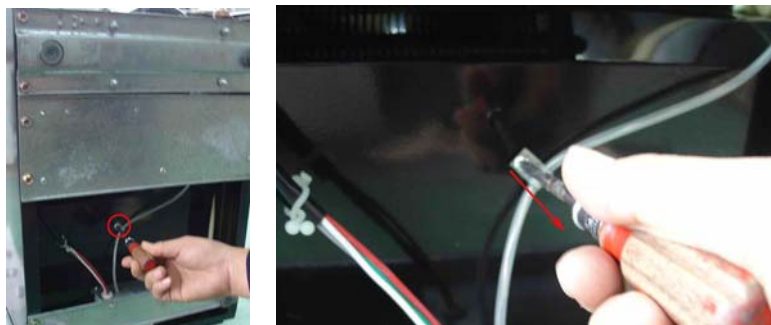


6、Take off the screws(two) of the temperature controlling sensor



7、 Release the screw of the evaporator board

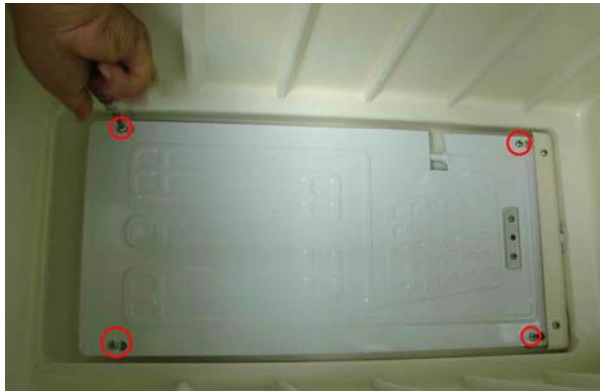

8、 Take off the evaporator board, pay attention to the angle, prevent the evaporator tube from rupturing

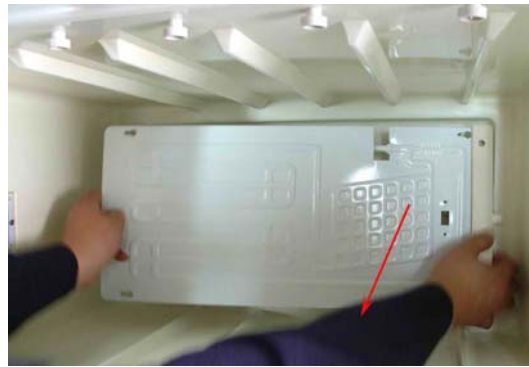


9、 Adjust the temperature sensor




10、 Remove the temperature button




11、 Take off the screws(four) of the front panel, and remove the front panel

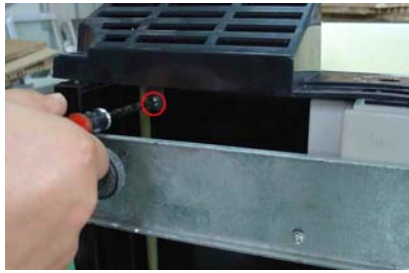


12、 Screw off the screw of the temperature controlling box

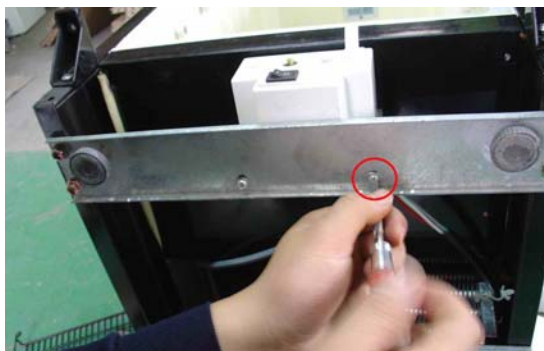




13、 Take out the temperature controlling box

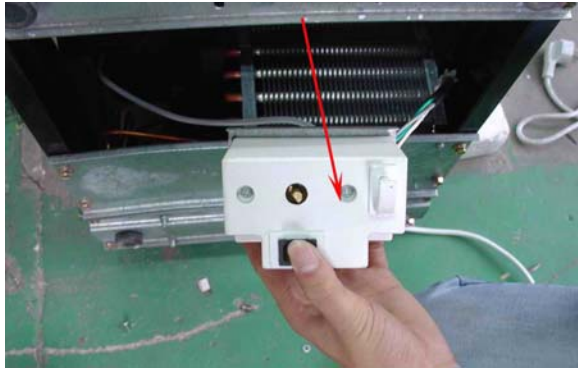


14、 Screw off the screw of the temperature controller

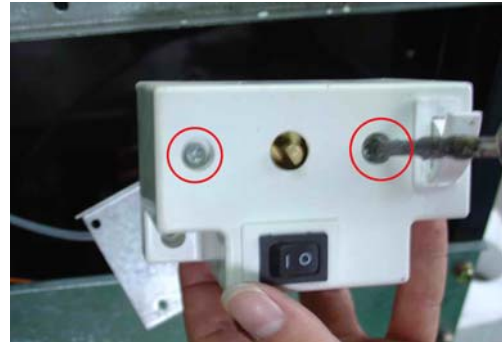


15、 Take off the inserting piece

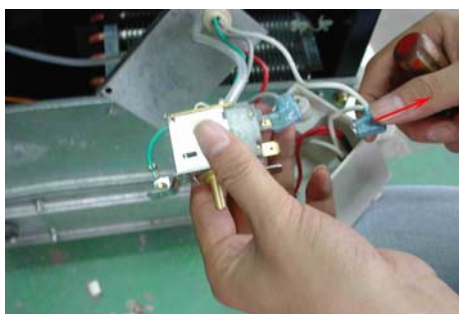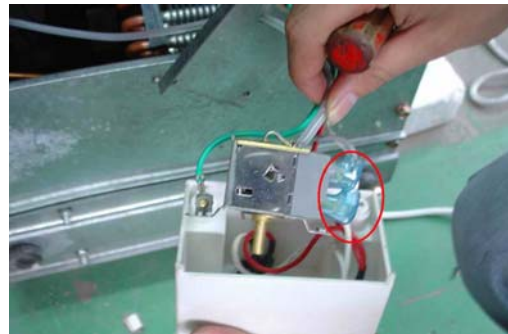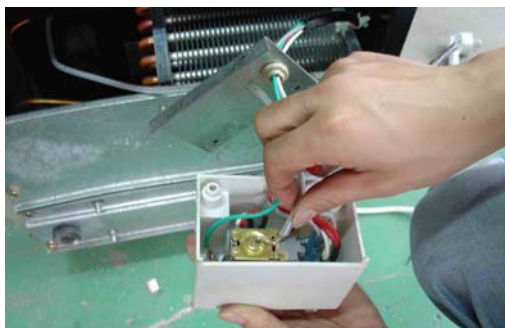


16、 Take off the earth screw

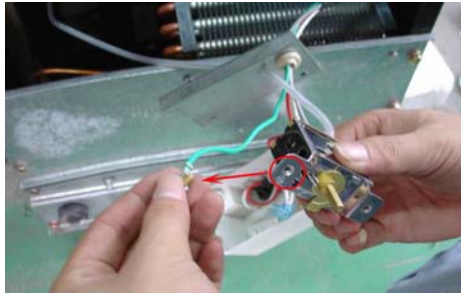

17、 Take out the temperature controller, and do changing

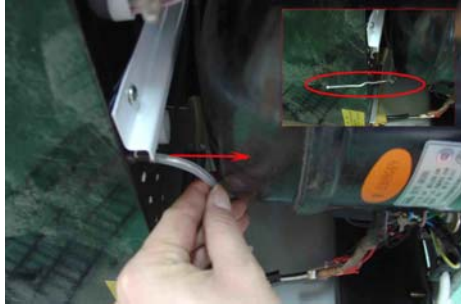


18、 Chang a new temperature controller, and fix it in the box

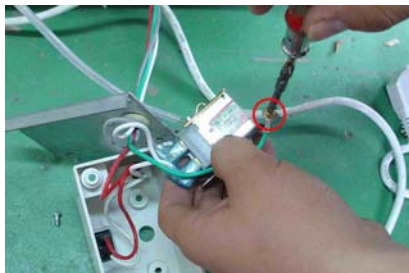


19、 Fix the new sensor in about 10cm, and do adjusting



20、 Fix the sensor, and fix the evaporator board

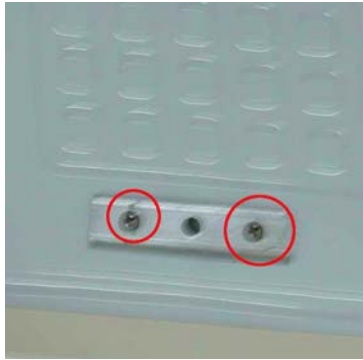

21、 Fix the fixation of the temperature controller

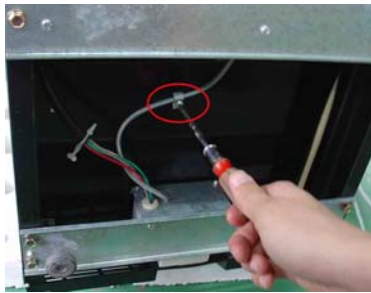

22、 Install the drip tray



23、 Fix the pane



24、 Fix the pane and the button



25、 Put in the shelves

