


# Vinotemp®

## VT-TC32G, VT-WC58GNV, VT-60 Temperature Sensor Probe Replacement

1. Remove the display board.



2. Measure the sensor wire with the multi-meter. (It should read approximately 5k at the normal temperature)

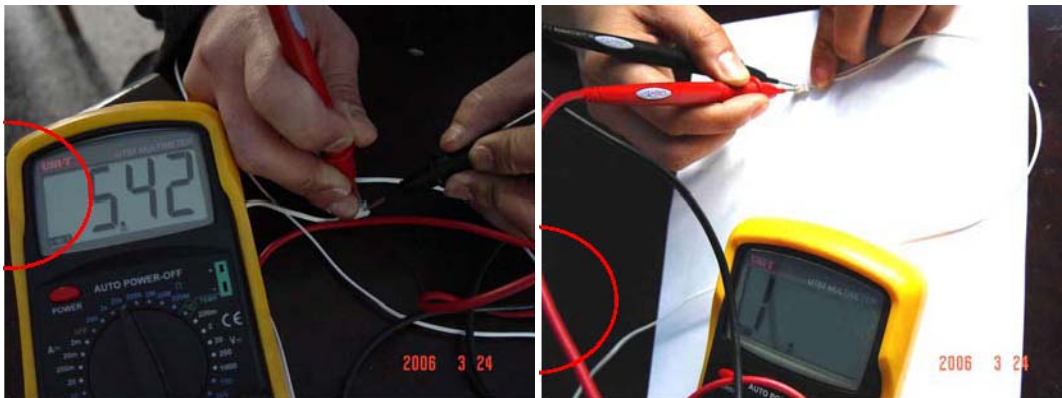

Normal

Abnormal

3. If abnormal, carefully cut the end of the connector off and replace it with a new connector.



4. Measure the new sensor. (It should read approximately 5k)



5. If the reading is still not correct, replace the top sensor.

a. Disconnect the temperature sensor.



b. Replace the temperature sensor.



c. Measure the new sensor. (It should read approximately 5k)

