# VERDBOARD.

# SR-SR-1009CS (R1) Constant Voltage Receiver, 12-36V 96-288W

| Model No.:                    | SR-1009CS (R1)        |  |  |  |
|-------------------------------|-----------------------|--|--|--|
| Input Voltage:                | 12-36V DC             |  |  |  |
| Output Wattage:               | 96-288W               |  |  |  |
| Output Current:               | 1 x 8A (1CH, 8A/CH)   |  |  |  |
| Compatible Remote Controller: | SR-2819S-DIM (R1)     |  |  |  |
| Case Temperature (Tc):        | 75° C                 |  |  |  |
| Ambient Temperature (Ta):     | 20° C~+5°0 C          |  |  |  |
| Dimensions:                   | 86mm x 38mm x 21mm    |  |  |  |
|                               | (3.4" x 1.5" x 0.82") |  |  |  |
| Certifications:               | CE/cRU/RoHS           |  |  |  |

| Name:    |  |
|----------|--|
| Company: |  |
| Phone:   |  |
| Email:   |  |



# Features:

- 1 channel 12-36V constant voltage RF receiver, maximum 8A per channel.
- Designed to dim and switch single color LED lighting.
- · Full compatibility with a variety of single color RF remotes.
- Multiple zones can be controlled separately or synchronously with endless receivers in each zone.
- Each receiver can be controlled by up to 8 different remotes.
- Smooth brightness adjustment without any flickering.
- Radio frequency available for use is 869.5/434/916.5MHz.

Sold Separately



(R1)



#### **Disclaimer:**

The data and information contained in this specification sheet are subject to change without notice; the ratings supplied are provided based on the product manufacturer. The information contained in this specification sheet should not be considered a warranty, expressed or implied, including, but not limited to, a warranty of merchantability or fitness for a particular purpose. In no event shall Veroboard be liable for any incidental or consequential damages resulting from the use, misuse, or inability to use the product. This exclusion applies regardless of whether such damages are sought based on breach of warranty, breach of contract, negligence, strict liability in tort, or any other legal theory.



# Universal series RF Receiver


09.009CS.04007

Wiring Diagram

# FC CE PROHS 🕀 🌚

Important: Read All Instructions Prior to Installation


# **Function introduction**

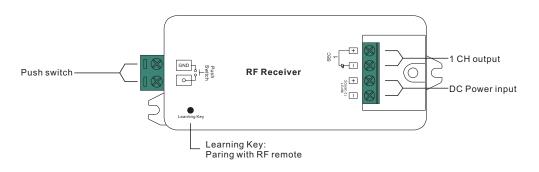




| No. | Input<br>Voltage | Output<br>Current | Output<br>Power | Remarks          | Size(LxWxH) |
|-----|------------------|-------------------|-----------------|------------------|-------------|
| 1   | 12-36VDC         | 1x8A              | 1x(96-288)W     | Constant voltage | 95x37x20mm  |
| 2   | 12-36VDC         | 1x350mA           | 1x(4.2-12.6)W   | Constant current | 95x37x20mm  |
| 3   | 12-36VDC         | 1x700mA           | 1x(8.4-25.2)W   | Constant current | 95x37x20mm  |

Radio Frequency : 868/915/434mhz
Waterproof grade: IP20

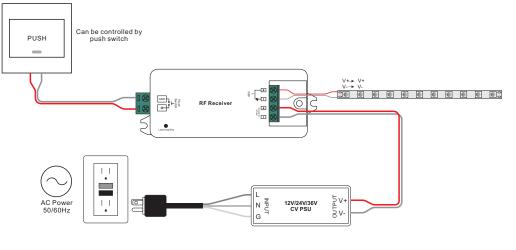

# If you use multiple receivers, you have two choices:

Option 1: have all the receivers in the same zone, like zone 1

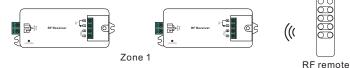

# Option 2: have each receiver in a different zone, like zone 1, 2, 3 or 4





# Safety & Warnings

• DO NOT install with power applied to device.

• DO NOT expose the device to moisture.

## Operation

Do wiring according to connection diagram.

## Pair RF Receiver with RF remote:

1. Connect and wire up the RF receiver correctly, power on.

2. Turn on the remote, click the **"Learning Key"** button on receiver, immediately click a zone number to pair the receiver to the specified zone if the remote is a multi-zone controller (if it is a single zone remote, this step is unnecessary), then touch the color wheel or slider bar on the remote (if the remote does not have color wheel or slider bar, click or touch any keys), the connected led light on receiver flickers twice, which means well paired. **Note:** one receiver can be paired with max 8 remote controls.

## PUSH DIM:

When connected to Push Switch, click push switch for switch ON/OFF, hold push switch to dim up/down the brightness

## Delete the pairing:

1. Wire up the RF receiver correctly, power on.

2. Hold down the "Learning Key" button on receiver for over 3 seconds until the connected led light on receiver flickers twice, which means well deleted.