 


FLIP ZERO GRAVITY


ELECTRONIC VIBRATION

USER MANUAL


Included Parts

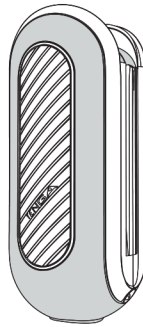


① Product Body

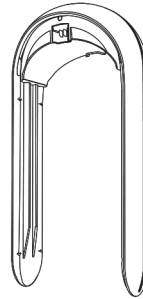


② Slide Arms

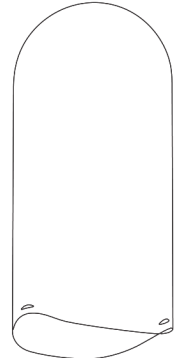

③ Clear Case

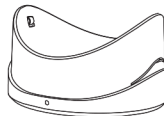

④ Charging Base

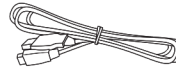

⑤ USB Charging Cable (Type C)




⑥ Transportation Anchor Ring
※Please remove and dispose of after opening




⑦ Pouch of HOLE LOTION REAL x2


SET UP

Connect the USB cable to the Charging Base, then plug into a USB port or wall plug adapter.

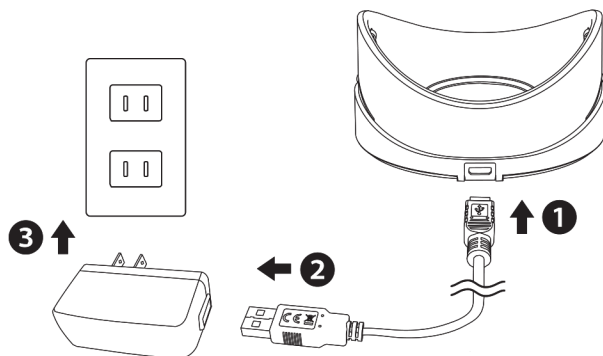

 Do not plug in or unplug the dedicated USB cable with wet hands. Doing so may cause electric shock or burns.

Please charge fully before first use.

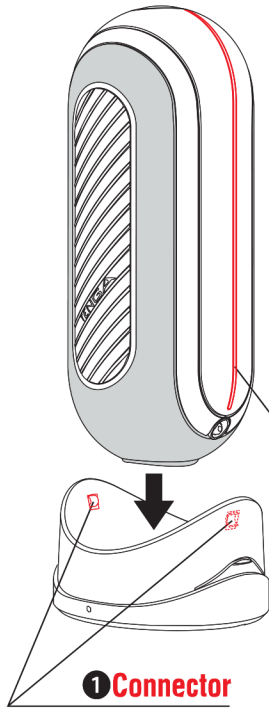



- ① Place Product Body, with Slide Arms attached, directly onto the Charging Base upright. Ensure the Charging Base and Slide Arm connectors are in contact.

*Charging will start when the Connectors on the Charging Base and the side of the Product Body make contact. Always ensure the connectors are clean.

1 Connector

1 Connector

- ② The Button can be facing up or down - the item will charge in either position.

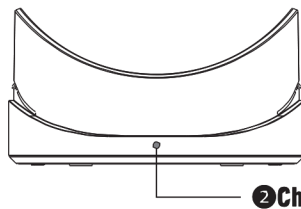
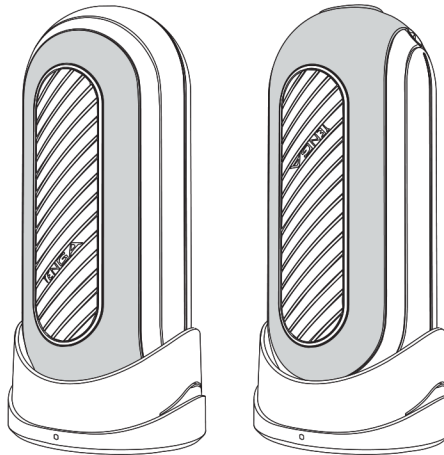


- ③ The Charging Lamp will turn on when the item is charging. When the lamp turns off, charging is complete.


2 Charging Lamp

⚠ To maintain product quality, please ensure to fully charge at least once every 6 months.


① Remove Slide Arms from the Product Body.

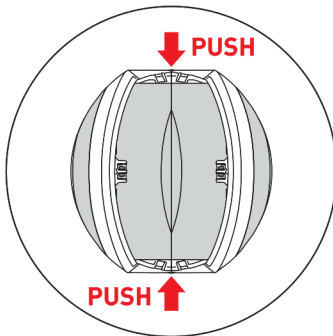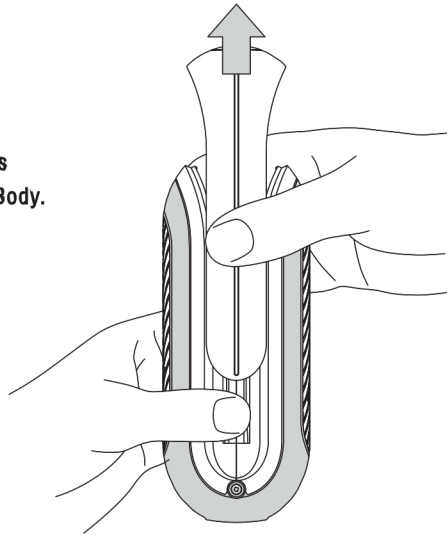

② Hold Product Body by the Slide Arm rails from both sides and squeeze until both locks click open.


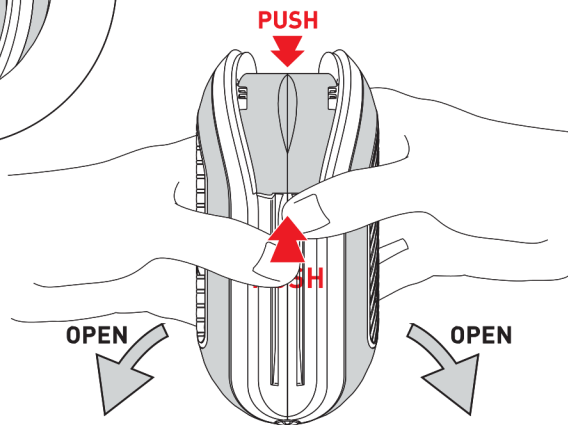


 Note that excessively pulling the product open (towards x), such as when washing or applying lotion, may damage the product.

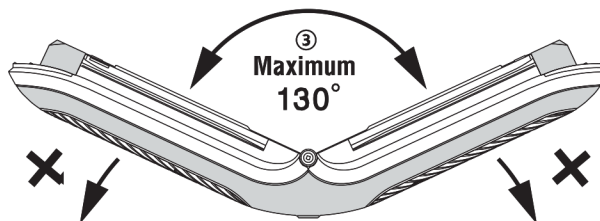


BEFORE USE

  ① Fully lubricate the inside of the item.

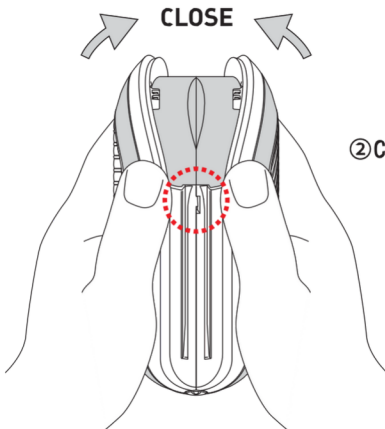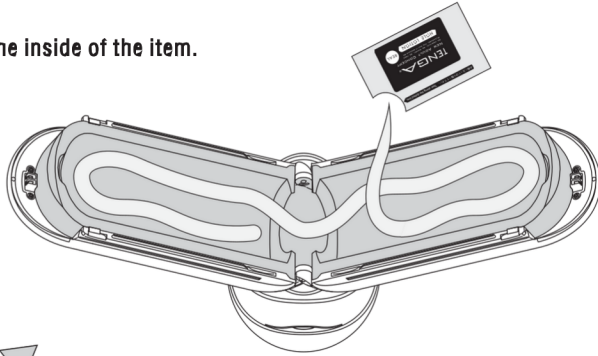


② Close the item ensuring both locks click shut.

③ Slide on the Slide Arms.

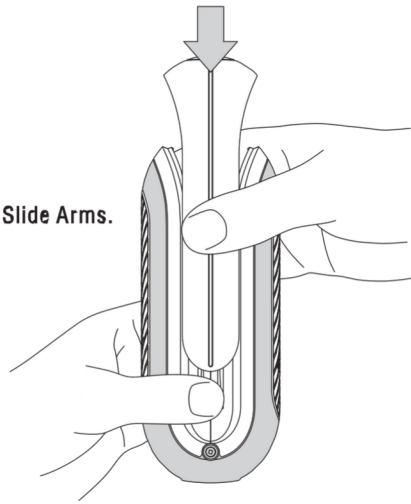

④ Lubricate the insertion point.

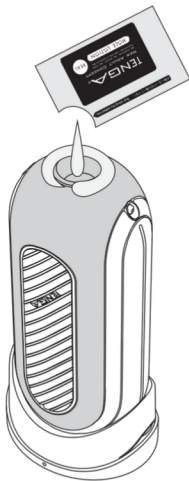

※ After you have used up the included tester pouches of HOLE LOTION, we suggest TENG A HOLE LOTION (sold separately) for further uses. (see pg.45)



The ideal amount of lotion is about 10-20ml.

Over-lubrication may lead to spillage from the One-Way Valve (see pg.21).

Please apply considering your preferences while being careful with the amount.



HOW TO CHANGE MODES

Two built-in motors provide powerful vibrational stimulation.

PUSH



Button
Hold Button : ON/OFF
Press Button: Cycle Modes

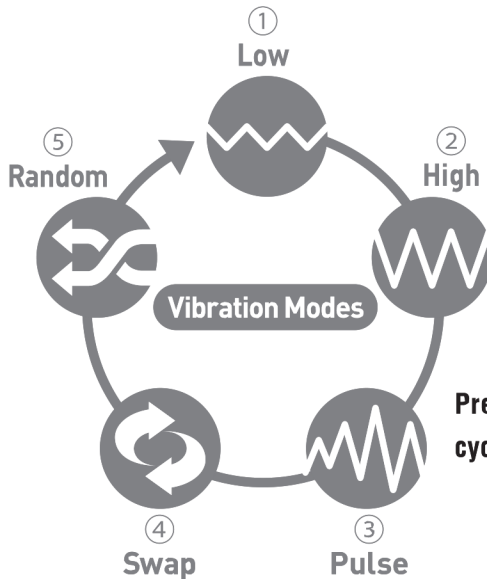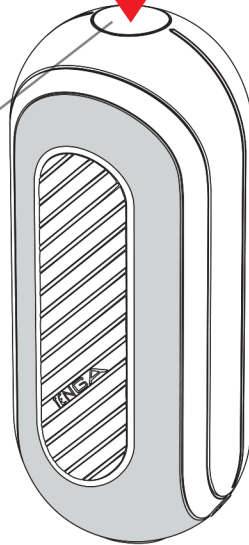


Pressing the Button will cycle through the modes.

Low	Basic Vibration Mode
High	Maximum Motor Vibration
Pulse	Rhythmic Pulse Patterns
Swap	Motors Vibrate Alternately
Random	Random Vibration Patterns



Removing the Slide Arms will cause the vibration to stop. If you reattach the Slide Arms, it will resume the mode used at time of removal.

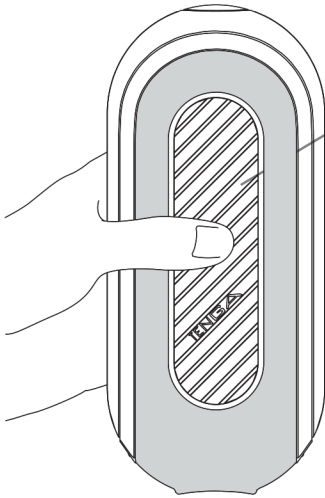


Pressure Pad

After insertion, you can use the Pressure Pads to manually control the pressure, or squeeze out the internal air to create strong vacuum suction.

① Use the Pressure Pads to squeeze out the internal air.

PUSH

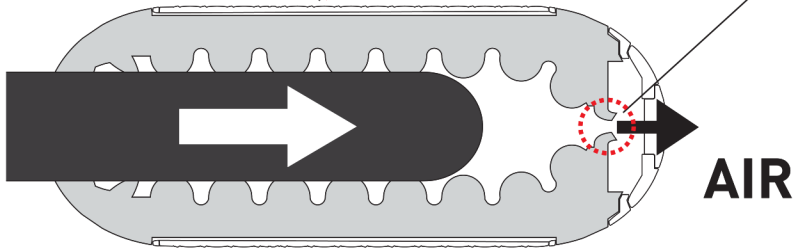


② The One-way Valve releases the internal air.

PUSH

※Cross-section image.




③ Strong vacuum suction.

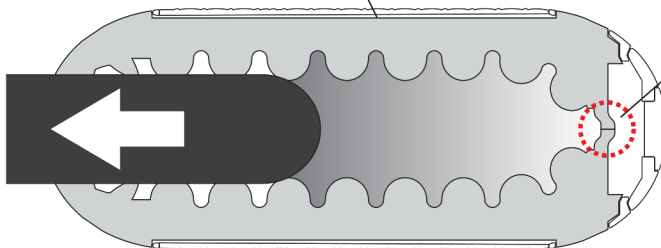

④ The one-way valve closes to seal in the internal suction.

HOW TO CLEAN THE PRODUCT / SLIDE ARMS

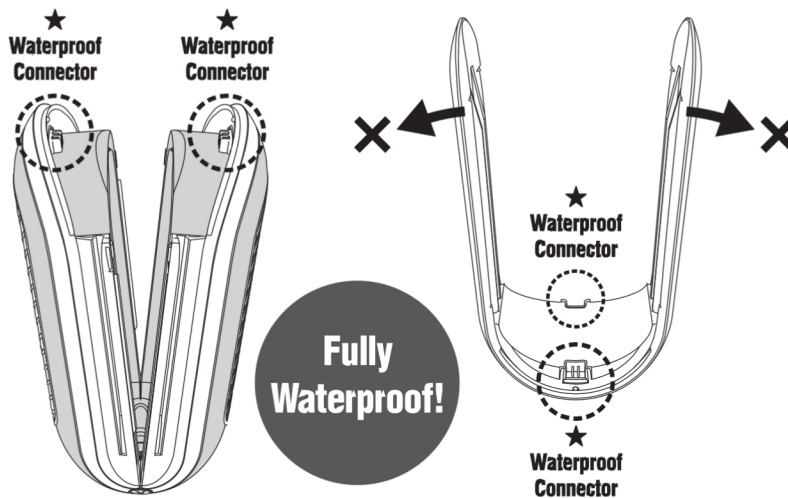

- 1 Remove Slide Arms, open the Product Body and wash both thoroughly with cold or tepid water.

***When washing, take care not to pull the Slide Arms outward, as indicated with X in the image.**

Submerging in water or splashing with water while pulled outward may cause item to malfunction.

*If you wish to use soap, please ensure that it is a mild or neutral soap.

Do not use alcoholic or acidic/alkaline cleaners. Doing either could lead to product discoloration or deformation.

*Do not wash with hot water.


Do not leave the product submerged in water for extended periods of time.

- 2 Pat dry with a dry cloth.

***Please be sure to thoroughly wipe off any moisture, especially from the connector.**

If moisture is left on the connector, it can cause dirt to accumulate, resulting in malfunction.

HOW TO CLEAN THE CHARGING BASE

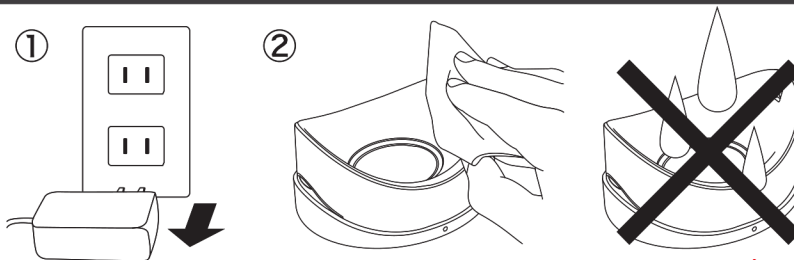

- 1 Always unplug the item and remove cables from Charging Base before cleaning.

- 2 Clean with a wrung-out, damp cloth.




***Do not wash with water, the Charging Base and USB Cable are NOT waterproof.**

**NOT
Waterproof!**





To avoid electric shocks, electrical damage or fire hazards, please do NOT submerge Charging Base in water. Please do not place anything other than the Product Body or Slide Arms on the Charging Base.

Pat dry with a dry cloth after washing.

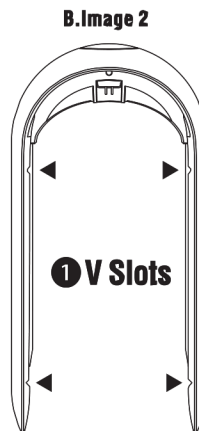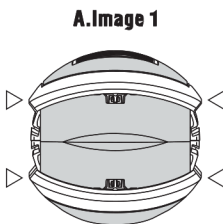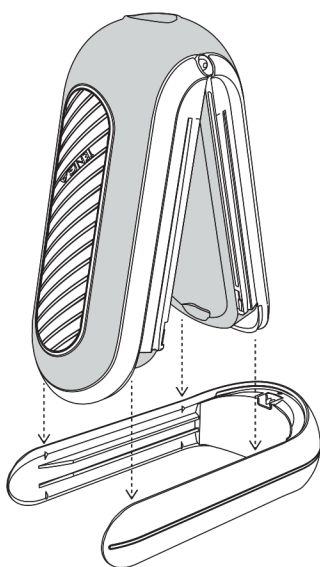

① Open Product Body and place Product Body sides (marked △ on Image 1) on the Slide Arm V Slots (marked ▲ on Image 2) as shown.

② Place in a well ventilated area to air dry.
※ Please dry well to ensure hygienic storage.

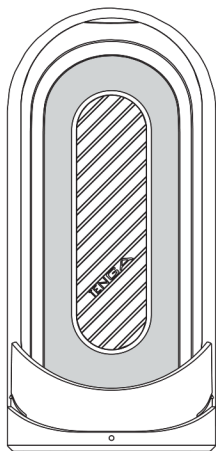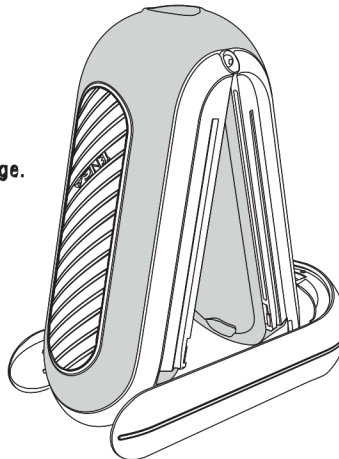

③ Once fully dry, close Product Body, replace Slide Arms, place on the Charging Base and cover with the Clear Case.
※ Store in a cool, dry, dark place away from direct sunlight and/or humidity.

【The product won't turn ON】

- Press and hold Button for 2~3 seconds.
- Ensure the item is fully charged.
- Ensure Product Body is fully cleaned, leaving no fluids or dust on the Slide Arms or Connectors before storing.

【The product won't charge / Charging Lamp won't turn on】

- Ensure the item is fully charged.
- Ensure the USB Cable is properly connected.
- Ensure USB cable is connected the right way up on the Charging Base.
- There may be a problem with the charging connection.
 - Ensure Charging Base is standing upright and check to see if connectors of Charging Base and Slide Arms are touching on both sides. Re-connecting the device may improve a poor connection.
 - Ensure Charging Base and Product Body are fully cleaned, leaving no fluids or dust remaining before storing.
 - Long-term use or incorrect storage methods may cause the elastomer to deform and may not properly connect to the charging Base. In such case, please place Product Body onto the Charging Base with the insertion point facing upwards (see pg.5).
 - If the product isn't fully charged after 90 minutes and the lamp does not turn off, there may be a problem with the charging connection. Please check if any of the above conditions apply.

【The product won't stay on / the vibration is weak】

- Ensure the item is fully charged.
- Deplete the battery completely once, then fully charge.

There are cases where doing so several times will fix the problem.
If a long time has passed since purchase,
the product life of the battery may have ceased.

WARNING

- TENGA Co., Ltd. can not be held liable if used in any way other than that stated in this User Manual. Use at own risk.
- Do not use on damaged, irritated or otherwise abnormal skin. If you experience any discomfort or irritation, stop use immediately and consult a medical professional.
- Use and store the product in a place out of the reach of infants and pets to avoid injury as well as the accidental swallowing of accessories and removable parts.
- Immediately notify a doctor if the product or one of its components is swallowed.
- If you have a pre-existing medical condition please consult a physician before use.
- Immediately cease use if you feel excessive pain or discomfort during use. Contact a medical professional immediately.
- If you find the item to be defective, cease use immediately and turn product OFF. Be sure USB cable is disconnected. Continued use may cause injury.
- Do not use malfunctioning or damaged products to avoid injury.
- Do not attempt to fix the product if found defective. This may lead to fire and electricity hazards and may put you in danger.
- DO NOT drop or expose to extreme force as this may cause product damage.
- Do not allow metal objects such as coins or jewelry to come into contact with the charging terminal. Doing so may cause electric shock, short circuit, or malfunction.
- Do not heat with anything other than the FLIP WARMER, do not use at high temperatures, do not place item or leave unattended in or near open flames or high temperature areas. Any of these may lead to overheating, product damage or fire hazards.

Usage Warning

- Do not share with others to avoid transmission of contagious diseases and infections.
- Lotion may leak during use. Please ensure you use the item on a surface where this can occur.
- After use, ensure no lotion or other fluids remain on the item by washing thoroughly with tepid water and mild soap, and ensure product is completely dry before storing.
- Do not wash with alcoholic cleaners, or corrosive substances such as benzine or paint thinner. This may damage the item.
- Do not boil or attempt to wash with hot water. Do not place in hot or cold water for extended periods of time.
- Do not use in salt water or sea water. This may lead to product damage.
- Keep away from hot, humid places and direct sunlight.
- Please do not store with insecticides, solvents, silicone items, or oil-based products. This may cause the product to become deformed.
- The Product is waterproof and fully washable with water, but please do not use it in water.
- For first use, or use after a long period of disuse, please make sure to fully charge.
- Use only the USB Charging Cable that came with the product. Also, do not use the USB Charging Cable for any other electronic device. Doing so may result in electric shock, short circuit, or malfunction.
- When removing the USB Charging Cable, always hold the port and NOT the cable. Using excessive force may lead to short-circuiting, electrocution, or fire hazards.
- Please clean the charging stand and dedicated USB cable to prevent dust from accumulating. Unplug from the power source and store when not in use.
- Slide Arms and Charging Base all house powerful magnets. Do not expose items that can be affected by magnetic fields, such as smartphones, watches, IC cards or music players to these magnets, as it could damage your items.

Disposal



Regarding disposal of Waste Electrical and Electronic Equipment (WEEE). The symbol of a crossed-out dustbin indicates that this item should be taken to an appropriate collection point for proper disposal. Please do not dispose with household waste. Product contains Li-ion Polymer Battery.

Product Warranty

This product is covered by a One Year Warranty from the date of purchase.

Please note the warranty will not cover the following circumstances.

- If you fail to show both this User Manual and Original Purchase Receipt.
- If the product damage is due to your use or breaking of the item.
- If the damage was caused by dropping or other accidental damages after purchase.
- If the item was damaged in cases such as house fires or natural disasters.
- If the item is damaged from normal wear-and-tear of product during fair use.

Specifications

Product Body

Running Time	Approx. 40 min. (Full Power)
Charging Time	Approx. 90 min (Rated Voltage DC 5V, 1A)
Dimensions	W80 × H180 × D70 mm W3.1 × D2.7 × H7 inches
Weight	Product Body: Approx 545g (1.20 lbs) Product In Case: Approx. 765g (1.69 lbs)
Materials	PP, PC, ABS, Elastomer, Silicone
Battery	Li-ion Polymer Battery (620mAh)

USB Charging Cable

Rated Voltage	AC 100~240V, 50/60Hz
USB Cable Length	1.2m / 47.2 inches