 




120V CORDLESS LAWN MOWER
MODEL# EA153V

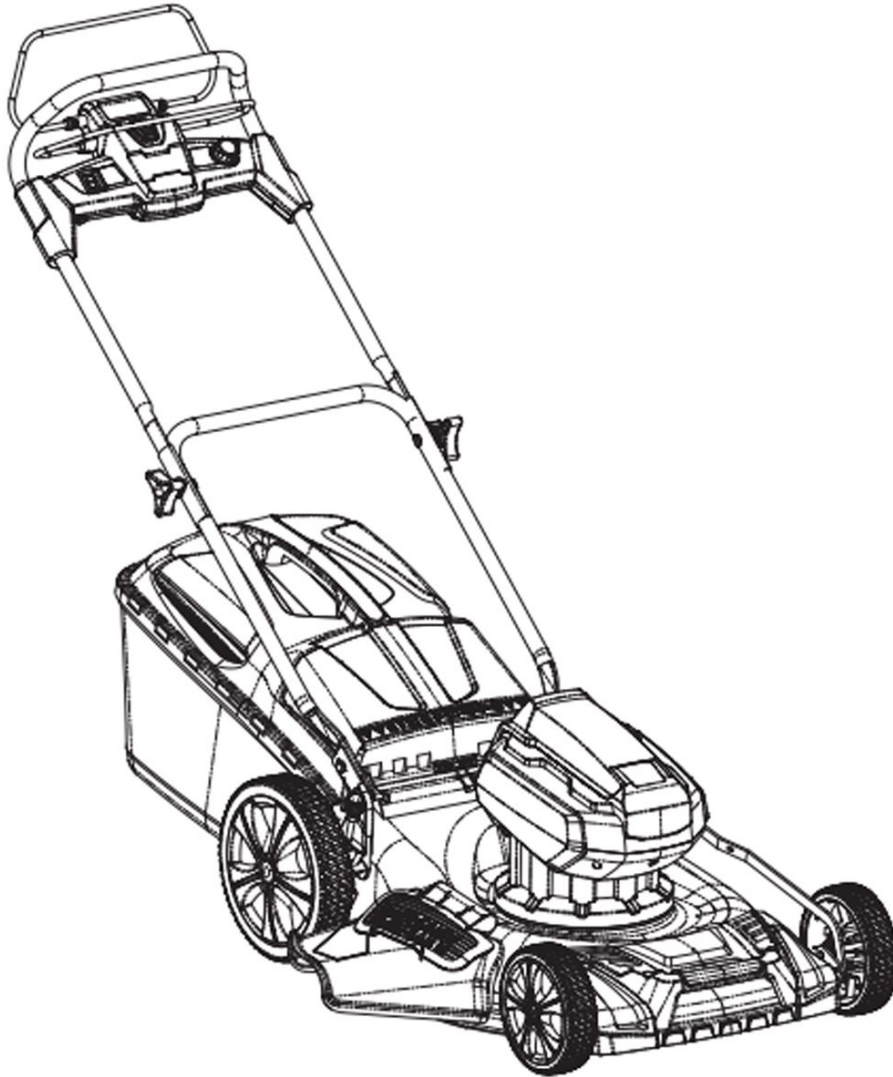

Parts Breakdown

 
For Service or Questions

1-800-876-3009

www.redbacktools.com

email us at support@redbacktools.com

MAJOR PARTS OF THE LAWN MOWER - EA153V

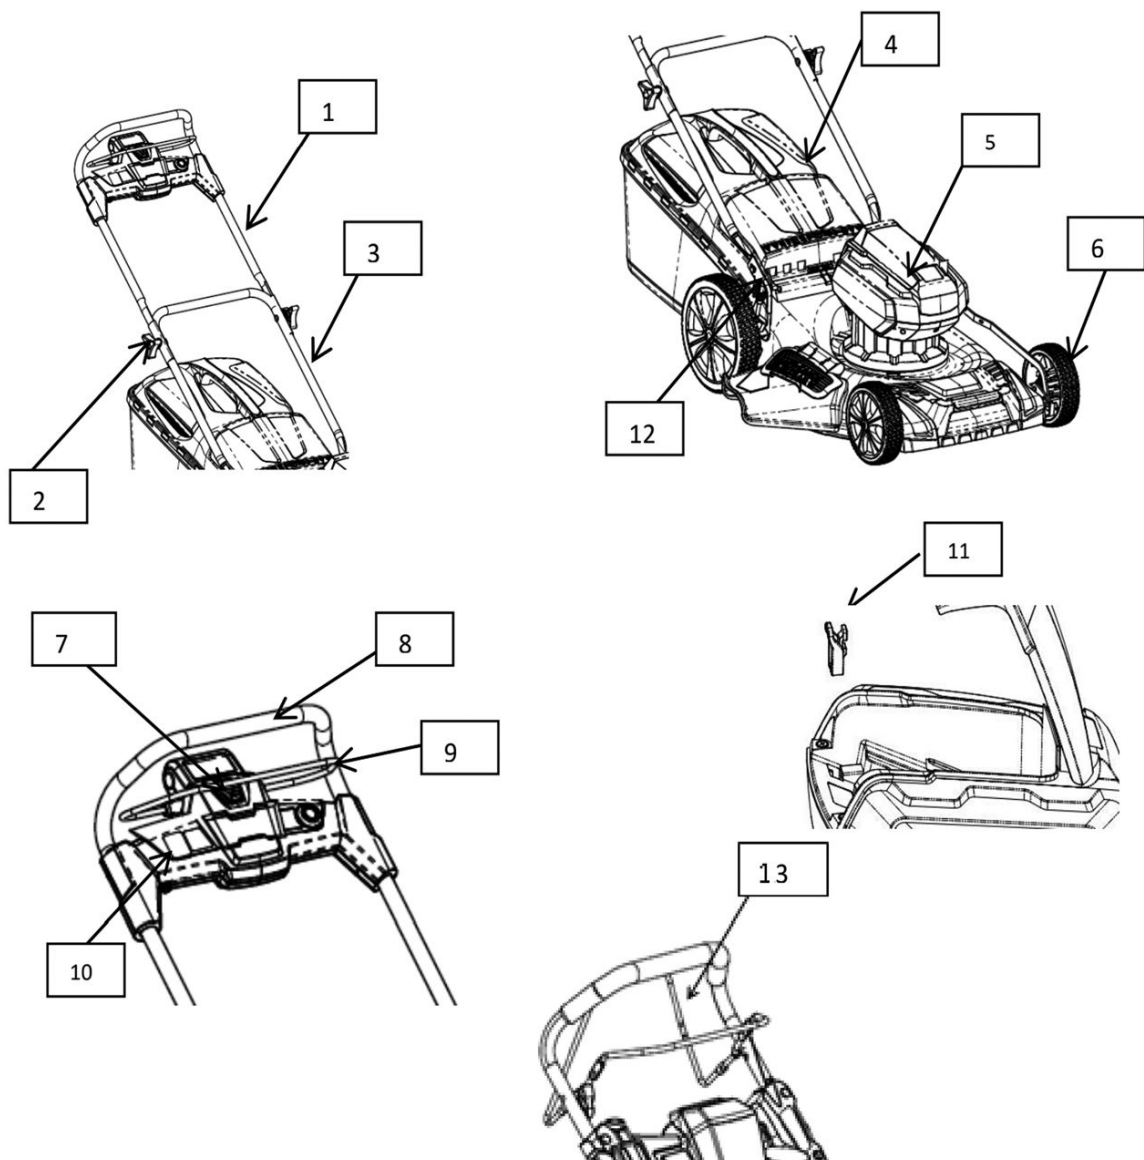

- | | | |
|---------------------|------------------------------------|-----------------|
| 1. Upper handle. | 2. Fasten screw | 3. Lower handle |
| 4. Grass catcher | 5. Battery | 6. Wheels |
| 7. Switch interlock | 8. Handle | |
| 9. On/Off switch. | 10. LED state of battery indicator | |
| 11. Safety key | 12. Cutting height adjustment | |

For Service or Questions

1-800-876-3009

www.redbacktools.com

email us at support@redbacktools.com

EA153V Parts List

Part Number	Title	QTY	Model Number
1	Upper Handle	1	EA153V-01
2	Fasten Screw	2	EA153V-02
3	Lower Handle	1	EA153V-03
4	Grass Catcher	1	EA153V-04
5	Battery Compartment	1	EA153V-05
6	Wheels	2 Front (7") 2 Rear (10")	EA153V-06
7	Switch Interlock	1	EA153V-07
8	Handle	1	EA153V-08
9	On/Off Switch	1	EA153V-09
10	LED Battery Level Indicator	1	EA153V-10
11	Safety Key	1	EA153V-11
12	Cutting Height Adjustment	1	EA153V-12
13	Self Propel lever	1	EA153V-13

For Service or Questions

1-800-876-3009

www.redbacktools.com

email us at support@redbacktools.com