

Congratulations on your purchase! Thank you for choosing a Sirius product.

SILT-26PENDANT RANGEHOOD INSTALLATION INSTRUCTIONS

 SILT-26 B
 EAN #9351116002428

 SILT-26 C
 EAN #9351116001308

 SILT-26 G
 EAN #9351116001322

 SILT-26 W
 EAN #9351116001315



DEAR CUSTOMER	3
BEFORE YOU INSTALL	4
USING THE RANGEHOOD	5
INSTALLATION INSTRUCTIONS	5
REMOTE CONTROL	8
TIMING / MAINTENANCE	9
BRACKET DIAGRAM	10
WARRANTY INFORMATION	11

DEAR CUSTOMER

The rangehood is intended for household use only. Materials used for packaging are nature friendly and may be recycled, deposited or destroyed without any threat to the environment.

In order to recognize these features, all packing materials are marked with relevant symbols.

When you plan to replace your rangehood, deposit your old appliance with the authorized depot dealing with used household appliances.

INSTALLATION

Instructions for use have been prepared for the user, and describe the particulars and handling of the appliance. These instructions apply to different models from the same family of appliances, therefore you may find information and descriptions that may not apply to your particular appliance.

INSTALLATION INSTRUCTIONS

He appliance should be connected to the power supply in accordance with the instructions from the chapter "Electrical connections" and in line with the standing regulations and standards. The connections should be carried out by a qualified personnel only.

FIRE HAZARD PROTECTION

Appliances are allowed to be mounted on one side next to a high kitchen cabinet, the height of which may exceed that of the appliance. On the opposite side however, only a kitchen cabinet of equal height as the appliance is allowed.



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. This appliance is marked according to the European directive 2002/96/EC on waste electrical and electronic equipment (WEEE).

BEFORE YOU INSTALL




The appliance must be installed and connected to the power supply only by a qualified technician.

- There shall be adequate ventilation of the room when the range hood is used at the same time as appliancess burning gas or other fuels (not applicable to appliances that only discharge the air back into the room)
- The details concerning the method and frequency of cleaning
- There is a fire risk if cleaning is not carried out in accordance with the instructions;
- Do not flambé under the range hood;
- CAUTION: Accessible parts may become hot when used with cooking appliances.

TECHNICAL DATA

- Voltage rating: 230 240V
- 50Hz

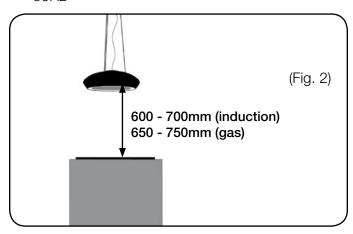

The cooker surface and the lowest part of the hood **must** be at a minimum distance, as shown above.

- The appliance is not intended for use by young children without supervision. Young children should be supervised to ensure they do not play with the appliance.
- When performing the electrical connections on the appliance, please make sure that the currenttap is provided with earth connection and that voltage values correspond to those indicated on the label placed inside the appliance itself.
- Please disconnect the appliance from power mains, before carrying out any cleaning or maintenance operation. If the appliance is not equipped with a nonseparable flexible cable and plug, or with another device ensuring omnipolar disconnection from the mains, with an opening distance between the contacts of at least 3mm, then such disconnecting devices must be provided in the fixed installation. If the appliance is equipped with a power cord and a plug, it shall be placed in such a way that the plug can be reached easily.


- The use of materials which can burst into flames (flambé) should be avoided in close proximity of the appliance. When frying, please pay particular attention to fire risk due to oil and grease. Being highly flammable, hot oil is especially dangerous. Do not use uncovered electric grills. In order to avoid possible fire risk, all instructions for greasefilter cleaning and for removing eventual grease deposits should be strictly followed.
- Two persons are needed for the installation of this product.
- The appliance can be arranged only for filtering performances. In its filtering version the air and fumes conveyed by the appliance are cleaned both by a grease filter and by an active carbon filter, and put again into circulation. While the lamp version (SILT26 LAMP) only allows for hob lighting.

WARNING: Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.

USING THE RANGEHOOD

The appliance can be arranged only for filtering performances. In its filtering version the air and fumes conveyed by the appliance are cleaned both by a grease filter and by an active carbon filter, and put again into circulation.

EXPLODED VIEW

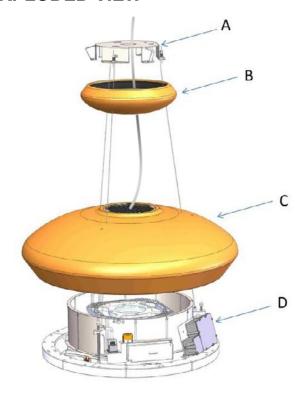

A: Mounting bracket
B: Ceramic plate cover

C: Rangehood body

D: Motor, light, and filter

WARNING: Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.

INSTALLATION

At the beginning make sure that the package is intact and all the parts are unbroken, otherwise stop the installation and contact the dealer.


The manufacturer is not responsible for damages caused by material handling or product installation.


Before installing the appliance read all these instructions carefully.

WARNING: This product is made of ceramics, for that reason it requires an appropriate and accurate handling, as well as a professional and accurate installation.


Extract the product from the packaging and lay it on a suitable place, a soft material such as sponge or fabric should be used to place the product on it.

By using the supplied drilling jig, perforate the wall according to the four pattern indicated by the jig itself. The center of the drilling jig should correspond to the center of the cooktop. Insert the supplied dowel into the holes made, tighten them, but do not tighten until they are flush; the three screws into the dowels corresponding to the holes with discharge head (Fig. 8 A) leaving the hole for the locking screw empty (Fig. 9 B) because it will be added later.

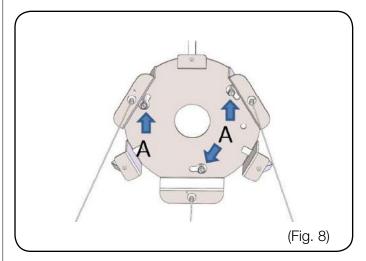


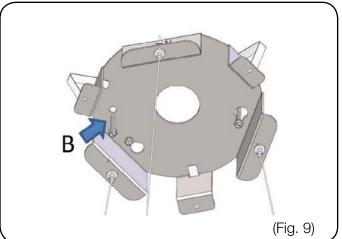


Place the ceramic cover over the motor components and insert the steel cables into the three holes of the ceramic, as shown in the figure (Fig. 1).

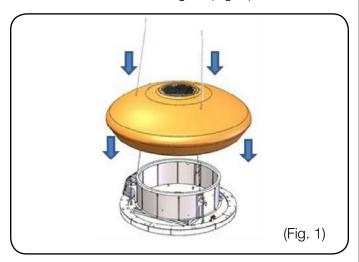


Put the power cable through the air outlet grill, see Figure 2. The ceramic part must perfectly cover the metal part named "D" in the exploded view.

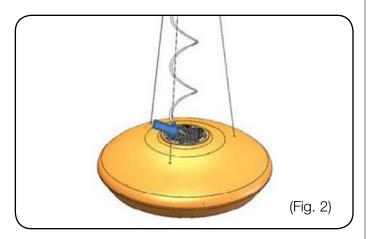


Extract from the packaging the ceramic cover for the ceiling plate (see the detail B on the exploded view), place the cover over the hood and put the steel cables through the three holes in the ceramic body, the power cable should be put through the central hole of the ceramic, see Fig.3.

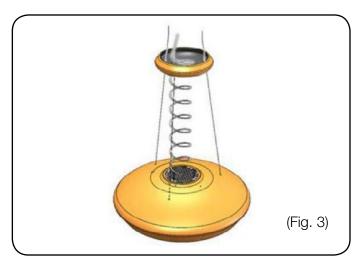


Take the metal plate from the packaging and then put the steel cables through the appropriate supports, as shown in Fig. 4.

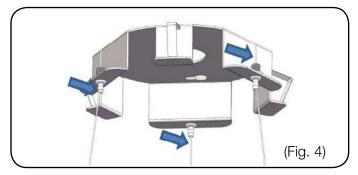


Adjust the height of the rangehood by scrolling the steel cables up and down inside the support. You need to unscrew and push the support in order to allow the scrolling of the cable, see Fig. 5.

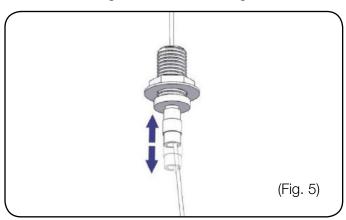

Check that the remaining length of steel cables from the supports indicated in Fig.6 is the same, in order to ensure that it will be installed perfectly parallel to the ceiling. Tightening the appropriate support by screwing it as shown in Fig.6, block the steel cables.

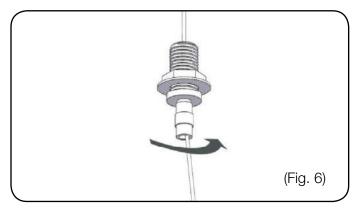


Add the clips as a further safety precaution for cable blocking Fig. 7.

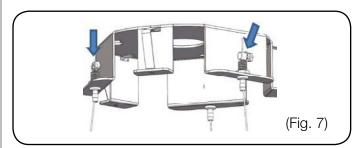


Put the hood near the ceiling and hook the plate to the screws previously installed (fig.8 A) Tighten the three screws fixing the plate to the ceiling, then block the hood definitively adding the security screw, see fig.9 B. Connect the appliance to the electric grid.


Lift up the ceramic cover until reaching the ceiling (fig.10), make sure that the springs have hooked the ceramic cover.

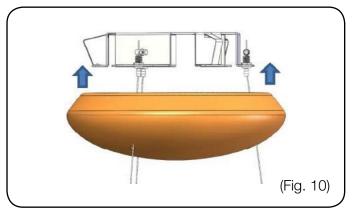

In case the ceramic cover of the body, is not perfectly flat or parallel to the body, it is possible to make an adjustment after installation. Remove the grease filter as described in Maintenance Section, remove the three plastic caps shown in Figure 13 A.

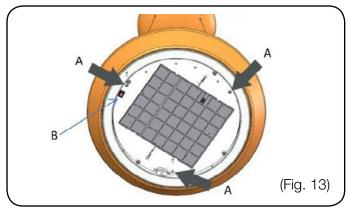

Using a Phillips screw head screwdriver, tighten or loosen the three screws in order to raise or lower the ceramic body on a specific side (fig. 14). After the adjustment insert the rubber tips and the grease filter again.

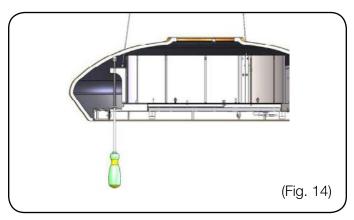

REMOTE CONTROL

Remote control

6 channel control for rangehood remote.

 When the rangehood is first turned on, hold the lighting button for 5 seconds.

RC001 - RADIO CONTROL

Radio control used for the remote operation of rangehoods.

TECHNICAL DATA

• Alkaline battery powered: 12 V mod. 23 A

Operating frequency: 433.92 Mhz

Combinations: 32.768Max. consumption: 25 mA

Operating temperature: -20 ÷ + 55 °C

• Dimensions: 120 x 45 x 15 mm.

OPERATING DESCRIPTION

The transmitter is equipped with 5 buttons for cooker hood management, as specified below:

: Light ON/OFF command.

() : Motor ON (speed level 1) / OFF command.

: Reduce speed.: Increase speed.: 10-minute timer.

INITIAL OPERATING CONDITION

The manufacturer supplies the radio control unit ready to be used with codes preset in the factory.



OPERATION MODE

Standard configuration:

Standard configuration requires all rangehood radio control systems to be provided with the same transmission code. In the event two rangehoods are installed in the same room or nearby, each system may affect the operation of the another. Therefore, the code of one radio control system must be changed.

Generating a new transmission code:

The radio control system is provided with preset codes. Should new codes be required, proceed as follows: Press simultaneously buttons:



for two seconds. When LEDs are on, press buttons:



(within 5 seconds). The LEDs flashing 3 times indicate the procedure is completed.

WARNING! This operation deletes permanently the preset codes.

Learning the new transmission code.

Once the transmission code is changed in the radio control unit, the electronic central unit of the cooker hood must be made to set the new code in the following way:

Press the main power-off button of the hood and then restore power to the electronic control unit. Within the next 15 seconds, press the Light Button to synchronise the central unit with the code.

Reset of the Factory configuration:

To restore the Factory configuration, follow the procedure described below: press simultaneously buttons:



for 2 seconds. When LEDs light on, press buttons:



(within 5 seconds). LEDs flashing 6 times in-dicate the procedure is completed.

WARNING! This operation deletes permanently the preset codes.

Emergency button:

In the event that the radio control does not work, use the emergency button to switch the appliance off. After any necessary repairs have been performed, reset the emergency button.

TIMING

As a result of the new EU65 "Energy label" and EU66 " Ecodesign" regulations issued by the European Commission, which came into force as from January 1st, 2015, our products have been adapted to comply with these new requirements. All of the models complying with the energy label requirements, are equipped with new electronics including a timer device for suction speeds control, when the air capacity exceeds 650m³/h. Internal motor models, with maximum air capacity higher than 650m³/h, are equipped with a timer device that automatically switches the suction speed from 4th to 3rd speed, after 5 minutes operation. External motor models are equipped with remote motors that, as for internal motor versions, include a timer device that switches down the suction speed when it exceeds 650m³/h. (See External Motors Instructions). Remote motors, whose air capacity exceeds 650m³/h at both 4th and 3rd speed, will have the following by default timer control functions: The suction speed is automatically switched from 4th to 2nd speed, after 6 minutes operation. If the appliance is working at 3rd speed, it is automatically switched to 2nd speed, after 7 minutes operation. Operation speeds can also be changed

The energy consumption of the appliance in standby mode is lower than 0.5W.


during operation.

MAINTENANCE


An accurate maintenance guarantees good functioning and longlasting performance. *Particular care is due to the grease filter The grease filter is fixed through magnets, therefore it is sufficient to insert a hand tool or the tip of a knife in the dedicated opening and push upwards in order to pull the filter out of its place. See Fig. 12. In order to remove the filter from the hood, unhook the two security cables opening their snap-hooks. The active coal filter has to be removed after the extraction of the grease filter by pushing its special plastic handle. The grease filter can be cleaned by hand-washing or in dishwashers. The active coal filter has to be replaced in relation to its use, at least once every six months. To clean the appliance itself tepid wa-ter and neutral detergent are recommended, while abrasive products should be avoided.

The power cord must be replaced only by qualified person.

The LED lamps must be replaced only by qualified person.

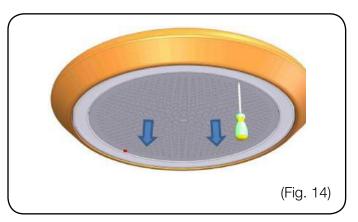

BRACKET DIAGRAM

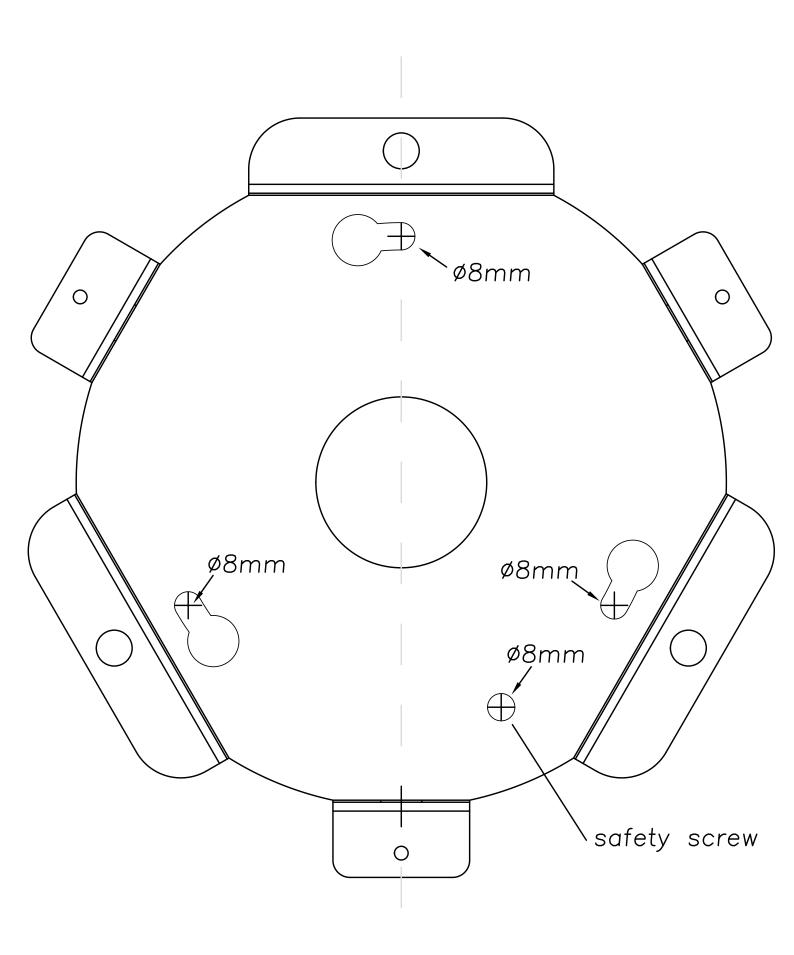

WARRANTY INFORMATION



Dear Customer,

Thank you for choosing this Sirius Rangehood.

We are sure that it will provide you with many years of excellent service. At Arisit Pty Limited we are dedicated to ensuring that our customers receive the best possible after-sales care.

The Sirius 'Protection Plan' has been devised to give you added peace of mind. Should you encounter any problems with your appliance, our nationwide team of specially trained technicians will deal with your call swiftly and efficiently.

PRIORITY SERVICE, ACCESSORIES & SPARE PARTS

AUSTRALIA

ARISIT PTY LIMITED 40-50 Mark Anthony Drive, Dandenong South, VIC 3175, Australia

Phone: 1300 762 219

Email: consumer.care@arisit.com

NEW ZEALAND

ARISIT PTY LIMITED 1A Howe Street, Newton, Auckland 1145, New Zealand

Phone: (09) 306 1020

Email: sales@aristonappliances.co.nz

Warranty

By registering your ownership NOW, you qualify for Sirius's Total Peace of Mind Protection Plan.

Australian & New Zealand 3 / 6 Year Protection Plan*

This guarantees your appliance for a full 3 years parts and labour & 10 years for the off-board motors (covering manufacturing defects only) from the date of purchase, subject to the Terms and Conditions overleaf.

*3 Year warranty is extended to a 6 year period only when Sirius ducting is installed.



Your Warranty

Register now to qualify.

Terms & Conditions

These Terms and Conditions apply only to Sirius products distributed in Australia and New Zealand by Arisit Pty Limited.

- This warranty applies for a period of 3 vears on all products.
 - Warranty is extended to a 6 year period when Sirius ducting is installed.
 - All off-board motors are covered under warranty for a 10 year period for manufacturing defects only.
- Warranty applies for parts and labour in Australia and New Zealand, commencing from date of purchase.
- This warranty applies only to the original purchaser/hire purchaser of this appliance and cannot be assigned or transferred.
 Failure to produce documentary proof of the date of original acquisition by the original purchaser will result in a charge being levied for work done, labour and parts supplied.
- 4. This warranty does not apply to:
 - Consumable items such as filters, fuses, and light bulbs.
 - Damage to body work, paint work, glass, and plastic items (such as, but not limited to windows, covers, baskets, trays, worktops, door handles, control and kick panels.)
 - c) Corrosion & rust damage.

A fee may be charged following warranty claims where no fault is found with the appliance.

- 5. This warranty will not apply where:
 - The fault is caused by accident, misuse, an infestation of insect and or vermin, fire, flood or the use of products not approved by Arisit Pty Limited.
 - There has been a failure to comply with the manufacturer's operating and installation instructions.
 - Service, modification or repair has been carried out by anybody other than an approved Arisit Service Technician.
 - d) The appliance has been used/ installed anywhere other than a private dwelling, or where it has been used other than for domestic use.
 - e) The appliance is subject to a rental agreement.
- Any defective part that has been replaced becomes the property of Arisit Pty.
 Limited
- This warranty applies only to Sirius appliances purchased and installed in Australia and New Zealand.
- Loss of use of the appliance or consequential loss of any nature is not covered.
- A charge may be levied at the discretion of Arisit Pty Limited if the call is deemed unnecessary or if the cause of failure is traced to external sourced such as, but not limited to: blown fused, power failure, faulty installation, customer misuse or negligence, etc
- 10. Where the appliance, the subject of a warranty claim or repair, is used or installed more than TWENTY (20) kilometres from the nearest Arisit Service Division or Authorised Service Agent, the cost of delivery to the nearest Service

- Division or travel costs for a technician or Authorised Service Agent shall be for the account of the Purchaser. Where a built-in appliance is located or installed outside the Arisit Authorised Service Agent's normal service area, additional travel and labour costs shall be the account of the Purchaser.
- Service is offered during normal business hours only, also appliances to have a clear access in a serviceable area
- 12. Arisit Pty Limited shall not under any circumstances be responsible in terms of this warranty for the replacement or repair of any part of the equipment which may have been damaged in transit, during and after installation or imperfections after installation.
- Losses caused by act of God, failure to obtain spare parts, strikes or lockouts are not covered.
- 14. External off board motors must be installed a minimum of 2 metres and maximum of 7 metres away from the rangehood. This is for optimum sound and performance.
- 15. All motors must be accessible for servicing purposes and if installed above 2 metres from ground height additional cost will be incurred due to OH&S standards for service agents. Prior to install please check minimum & maximum installation details on the Sirius website, FAQ under support tab.
 - We reserve the right to amend any of the above without prior notice.
- 16. This warranty does not affect your statutory rights.

To register for your warranty, please visit: www.arisitwarranties.com.au/Customer-Registration.aspx or scan the QR code.



ARISIT PTY LIMITED (Australia)

ABN 23 091 515 294

40-50 Mark Anthony Drive Dandenong South VIC 3175

P: Sales & Service: 1300 762 219

F: Sales & Service: (03) 9768 0838

E: arisit@arisit.com

ARISIT PTY LIMITED (New Zealand)

1A Howe Street Newton, Auckland 1145 PO Box 68-140 Newton, Auckland 1145

P: (09) 306 1020 - Fax: (09) 302 0077

E: sales2@aristonappliances.co.nz

www.arisit.com

www.siriusbrand.com



when Sirius ducting is used.

Full replacement warranty on parts and labour. Check website for T&Cs.

10 year warranty on SEM motors.

Sirius Hoods and ducting products are only available from our select group of Sirius Professional Stockists nationwide. For the latest list of Sirius Stockists near you, please refer to www.siriusbrand.com

All efforts have been made to ensure that the information provided in this brochure is correct at the time of printing. Due to continuous product improvement and ongoing development, Sirius reserves the right to make changes to the products and technical data without prior notice. Some products appearing in this brochure may be for illustrative purposes only. Diagrams are indicative measures only. Prior to commencing cabinetry cutouts the operating/installation instructions accompanying the product must be referred to at www.siriusbrand.com