

OUTDOORS DELIGHTS

NOVECENTO GRILL OWNERS GUIDE

Do not discard. Contains important information about your product.



TROMEN

WARRANTY

TO VALIDATE THE WARRANTY, YOU MUST REGISTER ELECTRONICALLY THROUGH OUR WEBSITE WWW.TROMEN.COM WITHIN 10 DAYS AFTER THE PURCHASE OF THE EQUIPMENT, OTHERWISE, IT WILL BE VOID.

Warranty

TROMEN® hereby warrants to the ORIGINAL PURCHASER of this TROMEN® charcoal grill that it will be free from defects in both materials and workmanship, provided it is assembled and operated in accordance with the accompanying printed instructions, from your date of purchase and as follows:

Enamelled cooking grids 1 year

Painting 180 days

All other parts. 1 year

This limited warranty does not cover paint failure if the equipment is stored outdoors, as such an event will prematurely degrade the applied surface finish.

TROMEN® may require proof of date of purchase. THEREFORE, YOU SHOULD KEEP YOUR PURCHASE RECEIPT OR INVOICE AND THE EQUIPMENT REGISTRATION LABEL.

This Warranty is limited to the replacement of parts that are defective under normal use and service and which, when examined, indicate, to TROMEN®'s full satisfaction, that they are indeed defective. If TROMEN® confirms the defect and approves the claim, it will replace the part free of charge.

The change of the components, or the product will be made through the point of sale, where the equipment was purchased, which will coordinate its withdrawal with the client.

In the event that field inspections are required for the products within a period of 60 days from the date of purchase, these

will not have a cost for the client whenever the failure is caused by manufacturing problems; Otherwise, all expenses incurred will be paid by the user.

This limited warranty does not cover failure or operational issues due to accident, abuse, misuse, alteration, misuse, vandalism, improper installation, improper maintenance or service, or failure to perform normal and routine maintenance. This Limited Warranty does not cover deterioration or damage caused by inclement-type conditions such as hail, hurricanes, earthquakes or floods nor discoloration due to exposure to chemical substances either by direct contact or by the same contained in the atmosphere.

Due to the intensity of fire to which the stoker and surfaces close to it will be exposed, the warranty on the painting in the sectors indicated in the figure on page 2 of this manual is excluded).-

There are no express warranties other than those stated herein, and any implied warranties of merchantability and fitness for use are limited in duration to the time covered by this express written Limited Warranty.

TROMEN® is not responsible for any special, indirect, consequential, property damage, personal, third party or any other incidental damage.

TROMEN® does not authorize any person or company to assume on its behalf any obligation or liability in connection with the sale, installation, use, removal, return or replacement of its equipment, and no such representation shall be binding on TROMEN®.

REPORT ANY PROBLEM:

SERVICIOTECNICO@TROMEN.COM

The following label identifies your new product, remember to keep it for future reference about it.

Please, place here your
product label

SECURITY INFORMATION










FAILURE TO OBSERVE DANGERS, WARNINGS AND CAUTIONS CONTAINED IN THIS OWNER'S MANUAL MAY RESULT IN SERIOUS BODILY INJURY OR DEATH, FIRE OR FIRE CAUSING DAMAGE



The SAFETY SYMBOLS () will alert you about important information.



Please read all safety information in this Owner's Guide before lighting the grill.

-  Do not use it inside the house! This Fogon should only be used outdoors. If it is used inside the house, it will accumulate fumes and gases that can cause serious poisoning or death, fire or damage to the house.
-  Never leave babies, children or pets unattended near a burning or hot stove.
-  Do not try to move the hot Firebox. Wait for the Firebox to cool down before moving it.
-  Never add lighter fluid or any type of flammable fuel, or charcoal soaked with it, to hot or warm charcoal.
-  You must proceed with care when operating your stove. It will be hot while it is cooking and should never be left unattended while in use.
-  Do not remove the ashes until the charcoal is fully burned and completely out and the Firebox is cool.
-  Keep the Firebox on a safe, level surface at all times, away from combustible materials.
-  Do not dispose of hot coals where they could be stepped on or present a fire hazard.
-  Waiting for them to cool down is advisable.

SECURITY INFORMATION

- ⚠ Do not proceed to save the stove until the ashes and coals are completely extinguished.
- ⚠ Using abrasive cleaners on the cooking grates or the grill itself will damage the finish of the surfaces.
- ⚠ The Fire Pit needs to be clean regularly.



SAFETY TIPS FOR HANDLING FOOD


- ⚠ Wash your hands well with hot, soapy water before starting to prepare any dish and after handling fresh meat, poultry, or fish.
- ⚠ Do not defrost meat, fish, or poultry at room temperature or on the kitchen counter. Thaw food in the refrigerator.
- ⚠ Never put cooked food in the same container in which you put raw food.
- ⚠ Wash with water and detergent all the containers and kitchen utensils that have been in contact with raw meat or fish and rinse.

Security Notes:

PRODUCT SETUP

STEP 1

Locate the side faces then with the TROMEN key fix the sides to start assembling the equipment

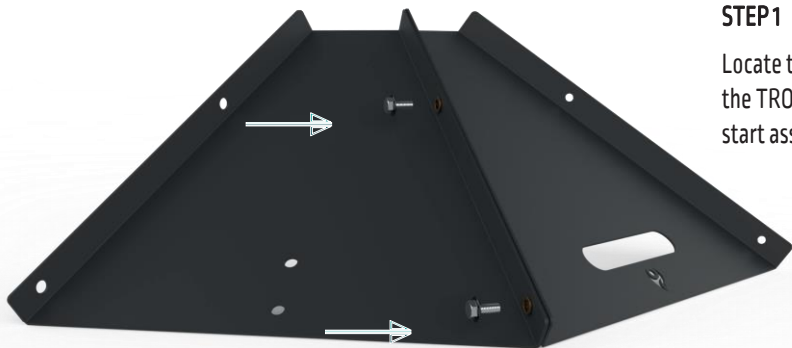

STEP 2

Continue linking sides to form the hexagon;
Remember to bolt the legs
at an equidistant distance of $[120^\circ]$
The bolts used to fix the sides are
the same as those used to fix the legs



STEP 3

Attach the grill support
and the Plancheta using
the screws found in the installation kit



STEP 4

Repeat the same procedure but
now with the grill.

STEP 5

Position the griddle and the grill
on the sides of the stove





STEP 6

Place the base inside de stove

STEP 7

Fix the cross with the screws provided in the installation kit.

STEP 8

Adjust the screw to avoid the pivot of the cross (use the Tromen key)



NOTE:

The Novecento Grill is designed to be used at two different heights.

If you want to change the size you must bolt the legs and locate them in the following diameter



EXPLODED VIEW

General Recommendations



The Stove leaves the factory with pre-cured paint.

It is possible that when the stove is started up for the first time it gives off a smell of burnt paint, this is because the paint is cured in use, this event is normal and will not be repeated on subsequent starts.

During this final curing process, the surface of the curing should not be touched as this could damage the paint.



Do not burn plastics derived from petroleum.



Do not get wet, in contact with moisture, the equipment will rust.



Choose a dry place for storage protecting it from inclement weather and climatic factors (rain, dust, etc.)

WWW.TROMEN.NZ

serviciotecnico@tromen.com

DENOMINATION	QUANTITY	CHECK
CNJ CROSS	1	
SIDE PANEL WITH HANDLE	2	
SIDE PANEL	4	
BASE	1	
LEGS	3	
GRILL AND GRIDDLE SUPPORT	4	
CNJ CROSS SUPPORT	1	
ENAMELDED GRILL	1	
ENAMELDED GRIDDLE	1	
5/16 HEXAGON BOLT	22	
5/16 FLAT WASHER	22	
TROMEN KEY	1	
CHECK DONE BY:		