

GOURMET LINE

GLAMPING PORTABLE GRILL
Owner's Manual

Do not discard. There's important information about your product



WARRANTY

TO VALIDATE THE WARRANTY, YOU MUST REGISTER ELECTRONICALLY THROUGH OUR WEBSITE WWW.TROMEN.COM WITHIN 10 DAYS AFTER THE PURCHASE OF THE EQUIPMENT, OTHERWISE, IT WILL BE VOID.

WARRANTY

TROMEN® hereby guarantees to the BUYER ORIGINAL of this TROMEN® charcoal grill that it will be free of defects in both materials and manufacturing, as long as it is assembled and operated according to the printed instructions that accompany it, from the date of purchase and according to the following :

crazed grill. 1 year

This limited warranty does not cover paint failure if the equipment is stored outdoors, as such event will prematurely degrade the applied surface finish.

TROMEN® may require proof of date of purchase. THEREFORE, YOU SHOULD KEEP YOUR PURCHASE RECEIPT OR INVOICE AND THE EQUIPMENT REGISTRATION LABEL.

This Warranty is limited to the replacement of parts that are defective under normal use and service and which, when examined, indicate, to TROMEN®'s full satisfaction, that they are indeed defective. If TROMEN® confirms the defect and approves the claim, it will replace the part free of charge.

The change of the components, or the product will be made through the point of sale, where the equipment was purchased, which will coordinate its withdrawal with the client.

In the event that field inspections are required for the products within a period of 60 days from the date of purchase, these are not

they will have a cost for the client whenever the failure is caused by manufacturing problems; Otherwise, all expenses incurred will be borne by the user.

This limited warranty does not cover failure or operational difficulties due to accident, abuse, misuse, alteration, misuse, vandalism, improper installation, improper maintenance or service, or failure to perform normal and routine maintenance. This Limited Warranty does not cover deterioration or damage due to inclement conditions such as hail, hurricanes, earthquakes or flooding, nor does it cover discoloration due to exposure to chemicals either by direct contact or by chemicals contained in the atmosphere.

Due to the intensity of fire to which the stoker and surfaces close to it will be exposed, the warranty on the painting in the sectors indicated in the figure on page 2 of this manual is excluded)-

There are no express warranties other than those stated herein, and any implied warranties of merchantability and fitness for use are limited in duration to the coverage time of this express written Limited Warranty.

 
TROMEN® is not responsible for any special, indirect, consequential, property damage, personal, third party or any other incidental damage.

TROMEN® does not authorize any person or company to assume on its behalf any obligation or liability in connection with the sale, installation, use, removal, return or replacement of its equipment, and no such representation shall be binding on TROMEN®

REPORT ANY DEFECTS TO:

SERVICIOTECNICO@TROMEN.COM


The following label identifies your new product, remember to keep it for future reference about it.

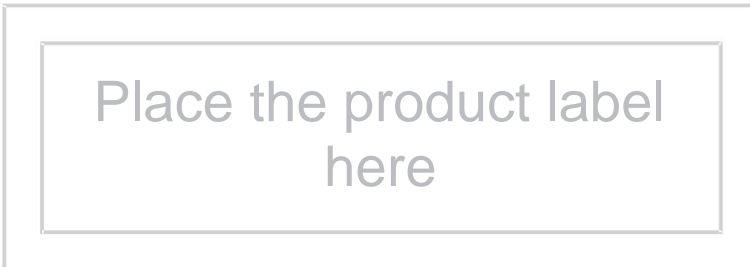

SAFETY INFORMATION









**IGNORING DANGER NOTICES,
WARNINGS AND CAUTIONS CONTAINED IN THIS MANUAL
OF THE OWNER MAY CAUSE BODILY INJURY
SERIOUS OR DEATH, FIRE OR FIRE THAT CAUSES DAMAGE**



SAFETY SYMBOLS () will alert you to important information



Please read all safety information in this Owner's Guide before lighting your grill.

-  Do not use it inside the house! This Grill is for outdoor use only. If it is used inside the house, it will accumulate fumes and gases that can cause serious poisoning or death, fire or damage to the house.
-  Never leave babies, children, or pets unattended near a hot or burning grill.
-  Do not try to move the Hot Grill. Wait for the Grill to cool before moving it.
-  Never add lighter fluid or any type of flammable fuel, or charcoal soaked with it, to hot or warm charcoal.
-  You must proceed with care when operating your Grill. It will be hot while it is cooking and should never be left unattended while in use.
-  Do not remove the ashes until the charcoal is completely burned off and the Grill is completely off and the Grill is cool.
-  Keep Grill on a safe, level surface at all times, away from combustible materials.
-  Do not dispose of hot coals where they could be stepped on or present a fire hazard. Wait for them to cool down.



STEP 1

Locate the two ribs and rotate them so that they fit with the side pieces

 
 


Note: Painted parts having direct contact with fire can cause wear or damage to the surface finish

STEP 2

Link internal sides by means of the openwork, first the piece is inserted in the upper part and then it slides to fit in the lower part.



Repeat the operation with the other side.

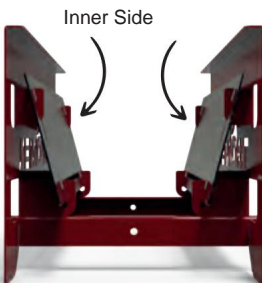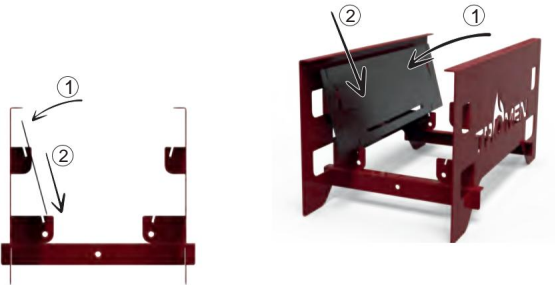

STEP 3

Place the Base inside

  and then fit it into the lower slots of the internal sides.

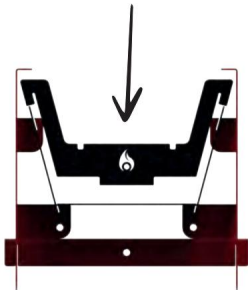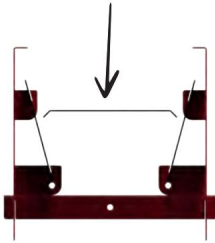

STEP 4

Place the Fronts at the ends of the internal sides, then fit them into the slots



STEP 5

Finally place the grill on the sides

