

## GAN356 i carry 使用说明书

#### 感谢选择 GAN 智能魔方

#### 使用前必读

- 1. 本产品内置智能动态捕捉系统跟踪魔方动态,魔方各面的位置不可 随意调换。
- 2. 调整弹力时请勿左右晃动轴心,以免损坏内部电路。
- 3. 白色面红灯闪烁代表电量低,请及时更换电池。

\*使用产品前请仔细阅读并妥善保存

#### 产品配置











i carry 智能魔方 x1 弹簧组件 x2 弹粒螺母 x2 魔方收纳袋 x1

## 基本参数

产品型号	GAN356 i carry	产品尺寸	56×56×56mm
产品重量	约 76g	电池类型	CR1632 纽扣电池
续航时长	约 280h*	连接方式	无线连接
设备要求	支持 IOS 9.0 及以上、Android 4.4 及以上版本的设备		

\*实验室测试数据,实际续航时长视使用而定。

#### 上手步骤

注意事项

即可实时跟踪魔方状态。

牙, 进入休眠状态。

点击"解除绑定"、


使用限制

连接 APP

1. 下载安装 APP "Cube Station"



2. 转动魔方任意面唤醒魔方(即白色面白灯闪烁10秒)。 \*唤醒后可连接 APP 查看电量。

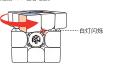

3. 打开手机蓝牙及 APP, 根据 APP 提示连接魔方。

\*智能产品可能会因软件版本迭代而产生功能差异,具体以实际产品为准。

• 每次连接前,请确保设备电量充足(即唤醒魔方后白色面无红灯闪烁)。

• 打开 "Cube Station" APP,根据 APP 内提示连接魔方。连接后,APP

• 魔方连接 APP 后,如 10 分钟内对两者无任何操作,魔方将自动断开蓝

魔方唤醒状态下,顺时针转动橙色面 5 圈 (即转动 20 步),或在 APP 上

• 如魔方已被某台设备绑定,则需解除绑定后才能被另一台设备连接。

## 电池更换

白色面红灯闪烁代表电池电量低,闪烁10秒后魔方将自动休眠, 为免数据丢失,请及时更换电池。

#### 更换步骤如下:

- . 拆下黄色面,拧出螺丝取下电池盖。
- 2. 掀开电池拉片,往外拉动带出电池,塞入新电池 (负极朝上),此时白色面白灯闪烁。
- 3. 盖好电池拉片,拧紧电池盖,装好魔方。








拉出电池拉片

\*如果长时间不使用产品,请在取出电池后置于阴凉干燥处保存。

## 弹力调试

- 1. 掀开中心盖。
- 2. 取出弹粒:按压弹粒到底,旋转轴端卡针90°,弹粒弹出,缓慢松手, 防止弹簧弹飞。
- 3. 更换弹粒: 放入新弹粒, 重复步骤 2, 松手完成更换。
- 4. 盖上中心盖,依次更换剩余5面。

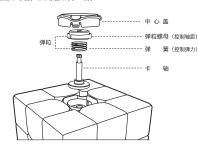

#### 弹力参照表







軸距





警告: 请勿随意调换各面中心盖, 以免影响 APP 识别魔方状态; 调试弹力时请勿左右晃 动轴心,以免损坏内部电路;调整弹力后需在 APP 上重置魔方。









#### • 智能魔方为精密电子产品,请勿拆解内核球轴,否则可能导致产品损坏。 •本产品不能遭受冲击、遇水或置于高于60°C的环境。

- 本产品内含小零件,请勿给3岁以下儿童使用。
- 请严格按照说明书提示使用产品,避免因操作不当导致设备损坏或人身 伤害。

## 故障排除

- 1. APP 无法检测到魔方?
- ① 请确认魔方电量充足。
- ② 请确认魔方处于唤醒状态。在未连接 APP 状态下, 被唤醒的魔方 80 秒 后将自动进入休眠状态。
- ③ 如魔方已被其他设备连接,则需断开后才能被另一台设备检测到。
- ④ 安卓设备请确认定位功能开启, 并已授予 APP 定位权限。
- 2. APP 显示的魔方状态不同步?
- ① 请确认魔方各面的位置正确(参看"电池更换视频")。
- ② 请通过 APP 的重置功能重置魔方状态。
- ③ 魔方电量低时,会自动休眠导致魔方状态无法同步,请尽快更换电池。

获取更多技术支持,请联系 support@gancube.com





关注 GAN 微信公众号

# **English**



Thank you for choosing the GAN356 i carry Smart Cube

#### Read carefully before getting started

- 1. The product contains a built-in motion tracking system. Sides of the cube are NOT alterable.
- 2. DO NOT bend the core when adjusting tension, to prevent damage of the internal electrics.
- 3. Blinking red light in the white side indicates low battery. Please change battery in time.

#### **ACCESSORIES**











#### **SPECIFICATIONS**

Model	GAN356 i carry	Product size	56×56×56mm
Product weight	≈76g	Battery type	CR1632 button cell
Battery life	About 280h*	Connection	Wireless
Device requirement	nt IOS 9.0 Android 4.4 or above		

\* Lab test data. Actual battery life subject to actual usage.

#### **GETTING STARTED**

 Download and install APP "Cube Station".



- 2. Turn any side of the GAN356 i carry to awake it (The white light in the white side will blink for 10 seconds in case of successful
- \* Battery level will show in APP once connected.



3. Enable your smart phone's Bluetooth function and open the APP Connect the cube per instructions in the APP.

\*Smart products may have functional differences due to software version upgrade. Specific functions depend on the actual products.

#### CHANGING BATTERY

The blinking red light in the white side indicates low battery and the cube will shut down automatically in 10 seconds. Please change the battery in time to avoid data loss. Instruction of changing battery:

- . Disassemble the vellow side; Unscrew the screws and remove the battery lid.
- Pull out the battery compartment and remove the battery; Load in a new battery with the negative pole facing up. The white light in the white side will blink.
- Push back the battery compartment and screw the lid back in position. Reassemble the cube.









## \* Keep the cube in dry and cool conditions after removing its battery if not in use.

#### MUST KNOWS

#### Connecting to APP

- · Fully charge the cube before connecting (No blinking red light in
- Install "Cube Station" APP and connect your cube per instructions in the APP. Once connected, the APP will be able to track GAN356 i carry's motion.
- The cube will automatically turn off its Bluetooth and enter sleep mode after being set aside for 10 minutes.
- Ensure the cube has not been bound already to another device. Rotating the orange side clockwise for 5 rounds (ie making turn for 20 times) or using "Unbind" option in the APP can unbind the cube.

#### Usage restrictions

- The smart cube contains electronic components. To prevent damage, DO NOT dismantle the core.
- DO NOT crash the product. Keep away from water or high temperature(≥60°C). · Product contains small parts, NOT suitable for children under
- 36 months.
- Strictly follow manual to avoid product damage or bodily harm

## TROUBLE-SHOOTING

- 1. Failure of detecting the cube by APP? ① Ensure the cube has been fully charged.
- 2 Ensure the cube has been awakened. Once disconnected from the APP, the cube will shut down automatically in 80
- 3 Ensure the cube has not been connected already by another
- (4) Android users please ensure location access has been authorized
- 2. Cube position not synchronized in the APP?
- ① Ensure sides have not been altered from ex-factory positions. (Refer to the video instruction of "CHANGING BATTERY")
- 2 Reset the cube via the "Reset Cube" functions in the APP.
- 3 The cube will shut down when battery is low. Change the battery


More info & supports: support@gancube.com

Follow GANCUBE on Instagram for more speedcubing stuff



#### TENSION ADJUSTMENT

- 1. Open the center cap.
- 2. Press the tension nut to the bottom and turn the core foot 90° to the release position, then take out the tension nut. Release slowly to prevent the spring from popping out.
- 3. Swap in the new tension nut and set it up properly (reverse step 2 operations).
- Repeat on other sides.

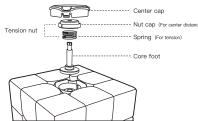

## Tension choices






Center Distance







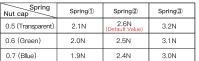

Warning: DO NOT after the positions of center caps, this will lead to synchronization internal electrics. Resetting the cube is required after readjusting tension.