ROVSUN

Air cooler User manual



 
Made in china

- Thank you for purchasing our air cooler.
- · Each unit has been manufactured to ensure safety and reliability.
- · Before first use, read the instructions carefully and keep it for further reference.

PERFORMANCE PARAMETERS

Model	Rating Power	Power	Specification
721R	110V~60Hz	80W	Cooling only

KNOW YOUR AIR COOLER



FUNCTIONS

 Principle of Cooling: Water is took from the water tank by pump to the top, then the water drops into paper evaporator. When the water in paper evaporator evaporates to water vapor, the air is cooled. People will feel cool wind when the cool air is delivered by fan.

1. Place your air cooler at least 10cm away

2. Always ensure that there is another oper

ery essential for fresh air cooling by your air

Plug in the mains cord of your air cooler to

a wall socket.Ensure the plug is properly

- Electronics control: safe and durable, attractive appearance.
- Adjustable speed and fan type: have three speeds and fan types, blow at a wide angle.
- Cooling: Through air evaporating, cut down the air temperature and raise relative humidity.
- Deliver wind at a wide angle: swing the blades automatically, deliver wind at horizontal wide angle. Swing the blades transversely manually, select the direction discretionary

ASSEMBLING AND WATERING

- 1. Assembling castors: put the appliance on a flat surface, take out the wrench from foam box, then
- 2. Watering: pull 1/3 water tank, then add clean water Attention:

 - b. The level of water tank should not over "MAX" scale at any time, when humidifying, the total level of water tank should not below "MIN" scale.
 - c. Put ice or frozen ice box to the water tank if you want to strengthen the efficiency of cooling. But the total level of water tank should not over "MAX" scale.

OPERATION

ON/OFF key: after it is connected to the power supply, the cooling fan will enter standby state knob "1,2,3" the machine will start to work; knob "off" to turn off the fan. ·Wind speed key: Low speed (1) -Mid speed (2) -High speed (3) ·OSC key: press swing key, the wind can automatically swing left and right ·Cold air key: turn on this switch to start cool air function,

IMPORTANT: Please be sure there is enough water in the water tank before press this key.

·Timer:Timing knob. from Thour to 12hours

·Breeze wind

THE USE OF ICE BOX

The ice box has a particular feature of keeping cool, it can absorb heat and let the water temperature below the environmental temperature.

Using methods:

- a. add water to the ice box (not over max level) and put it into the refrigerator to make sure that it iced absolutely
- Open the door, put the frozen ice box into the water tank.
- c. There have four ice boxes, can be used circularly.

CAUTION

- 1. Use as per the rating voltage.
- Do not repair or remake the appliance by yourself, it should be repaired by the repairmen.
- 3. Do not operate the appliance with wet hands, in order to avoid damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 5. When the appliance is not in use, switch off and unplug it.
- Do not insert foreign things to air outlets and inlets, in order to avoid damage.
- 7. Do not use the appliance near explosive and combustible gas. Avoid long-term direct solar radiation.
- Use the appliance only on a flat surface.
- 9. Please avoid exposing to direct sunlight or rain when using outdoors
- 10. The level of water tank should not over "MAX" scale at any time, when humidifying, the total level of water tank should not below "MIN" scale.
- 11. After adding water to the water tank, do not title or knock over it when you put or move. If you want to move inlease push slowly from the side, in order to avoid spilling
- 12. Do not turn over the appliance. If it is toppled over and there are some water in the body, should
- unplug the power supply first. Then send it to the repair department or after-sales service and overhaul the appliance.
- 13. Do not cover the air vent
- 14. Clean the appearance with a lightly damp cloth. Do not use any type of detergents or solutions. Do not rinse the appliance.
- 15. Do not make air outlets and inlets near the wall or curtain.
- 16. Do not knock or shake the body when using, otherwise it may cause stop automatically.
- 17. The water in tank will easily metamorphose and has odor in summer, please renew the water

- 18. This appliance is not intended for use by persons (including children) with reduced physical. sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their
- Children should be supervised to ensure that they do not play with the appliance 20. To avoid the risk caused by instability of unit, you must fix the unit firmly according to manual book
- 21. Fan for temperate climates only.
- 22. Should it be necessary to move the unit after the water has been added, roll gently to the required position and activate the bracket the castors.
- 23. The power cord is with "Y" type connection and it must be changed by professional

CLEANING AND MAINTENANCE

WARNING: Ensure that the fan is switched off from the supply mains before removing the air filter

- Clean the air filter screen
- Cut off the power supply, pull the handle of air filter screen, remove it from appliance. Clean the air filter screen with neutral detergent and banister brush, then clean it with clear water. Finally, re-install to the appliance.
- 2. Clean the wet pad
- Cut off the power supply, take down the air filter screen, then draw the wet pad from support. Clean the wet pad with neutral detergent and banister brush, then clean it with clear water. Finally, re-install to the appliance.
- Attention: the wet pad must be installed horizontally, in order to avoid leaking.
- Cut off the power supply, open the door, take out the water tank, clean it with neutral detergent, and wash it with clear water, then re-install to the appliance.
- Clean the shell
- Clean with neutral detergent and soft cloth.
- Attention: cut off the power supply when clean the appliance as there have a high pressure in the body. Do not leave any water on the surface of control panel.

3

MALEUNCTION AND MAINTENANCE

Malfunction	Causes	Solution	
No action	Power off or poor connection. Not press the "ON" key	Plug the power cord and make sure it connects well.	
	on the control panel.	Press the "ON" key on the control panel.	
Poor effect of dedusting	Block the air filter screen with dust.	Purify the air filter screen. Remove foreign things	
	2. Block the air inlet with	from the air inlet.	

Renair the appliance under the situation as follows:

- Abnormal action or no action. it is invalid by the above approach.
- 2. Abnormal action caused by ingress of water or foreign things.

